

GENERAL INFORMATION

INTRODUCTION . . .

This Master Parts Catalog F-74080 contains replacement parts information for the model years 1974 thru 1980.

Before ordering replacement parts, you must first identify the vehicle by its model year and series. Information to assist you is located on later pages.

For your convenience, this parts catalog has been issued in two sections. Section one consists of text copy, specific illustrations listing part numbers, Body Miscellaneous, and PAKS. Section two, the Illustration Supplement, consists of general illustrations and is under a separate cover. It has been assigned form number F-75080.

The two sections have been further subdivided into subsections called groups. These groups list replacement parts for particular areas of the car. An explanation of the make-up of these catalog groups follow.

Main units of the car are identified by the number preceding the decimal in any group number. Listed below are all the group numbers and group names as shown in the catalog.

NAME	GROUP	NAME	GROUP
Accessories	15	Glass	25
Air Conditioning	13	Grille	2
Automatic Transmission	16	Hardware	23
Axle	9	Heater	13
Body Hardware	27	Hood	12
Body Miscellaneous	30	Hydramatic Transmission	6
Body Mouldings	26	Instrument Panel	22
Body Sheet Metal	20	Instruments	3
Brakes	8	Manual Transmission	6
Bumpers	12	Metal Enclosures	28
Channels	25	Pick-Up Box	31
Chassis Miscellaneous	14	Power Steering	10
Clutch	5	Propeller Shafts	9
Cooling	2	Rear Suspension	11
Cowl Vent	22	Road Springs	11
Doors	23	Seats	29
Electrical	3	Shifting	7
Emission	4	Shocks	11
Engine	1	Soft Trim	29
Exhaust	4	Special Equipment	40
Fenders	12	Steering Gear	10
Folding Tops	28	Threespeed Transmission	6
Fourspeed Transmission	6	Transfer Case	18
Frames	11	Transmission	6, 16
Front Suspension	10	Wheels	8
Fuel	4	Windshield Wiper	22

Individual parts are assigned a group number. The first number identifies the main unit. Following the decimal is the subgroup number under which all parts of the same name and function are listed. *Example:* Group 1.059 HEAD, Cylinder . . . '1.' indicates that it is an engine part, '059' is the subgroup number where part numbers of cylinder heads can be located.

GENERAL INFORMATION

The suffix, *example: '-10'*, should not be interpreted as being part of the group number. It merely serves as a reference number to tie in the Alphabetical Index and the Illustrations Supplement callouts with the text section group numbers.

Due to their nature and use, many parts may appear in more than one group in this catalog. Each of these parts is assigned an identifying primary group number. This is the number under which the part is priced in the American Motors Parts and Distribution Services Division Jeep Price List, listed on Parts Storage Location Labels, and stored in American Motors Parts and Distribution Services Division Warehouses and Dealerships. Parts should always be ordered by their identifying primary group number, part number, and noun name.

LOCATING PART NUMBERS . . .

GROUP 26 -

The driver's side on Left Hand Drive is the left hand side of the vehicle; on Right Hand Drive it is the right hand side of the vehicle. This is the governing factor in determining whether a part is left or right hand.

Body Mouldings Production Installed . . . Refer to the Special Information and Illustrations Index at the start of Group 26. Select the illustration title which would most logically include the part you require. Turn to the page indicated by the index and visually locate the part in question. The part number you seek will be found adjacent to the part.

Body Mouldings Special Dealer Treatment . . . Ornamentation changes by dealers, to satisfy individual owner requests have not been cataloged. The dealer assumes the responsibility for correctness of replacement parts.

BALANCE OF GROUPS -

First locate the group number of the part required. Any one of the following three methods can be used.

Method 1: Refer to the Illustrations Index located at the start of the Illustration Supplement F-75080. Select the illustration title which would most logically include the part you require. Turn to the page indicated by the index and visually locate the part in question. The group number you seek will be found adjacent to the part. Locate that group number in the text section.

Method 2: If the '*Noun*' name of the part you seek is known, refer to the Alphabetical Index located in the front of the text section. The group number you seek will be found adjacent to the parts noun name. Locate that group number in the text section.

Method 3: If the group number of the part you seek is already known, locate that group number in the text section.

Next, interpret the information under the group number as follows:

YEAR -

This column will indicate the year(s) to which a part applies. When a slash (/) is shown following a year it indicates the model year the part was first used, and that it is in use through the current year. For example:

75 . . . Indicates the part was used for 75 model year only.

75/76 . . . Indicates the part was used for 75 and 76 model years.

74/ . . . Indicates the part was used for 74 thru 80 model years.

GENERAL INFORMATION

On occasion, instead of the above information, the year column will carry the trim number applicable to the part. (*For the location of the plate bearing the vehicle's applicable trim number, refer to the Vehicle Identification section following.*)

MODEL -

This column carries pertinent information relative to the specific *model, series, option, size, type, etc.* applicable to the part listed. Abbreviations used can be clarified by referring to the Abbreviations and Codes Index. The absence of a listing in this column indicates the part is applicable to every car so equipped, built for the model year shown in the 'Year' column. Of special importance are those listings which include an asterisk, *i.e.* (* 11-1). This is meant to refer the reader to the notes appearing on the first page of that respective group. These notes usually pertain to a running change which may have occurred in the parts used to manufacture a given model. This first or '*Special Information*' page of each group carries special, pertinent information relative to selecting correct parts from those listed within the group.

PAKS -

If the part in question happens to be a *Package, Assembly, Kit, or Set*, you will in many instances find an illustration reference number in this column. Locate that typical illustration in the PAKS section found near the rear of the catalog, and you can visually interpret the content of the part number.

PRIMARY GROUP NUMBER -

If a part has a primary group number which is different from the one shown in the heading of that group, its correct primary group number will be shown in this column. This is done as a service to those dealers who bin their parts by the primary group number.

PER CAR -

This column will list the number of pieces of a part required for the specific application listed, not the total number of this part which may be used on the entire car.

PART NUMBER -

The number listed in this column is the number by which the part you require must be ordered. Since certain automotive parts are readily available locally, American Motors does not offer them for service replacement. The presence of a NA adjacent to the part number indicates that it is not available from American Motors.

ABBREVIATIONS INDEX . . .

The Abbreviations Index is located after the Alphabetical Index. Definitions to descriptive information abbreviated in the catalog are defined in the index. For example:

WPS With Power Steering

ACCESSORIES . . .

Many parts which were previously listed under the Jeep general heading '*Special Equipment and Accessories - Group 35*' have now been cataloged with parts more closely related to their function. For example: Exhaust Emission is now located in Group 1.000 Engine, and Group 4.000 Fuel - Exhaust. Heater - Defroster is located in Group 13.000 Heater - Air Conditioning. Conventional accessories such as Radios, Antennas, Outside Rear View Mirrors, etc. will be listed in separate Accessories Catalog and Price List.

GENERAL INFORMATION

ALPHABETICAL INDEX . . .

Alphabetical listings followed by a double digit group number indicate that the part may be located in the illustrated text section of the group indicated. For example:

MOULDING, Rear Window Finish..... 26

Alphabetical listings followed by a group number indicate that the part may be located in the text copy section of the group indicated. For example:

PUMP ASSEMBLY, Water..... 2.080-1

ATTACHING PARTS . . .

Attaching Parts are not listed in the Alphabetical Index. However, the purpose for which the parts are required is shown near the group listing under the item with which they are used or attached. For primary group number reference, refer to *PRIMARY GROUP NUMBER* information.

ILLUSTRATION SUPPLEMENT . . .

ILLUSTRATIONS INDEX -

This index is located at the front of the Illustration Supplement. It has been subdivided into subsections called groups and alphabetized within each group. To use this index, select the illustration title which would most logically describe the part you require. Turn to the page indicated by index and visually locate the part in question.

ILLUSTRATIONS -

The group number will be found adjacent to the part. Locate this group number in the text section of the catalog. If a PO precedes the group number on an illustration, it indicates that the part as illustrated is available *ONLY* as part of an assembly.

MR - MODIFICATION OF PARTS . . .

At various times one service part number is supplied which when modified by the dealer by cutting, drilling, bending, etc. serves as a replacement for similar parts. Parts supplied in this manner are identified by the letters MR in the code column or in the group heading.

NA - PARTS NOT AVAILABLE FOR SERVICE . . .

Part numbers are listed in this catalog even though they are not available for service. These part numbers are listed for reference only and are identified by the letters NA in the code column.

NC - PART SUPPLIED IN NEUTRAL COLOR . . .

At various times one service part number is supplied in a neutral color, which when painted to match by the dealer, serves as a replacement for similar parts. Parts supplied in this manner are identified by the letters NC in the code column or in the group heading.

PARTS NOT LISTED IN THIS CATALOG . . .

Parts not listed in this catalog for the specific vehicles that this catalog is issued for, are to be considered as not supplied for service by the Parts and Distribution Services Division.

GENERAL INFORMATION

PRICES . . .

Suggested prices for all parts listed in this catalog can be found in separate Jeep Parts Price List W-1164.

PRIME PAINTING . . .

Service replacement sheet metal parts are always serviced in prime and certain other categories of parts are serviced in one color only. They are not available from American Motors in finished colors, therefore, the dealer must repaint to color desired.

SUBSTITUTED PARTS . . .

If a part has been substituted, the Price List will indicate the replacing part numbers; or replacement parts, if available, will be supplied when the original part number is ordered even though the Price List does not indicate the change. If the substitution information was available for inclusion in the parts catalog at time of publication, this substitution information will then be listed adjacent to the original part number. However, if it is more practical for an individual to obtain particulars from the Price List, the words (Ref. Pr. List) have been printed in place of substituting part numbers.

TRIM NUMBER . . .

Trim items are available by part number. By choosing the applicable description, color, or trim number and reading across to the specific model column you will obtain the part number of the required item. Trim numbers having an additional letter suffix such as B, C, D, etc., are used only when the part is peculiar to a particular trim number.

Trim numbers listed without a letter suffix indicate the part applies to all models having a part number entered in its specific model column.

Cloth and vinyl materials used in fabricating trim assemblies, not part of a dielectric insert, are available in bulk form. When ordering, please specify the exact size desired since these materials sold only by the running yard vary in widths of approximately 54 inches to 64 inches.


SPECIAL BUILT VEHICLES . . .

SPECIAL SALES ORDER NO. -

Vehicle equipment deviations by dealers, to satisfy individual owner requests, have not been cataloged. However, to assist in ordering replacement parts, for vehicles built by production with other than Standard Equipment, an identification plate is attached to the dash panel underneath the hood. On the majority of vehicles requiring this plate, only a minority of parts are peculiar. Usually, a dealer will recognize which parts are nonstandard on a particular series and model.

GENERAL INFORMATION

When ordering nonstandard replacement parts for a vehicle having the aforementioned identification plate (See Illustration), please **FURNISH THE FULL AND COMPLETE SPECIAL SALES ORDER NO. AS WELL AS THE VEHICLE SERIAL NUMBER and ENGINE BUILD CODE NUMBER**, and a description of the parts required to the **NATIONAL PARTS DISTRIBUTION CENTER ON FORM NO. F-259 MR3.**

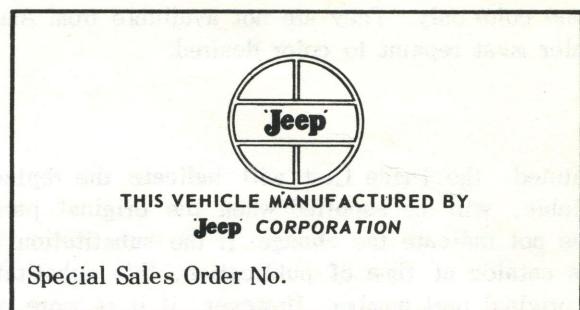

OR

Sales Order No.	SSR & O No.	Trim Option No.
*	Paint Option No.	Vehicle Identification (VIN) Number
Jeep Model No.		


*Disregard - for factory use only

WELDING ASSEMBLIES

A Welding Assembly consists of two or more metal parts, welded together at the plant in a fixture for accuracy. Parts for assemblies which cannot be welded to advantage in the field, are not listed except in occasional instances where the cost of a welding assembly would be excessive.

GENERAL INFORMATION

VEHICLE IDENTIFICATION

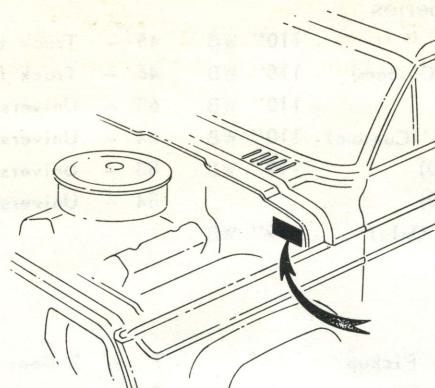

This 13 digit number can be found stamped on the bottom line of the metal plate which is affixed to the upper left corner of the firewall under the hood. Beginning with SIX DIGIT Serial Number 100000 the "Alphabetical" GVW rating code is replaced by the actual "Numerical" weight designation.

1974 V.I.N.

PRIOR TO SIX DIGIT SERIAL NO. 100000

J	4	A	1	5	4	C	N	O	0	0	0	1
MFG. CODE	MODEL YEAR	TRANS- MISSION	MODEL	BODY STYLE	GVW RATING	ENGINE						SEQUENTIAL SERIAL NO.

BEGINNING WITH SIX DIGIT SERIAL NO. 100000

J	4	A	1	5	4	N	1	0	0	0	0	0
MFG. CODE	MODEL YEAR	TRANS- MISSION	MODEL	BODY STYLE	ENGINE							SEQUENTIAL SERIAL NO.

This number is decoded as follows:

FIRST DIGIT / Manufacturer

J - Jeep Corporation

SECOND DIGIT / Model Year

4 - 1974

THIRD DIGIT / Plant - Transmission - Drive

A - Toledo - Hydramatic - LHD

K - CKD - 3-Speed - RHD

B - CKD - Hydramatic - LHD

M - Toledo - 4-Speed - LHD

F - Toledo - 3-Speed - LHD

N - Toledo - 4-Speed - RHD

G - Toledo - 3-Speed - RHD

O - CKD - 4-Speed - LHD

J - CKD - 3-Speed - LHD

P - CKD - 4-Speed - RHD

GENERAL INFORMATION

FOURTH and FIFTH DIGIT / Series

14 - Wagoneer	- 110" WB	45 - Truck (J-10)	- 131" WB
15 - Wagoneer (Custom)	- 110" WB	46 - Truck (J-20)	- 131" WB
16 - Cherokee	- 110" WB	63 - Universal	- 84" WB (CKD)
17 - Cherokee 'S' (Custom)	- 110" WB	64 - Universal	- 104" WB (CKD)
25 - Truck (J-10)	- 119" WB	83 - Universal	- 84" WB
26 - Truck (J-10)		84 - Universal	- 104" WB
	(Export Only)	- 119" WB	

SIXTH DIGIT / Body Style

1 - Thriftside - Pickup	7 - 2 Door Wagon
2 - Townside - Pickup	8 - Stripped Chassis
4 - 4 Door Wagon	F - Full Cab
5 - Open Body	H - Half Cab
6 - Cab and Chassis	

SEVENTH DIGIT / GVW (Prior To Six Digit Serial No. 100000 A Vehicle Weight

Alphabetical Code Was Used. Translation Follows.)

C - 5600 - 14-15-16-17-25-45	S - 4500 - 83 (Heavy Duty)
E - 6000 - 14-15-16-17	T - 3750 - 83
K - 7200 - 46	V - 3900 - 84
M - 6500 - 46	W - 5200 - 25-45
P - 4200 - 84	X - 6000 - 26 (Export Only)
R - 4750 - 84 (Heavy Duty)	Z - 8000 - 46

SEVENTH DIGIT / Engine (Beginning With Six Digit Serial No. 100000 A Vehicle Engine

Alphabetical Code Was Used. Translation Follows.)

A - SIX - 258 CID - Regular	N - V8 - 360 CID
E - SIX - 232 CID - Regular	P - V8 - 360 CID - Four Bbl.
H - V8 - 304 CID	Z - V8 - 401 CID

EIGHTH DIGIT / Engine (Prior To Six Digit Serial No. 100000 A Vehicle Engine

Alphabetical Code Was Used. Translation Follows.)

A - SIX - 258 CID - Regular	N - V8 - 360 CID
E - SIX - 232 CID - Regular	P - V8 - 360 CID - Four Bbl.
H - V8 - 304 CID	Z - V8 - 401 CID

EIGHTH thru THIRTEENTH DIGIT / Serial Number (The first Six (6) Digit Sequential Serial Number Used Begins With 100000.)

Sequential Serial Number - Begins With 100000

NINTH thru THIRTEENTH DIGIT / Serial Number (Prior To Six Digit Serial No. 100000 A Five Digit Sequential Serial Number Was Used.)

Sequential Serial Number - Begins With 00001 and Ends With 99999

GENERAL INFORMATION

1975 V.I.N.

This 13 digit number can be found stamped on the bottom line of the metal plate which is affixed to the upper left corner of the firewall under the hood.

J	5	M	8	3	A	H	O	0	0	0	0	1
MFG. CODE	MODEL YEAR	TRANS-MISSION	MODEL		GVW	ENGINE						SEQUENTIAL SERIAL NO.

This number is decoded as follows:

FIRST DIGIT / Manufacturer

J - Jeep Corporation

SECOND DIGIT / Model Year

5 - 1975

THIRD DIGIT / Plant - Transmission - Drive

A - Toledo - Hydramatic - LHD	K - CKD - 3-Speed	- RHD
B - CKD - Hydramatic - LHD	M - Toledo - 4-Speed	- LHD
F - Toledo - 3-Speed - LHD	N - Toledo - 4-Speed	- RHD
G - Toledo - 3-Speed - RHD	O - CKD - 4-Speed	- LHD
J - CKD - 3-Speed - LHD	P - CKD - 4-Speed	- RHD

FOURTH and FIFTH DIGIT / Model

14 - Wagoneer	- 110" WB	45 - Truck (J-10)	- 131" WB
15 - Wagoneer (Custom)	- 110" WB	46 - Truck (J-20)	- 131" WB
16 - Cherokee	- 110" WB	63 - 'Jeep'	- 84" WB (CKD)
17 - Cherokee 'S' (Custom)	- 110" WB	64 - 'Jeep'	- 104" WB (CKD)
25 - Truck (J-10)	- 119" WB	83 - 'Jeep'	- 84" WB
26 - Truck (J-10) (Export Only)	- 119" WB	84 - 'Jeep'	- 104" WB

SIXTH DIGIT / GVW Rating

A - 3750 - 83	M - 6025 - 14-15-16-17-25-26
B - 4000 - 84	N - 6500 - 26-46
C - 4500 - 83 HD (VDO Only)	R - 7200 - 46
D - 4750 - 84 HD (VDO Only)	X - 8000 - 46

SEVENTH DIGIT / Engine

A - SIX - 258 CID - 110 H.P.	N - V8 - 360 CID - 175 H.P.
E - SIX - 232 CID - 100 H.P.	P - V8 - 360 CID - 195 H.P.
H - V8 - 304 CID - 150 H.P.	Z - V8 - 401 CID - Four Bbl.

EIGHTH thru THIRTEENTH DIGIT / Serial Number

Sequential Serial Number - Begins With 000001

GENERAL INFORMATION

1976 V.I.N.

This 13 digit number can be found stamped on the bottom line of the metal plate which is affixed to the upper left corner of the firewall under the hood.

J	6	M	8	3	A	H	0	0	0	0	0	1
MFG. CODE	MODEL YEAR	TRANS-MISSION	MODEL	GVW	ENGINE							SEQUENTIAL SERIAL NO.

This number is decoded as follows:

FIRST DIGIT / Manufacturer

J - Jeep Corporation

SECOND DIGIT / Model Year

6 - 1976

THIRD DIGIT / Plant - Transmission - Drive

A - Toledo - Hydramatic - LHD	G - Toledo - 3-Speed	- RHD
F - Toledo - 3-Speed	M - Toledo - 4-Speed	- LHD

FOURTH and FIFTH DIGIT / Model

14 - Wagoneer	- 109" WB	45 - Truck (J-10)	- 131" WB
15 - Wagoneer (Custom)	- 109" WB	46 - Truck (J-20)	- 131" WB
16 - Cherokee	- 109" WB	83 - 'Jeep'	- 84" WB
17 - Cherokee 'S' (Custom)	- 109" WB	84 - 'Jeep'	- 104" WB
25 - Truck (J-10)	- 119" WB	93 - 'Jeep'	- 94" WB
26 - Truck (J-10) (Export Only)	- 119" WB		

SIXTH DIGIT / GVW Rating

A - 3750 - 83-84-93	N - 6025 - 14-15-16-17-25-45
E - 4150 - 83-84-93 HD	R - 7200 - 46
M - 6025 - 14-15-16-17-25-45	X - 8000 - 46

SEVENTH DIGIT / Engine

A - SIX - 258 CID - 110 H.P.	N - V8 - 360 CID - 175 H.P.
E - SIX - 232 CID - 100 H.P.	P - V8 - 360 CID - 195 H.P.
H - V8 - 304 CID - 150 H.P.	Z - V8 - 401 CID - Four Bbl.

EIGHTH thru THIRTEENTH DIGIT / Serial Number

Sequential Serial Number - Begins With 000001

GENERAL INFORMATION

1977 V.I.N.

This 13 digit number can be found stamped on the bottom line of the metal plate which is affixed to the upper left corner of the firewall under the hood.

J	7	M	8	3	A	H	O	O	O	O	1
MFG. CODE	MODEL YEAR	TRANS-MISSION	MODEL	GVW	ENGINE					SEQUENTIAL SERIAL NO.	

This number is decoded as follows:

FIRST DIGIT / Manufacturer
J - Jeep Corporation

SECOND DIGIT / Model Year
7 - 1977

THIRD DIGIT / Plant - Transmission - Drive

A - Toledo - Hydramatic - LHD	G - Toledo - 3-Speed	- RHD
B - Toledo - Automatic - RHD	M - Toledo - 4-Speed	- LHD
F - Toledo - 3-Speed - LHD	N - Toledo - 4-Speed	- RHD

FOURTH and FIFTH DIGIT / Model

15 - Wagoneer (Custom) - 109" WB	26 - Truck (J-10)
16 - Cherokee - 109" WB	(Export Only) - 119" WB
17 - Cherokee 'S' (Custom) - 109" WB	45 - Truck (J-10) - 131" WB
17 - Cherokee Chief (2 Door)(Wide Track) - 109" WB	46 - Truck (J-20) - 131" WB
18 - Cherokee (4 Door) - 109" WB	83 - 'Jeep' - 84" WB
25 - Truck (J-10) - 119" WB	84 - 'Jeep' - 104" WB
	93 - 'Jeep' - 94" WB

SIXTH DIGIT / GVW Rating

A - 3750 - 83-84-93	P - 6800 - 26-46
E - 4150 - 83-84-93 HD	S - 7600 - 46
H - 4850 - 83-84-93 XHD (Export Only)	Y - 8400 - 46
M - 6025 - 14-15-16-17-18-25-45	

SEVENTH DIGIT / Engine

A - SIX - 258 CID - Single Bbl.	N - V8 - 360 CID - 175 H.P.
C - SIX - 258 CID - Two Bbl.	P - V8 - 360 CID - 195 H.P.
E - SIX - 232 CID - 100 H.P.	Z - V8 - 401 CID - Four Bbl.
H - V8 - 304 CID - 150 H.P.	

EIGHTH thru THIRTEENTH DIGIT / Serial Number
Sequential Serial Number - Begins With 000001

GENERAL INFORMATION

1978 V.I.N.

This 13 digit number can be found stamped on the bottom line of the metal plate which is affixed to the upper left corner of the firewall under the hood.

J	8	A	1	8	A	N	0	0	0	0	1
MFG. CODE	MODEL YEAR	TRANS- MISSION	MODEL	GVW	ENGINE						SEQUENTIAL SERIAL NO.

This number is decoded as follows:

FIRST DIGIT / Manufacturer

J - Jeep Corporation

SECOND DIGIT / Model Year

8 - 1978

THIRD DIGIT / Plant - Transmission - Drive

A - Toledo - Hydramatic - LHD

G - Toledo - 3-Speed - RHD

B - Toledo - Automatic - RHD

M - Toledo - 4-Speed - LHD

F - Toledo - 3-Speed - LHD

N - Toledo - 4-Speed - RHD

FOURTH and FIFTH DIGIT / Model

15 - Wagoneer

25 - Truck (J-10) - 119" WB

(Custom)(4 Door) - 109" WB

45 - Truck (J-10) - 131" WB

16 - Cherokee - 109" WB

46 - Truck (J-20) - 131" WB

17 - Cherokee Chief

83 - 'Jeep' - 84" WB

(2 Door)(Wide Track) - 109" WB

84 - 'Jeep' (Export Only) - 104" WB

18 - Cherokee (4 Door) - 109" WB

93 - 'Jeep' - 94" WB

SIXTH DIGIT / GVW Rating

A - 3750 - 83-84-93

P - 6800 - 46

E - 4150 - 83-84-93 HD

S - 7600 - 46

H - 4850 - 83-84-93 XHD (Export Only)

Y - 8400 - 46

N - 6200 - 15-16-17-18-25-45

SEVENTH DIGIT / Engine

A - SIX - 258 CID - Single Bbl.

N - V8 - 360 CID - Two Bbl.

C - SIX - 258 CID - Two Bbl.

P - V8 - 360 CID - Four Bbl.

E - SIX - 232 CID - Single Bbl.

Z - V8 - 401 CID - Four Bbl.

H - V8 - 304 CID - Two Bbl.

EIGHTH thru THIRTEENTH DIGIT / Serial Number

Sequential Serial Number - Begins With 000001

GENERAL INFORMATION

1979 V.I.N.

This 13 digit number can be found stamped on the bottom line of the metal plate which is affixed to the upper left corner of the firewall under the hood.

J	9	A	1	8	A	N	0	0	0	0	1
MFG. CODE	MODEL YEAR	TRANS- MISSION	MODEL	GVW	ENGINE					SEQUENTIAL SERIAL NO.	

This number is decoded as follows:

FIRST DIGIT / Manufacturer

J - Jeep Corporation

SECOND DIGIT / Model Year

9 - 1979

THIRD DIGIT / Plant - Transmission - Drive

A - Toledo - Automatic - LHD	G - Toledo - 3-Speed - RHD
B - Toledo - Automatic - RHD	M - Toledo - 4-Speed - LHD
F - Toledo - 3-Speed - LHD	N - Toledo - 4-Speed - RHD

FOURTH and FIFTH DIGIT / Model

15 - Wagoneer (Custom)(4 Door) - 109" WB	25 - Truck (J-10) - 119" WB
16 - Cherokee (2 Door) - 109" WB	45 - Truck (J-10) - 131" WB
17 - Cherokee Chief (2 Door)(Wide Track) - 109" WB	46 - Truck (J-20) - 131" WB
18 - Cherokee (4 Door) - 109" WB	83 - 'Jeep' 84 - 'Jeep' (Export Only) - 104" WB
	93 - 'Jeep' - 94" WB

SIXTH DIGIT / GVW Rating

A - 3750 - 83-84-93	P - 6800 - 46
E - 4150 - 83-84-93 HD	S - 7600 - 46
H - 4850 - 83-84-93 XHD (Export Only)	Y - 8400 - 46
N - 6200 - 15-16-17-18-25	

SEVENTH DIGIT / Engine

A - SIX - 258 CID - Single Bbl.	H - V8 - 304 CID - Two Bbl.
B - FOUR - 2.54 Litre	N - V8 - 360 CID - Two Bbl.
C - SIX - 258 CID - Two Bbl.	

EIGHTH thru THIRTEENTH DIGIT / Serial Number

Sequential Serial Number - Toledo Built Vehicles - Begins With 000001
Brampton Built Vehicles - Begins With 800001

GENERAL INFORMATION

1980 V.I.N.

This 13 digit number can be found stamped on the bottom line of the metal plate which is affixed to the upper left corner of the firewall under the hood.

J	O	E	1	8	N	N	0	0	0	0	1
MFG. CODE	MODEL YEAR	TRANS- MISSION	MODEL	GVW	ENGINE		SEQUENTIAL SERIAL NO.				

This number is decoded as follows:

FIRST DIGIT / Manufacturer

J - Jeep Corporation

SECOND DIGIT / Model Year

0 - 8000

THIRD DIGIT / Transmission - Drive

D - Automatic - LHD (Part Time 4WD) E - Automatic - LHD (Full Time 4WD)

H - Automatic - RHD (Part Time 4WD) J - Automatic - RHD (Full Time 4WD)

M - 4-Speed - LHD (Part Time 4WD) N - 4-Speed - RHD (Full Time 4WD)

FOURTH and FIFTH DIGIT / Model

15 - Wagoneer	25 - Truck - 119" WB
---------------	----------------------

(Custom)(4 Door) - 109" WB

45 - Truck - 131" WB	46 - Truck - 131" WB
----------------------	----------------------

16 - Cherokee (2 Door) - 109" WB

17 - Cherokee (2 Door)

(Wide Track) - 109" WB

18 - Cherokee (4 Door) - 109" WB

SIXTH DIGIT / GVW Rating

A - 3750 - 83-84-93	P - 6800 - 46
---------------------	---------------

E - 4150 - 83-84-93 HD	S - 7600 - 46
------------------------	---------------

N - 6200 - 15-16-17-18-25-45	Y - 8400 - 46
------------------------------	---------------

SEVENTH DIGIT / Engine

A - SIX - 258 CID - Single Bbl.	H - V8 - 304 CID - Two Bbl.
---------------------------------	-----------------------------

B - FOUR - 151 CID - Two Bbl.	N - V8 - 360 CID - Two Bbl.
-------------------------------	-----------------------------

C - SIX - 258 CID - Two Bbl.	
------------------------------	--

EIGHTH thru THIRTEENTH DIGIT / Serial Number

Sequential Serial Number - Toledo Built Vehicles - Begins With 000001

GENERAL INFORMATION

MODEL IDENTIFICATION . . .

1974

WAGONEER - CHEROKEE (10) SERIES . . .	110" Wheelbase
7414 Wagoneer (Standard)	7416 Cherokee (Standard)
7415 Wagoneer (Custom)	7417 Cherokee (Custom)
TRUCK (20) SERIES . . . 119" Wheelbase	
7425 GVW "C", "W"	7426 GVW "X" (Export Only)
TRUCK (40) SERIES . . . 131" Wheelbase	
7445 GVW "C", "W"	7446 GVW "K", "M", "Z"
UNIVERSAL (80) SERIES - (CJ-5)(CJ-6)	
7483 84" WB (CJ-5)	7484 104" WB (CJ-6)

1975

WAGONEER - CHEROKEE (10) SERIES . . .	110" Wheelbase
7514 Wagoneer (4 Door Station Wagon)	7516 Cherokee (2 Door Station Wagon)
7515 Wagoneer (Custom - 4 Door Station Wagon)	7517 Cherokee 'S' (Custom - 2 Door Station Wagon)
TRUCK (20) SERIES . . . 119" Wheelbase	
7525 J-10 (GVW "M")	7526 J-20 (Export Only)
TRUCK (40) SERIES . . . 131" Wheelbase	
7545 J-10 (GVW "M")	7546 J-20 (GVW "N", "R", "X")
UNIVERSAL (80) SERIES - (CJ-5)(CJ-6)	
7583 84" WB (CJ-5)	7584 104" WB (CJ-6)

1976

WAGONEER - CHEROKEE (10) SERIES . . .	109" Wheelbase
7614 Wagoneer (4 Door Station Wagon)	7616 Cherokee (2 Door Station Wagon)
7615 Wagoneer (Custom - 4 Door Station Wagon)	7617 Cherokee 'S' (Custom - 2 Door Station Wagon)
TRUCK (20) SERIES . . . 119" Wheelbase	
7625 J-10 (GVW "M")	7626 J-20 (Export Only)
TRUCK (40) SERIES . . . 131" Wheelbase	
7645 J-10 (GVW "M")	7646 J-20 (GVW "N", "R", "X")
UNIVERSAL (80) SERIES - (CJ-5)(CJ-6)	
7683 84" WB (CJ-5)	7684 104" WB (CJ-6)
UNIVERSAL (90) SERIES - (CJ-7)	
7693 94" WB (CJ-7)	

GENERAL INFORMATION

1977

WAGONEER - CHEROKEE (10) SERIES . . . 109" Wheelbase	
7715 Wagoneer (Custom - 4 Door Station Wagon)	7717 Cherokee 'S' (Custom - 2 Door Station Wagon)
7716 Cherokee (2 Door Station Wagon)	7718 Cherokee (4 Door Station Wagon)
TRUCK (20) SERIES . . . 119" Wheelbase	
7725 J-10 (GVW "M")	7726 J-20 (Export Only)
TRUCK (40) SERIES . . . 131" Wheelbase	
7745 J-10 (GVW "M")	7746 J-20 (GVW "P", "S", "Y")
UNIVERSAL (80) SERIES - (CJ-5)(CJ-6)	
7783 84" WB (CJ-5)	7784 104" WB (CJ-6)
UNIVERSAL (90) SERIES - (CJ-7)	
7793 94" WB (CJ-7)	

1978

WAGONEER - CHEROKEE (10) SERIES . . . 109" Wheelbase	
7815 Wagoneer (Custom - 4 Door)	7817 Cherokee (2 Door - Wide Track)
7816 Cherokee (2 Door)	7818 Cherokee (4 Door)
TRUCK (20) SERIES . . . 119" Wheelbase	
7825 J-10 (GVW "N")	
TRUCK (40) SERIES . . . 131" Wheelbase	
7845 J-10 (GVW "N")	7846 J-20 (GVW "P", "S", "Y")
UNIVERSAL (80) SERIES - (CJ-5)(CJ-6)	
7883 84" WB (CJ-5)	7884 104" WB (CJ-6 - Export Only)
UNIVERSAL (90) SERIES - (CJ-7)	
7893 94" WB (CJ-7)	

GENERAL INFORMATION

1979

WAGONEER - CHEROKEE (10) SERIES . . . 109" Wheelbase

7915 Wagoneer (4 Door - Custom)	7917 Cherokee (2 Door - Wide Track)
7916 Cherokee (2 Door)	7918 Cherokee (4 Door)

TRUCK (20) SERIES . . . 119" Wheelbase

7925 J-10 (GVW "N")

TRUCK (40) SERIES . . . 131" Wheelbase

7945 J-10 (GVW "N")

7946 J-20 (GVW "P", "S", "Y")

UNIVERSAL (80) SERIES - (CJ-5)(CJ-6)

7983 84" WB (CJ-5)

7984 104" WB (CJ-6 - Export Only)

UNIVERSAL (90) SERIES - (CJ-7)

7993 94" WB (CJ-7)

1980

WAGONEER - CHEROKEE (10) SERIES . . . 109" Wheelbase

8015 Wagoneer (4 Door - Custom)	8017 Cherokee (2 Door - Wide Track)
8016 Cherokee (2 Door)	8018 Cherokee (4 Door)

TRUCK (20) SERIES . . . 119" Wheelbase

8025 GVW "N"

TRUCK (40) SERIES . . . 131" Wheelbase

8045 GVW "N"

8046 GVW "P", "S", "Y"

UNIVERSAL (80) SERIES - (CJ-5)

8083 84" WB (CJ-5)


UNIVERSAL (90) SERIES - (CJ-7)

8093 94" WB (CJ-7)

GENERAL INFORMATION

ENGINE IDENTIFICATION . . .

Engine identification locations are the darkened areas marked with arrows shown in the illustration below. The Four cylinder Engine Build Code is located as shown.

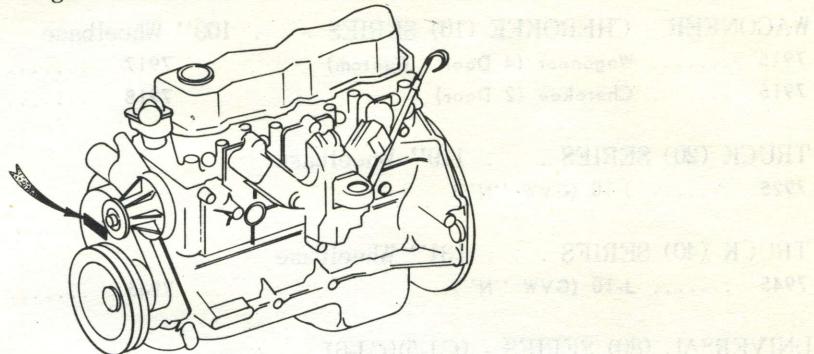

The Engine Build Plate has a code stamped on it and shows the type of engine and the date the engine was assembled.


The engine build date code used for the identification of engineering changes and service references is outlined as follows:

B - 151 FOUR Two Bbl. Carb.

The figure "0" is for 1980. For example, an Engine Build Code Number should read as follows:

January 2, 1980 - 001C02 (258 SIX Two Bbl. Carb.)

The 232 and 258 Engine Build Code is located as shown.

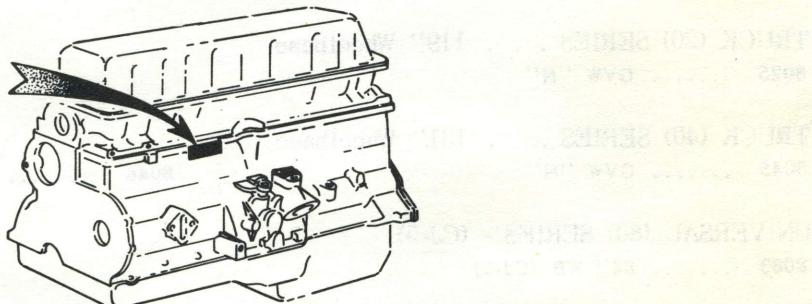

The Engine Code consists of six digits. The example 701-A-20 is interpreted as follows:

FIRST DIGIT / Year

7 - 1974, 8 - 1975, 9 - 1976, 1 - 1977, 2 - 1978, 3 - 1979, 0 - 1980

SECOND and THIRD DIGIT / Month

01 - January

02 - February

FOURTH DIGIT / Type

A - OHV SIX 258 - Single Bbl. Carb. - 8.0 to 1 Comp. Ratio

E - OHV SIX 232 - Single Bbl. Carb. - 8.0 to 1 Comp. Ratio

FIFTH and SIXTH DIGIT / Day


20 - 20th Day of the Month

GENERAL INFORMATION

To identify odd size engines, the following letter coding will be used. This letter code is stamped on the oil filter boss next to the block.

- B - .010 Oversize Cylinder Bores
- C - .010 Oversize Camshaft Bores
- M - .010 Undersize Main Bearings
- P - .010 Undersize Pins
- PM - .010 Undersize Pins and Main Bearings

The V8 Engine Build Code is stamped on the date code plate on the front of the right side rocker arm cover. The Engine Code consists of six digits. The example 709-N-20 is interpreted as follows:

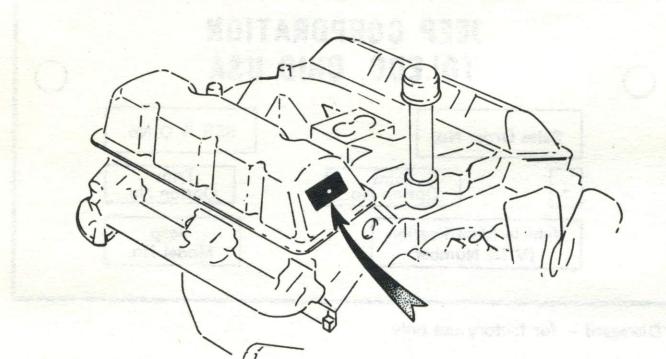

FIRST DIGIT / Year

7 - 1974, 8 - 1975, 9 - 1976, 1 - 1977, 2 - 1978, 3 - 1979, 0 - 1980

SECOND and THIRD DIGIT / Month

09 - September

10 - October

FOURTH DIGIT / Type

H - V8 304 - 8.40 to 1 Comp. Ratio - Two Bbl. Carb.

N - V8 360 - 8.25 to 1 Comp. Ratio - Two Bbl. Carb.

P - V8 360 - 8.25 to 1 Comp. Ratio - Four Bbl. Carb.

Z - V8 401 - 8.35 to 1 Comp. Ratio - Four Bbl. Carb.

T - V8 401 - 8.35 to 1 Comp. Ratio - Four Bbl. Carb. (Heavy Duty)

FIFTH and SIXTH DIGIT / Day

20 - 20th Day of the Month

To identify odd size engines, the following letter coding will be used.

- B - .010 Oversize Cylinder Bores
- C - .010 Oversize Camshaft Bores
- M - .010 Undersize Main Bearings
- P - .010 Undersize Pins
- PM - .010 Undersize Pins and Main Bearings

This letter can be found stamped to the upper half of the Engine Build Code plate.

GENERAL INFORMATION

PAINT OR TRIM . . .

Identification of paint and trim options on each vehicle is shown on the Vehicle Identification (VIN) plate attached to the engine firewall on the left hand side.



*Disregard — for factory use only

This information should be used to determine paint color, trim number and included with the part number and description when ordering trim parts.

Paint or Trim Option 999 designates special paint or trim, therefore the vehicle serial number should be supplied. When ordering parts for vehicles not equipped with the option plate, samples of the upholstery or trimming should accompany orders for trim parts. Serial number, model of vehicle and body type should also be listed.

We assume no responsibility for errors in color specification due to incorrect trim code number supplied. We cannot accept cancellation of orders for trim parts after they are placed, and these parts cannot be returned for credit.

BULK PAINT is not available from the factory, however, *Aerosol* or *Brush Top Touchup Paint* is listed in the following chart. All colors shown are available from your local Ditzler and Dupont paint jobber by requesting the intermix formula shown in the intermix number chart.

SPECIAL ORDER or *FLEET PAINTS* are available as *Aerosol* or *Brush Top Touchup Paint* only if listed on the following Charts or in the Accessories Catalog.

To determine the paint manufacturer's intermix formula for a particular vehicle, proceed as follows:

1. Determine the paint option number from the Paint and Trim Option Plate on the vehicle.
2. Locate this number in the following chart to determine the name of the color on the vehicle except for Paint Option 999. Option 999 indicates special paint and when ordering paint for Option 999, please refer to the *SPECIAL SALES ORDER PLATE* affixed adjacent to the Vehicle Identification Plate on the left hand side of the firewall. Take the Special Sales Order Number and contact the National Parts Distribution Center for the correct paint under that sales order number.

GENERAL INFORMATION

1974

EXTERIOR COLORS . . .

MONOTONE PAINT	TU-TONE PAINT	TU-TONE PAINT	COLOR NAME	SPRAY CAN PART NO.	BRUSH TOP PART NO.	DITZLER CODE **	DUPONT CODE #
	CODE	CODE					
PAINT	MODELS(1)	MODELS(2)					
CODE	16-17	25-26					
NO.		45-46					
1	Primer	899 0451
			Leveler	899 0452
21	496	544	Raven Black	9000	93-005
81	Transport Yellow	80020	83928
134	Olive Drab	42955	29149
135	Omaha Orange	60281	83215
221	Federal Gray	31817	93-91640
394	497	545	Marlin Blue	13156	98001
432	Champagne White	981 857	8818	7314
492	500	553	Jetset Blue (M)	986 289	14529	7905
504	Forest Green	44586	7762
509	Renegade Plum	50902	7876
510	Renegade Yellow	82054	7875
512	519	550	Fairway Green	899 7011	899 7016	44760	5515
514	521	551	Fawn Beige	899 7008	899 7013	23853	5519
515	522	552	Trans-Am Red	899 7009	899 7014	2400	5408
526	549	533	Copper (M)(*)1	899 7028	899 7032	24000	43091
526	549	533	Copper (M)(*)2	899 7095	899 7096	24176	43698
527	547	531	Golden Tan (M)	899 7029	899 7033	24005	43092
528	548	532	Mellow Yellow	899 7030	899 7034	81911	43093
529	546	530	Silver Green (M)	899 7031	899 7035	44905	43095

(1) Champagne White (Paint No. 432) used as upper color.

(2) Champagne White (Paint No. 432) used as lower color.

** Use prefix: DQE - for Ditzler Air Dry Enamel
DDL - for Ditzler Duracryl Acrylic Lacquer

Use suffix: L - for Dupont Lucite
D - for Dupont Dulux
A - for Dupont Centari Acrylic Air Dry Enamel

*1 Prior to Serial No. 81652.

*2 Beginning with Serial No. 81652.

INTERIOR COLORS . . .

COLOR NAME	DITZLER CODE
Black	9390
Buff	23716
Green	44649

GENERAL INFORMATION

1975

EXTERIOR COLORS . . .

MONOTONE PAINT CODE NO.	TU-TONE PAINT CODE NO.		COLOR NAME	SPRAY CAN PART NO.	DUOTONE PAINT TOP PART NO.		DITZLER CODE**		DUPONT CODE#		
	PAINT CODE NO.				PAINT TOP PART NO.		DITZLER CODE**		DUPONT CODE#		
	16-17	45-46(3)	25-26								
1	Primer	899 0451	
	Leveler	899 0452	
21	575	...	568	Raven Black	899 7093	899 7088	9000	99			
81	...	597	...	Transport Yellow	80020	83928			
134	Olive Drab	42955	29149			
135	...	596	...	Omaha Orange	60281	83215			
221	...	595	...	Federal Gray	31817	91640			
394	576	...	569	Marlin Blue (M)	13156	98001			
504	598	Forest Green	44586	7762			
514	580	590	571	Fawn Beige	899 7008	899 7013	23853	5519			
515	581	591	572	Trans-Am Red	899 7009	899 7014	71882	5408			
526	583	593	573	Copper (M)	899 7095	899 7096	24176	43698			
528	577	587	570	Mellow Yellow	899 7030	899 7034	81911	43093			
559	574	...	564	Pewter Gray	899 7092	899 7087	33160	43647			
560	578	588	565	Reef Green	899 7090	899 7085	45020	43648			
561	579	589	566	Green Apple	899 7100	899 7099	45021	43649			
562	582	592	567	Medium Blue	899 7102	899 7101	14801	43650			
563	...	594	...	Alpine White	899 7094	899 7089	0899	43651			
584	Renegade Orange	899 7098	899 7097	60786	43548			
585	Renegade Blue	899 7091	899 7086	14800	43549			

(1) Upper color is Alpine White (Code No. 563).

(2) Upper color is Raven Black (Code No. 568).

(3) Lower color is Alpine White (Code No. 563).

** Use prefix: DQE - for Ditzler Air Dry Enamel

DDL - for Ditzler Duracryl Acrylic Lacquer

Use suffix: L - for Dupont Lucite

D - for Dupont Dulux

A - for Dupont Centari Acrylic Air Dry Enamel

INTERIOR COLORS . . .

COLOR NAME	DITZLER CODE
Black	9390
Blue	14736
Buff	23716
Green	44649

GENERAL INFORMATION

1976

EXTERIOR COLORS . . .

PAINT CODE NO.	COLOR NAME	SPRAY	BRUSH	DITZLER	DUPONT
		CAN	TOP		
1	Primer	899 0451
	Leveler	899 0452
6D	Sand Tan	899 3254	899 3266	2820	44111
6P	Firecracker Red	899 3258	899 3270	2824	44116
6R	Brilliant Blue	899 3259	899 3271	2825	44117
6T	Nautical Blue Poly	899 3260	899 3272	2826	44118
6V	Sunshine Yellow	899 3261	899 3273	2827	44119
7C	Autumn Red Poly	899 3401	899 3402
7K	Midnight Blue Poly	899 3360	899 3371	2897	44193
7L	Loden Green Poly	899 3361	899 3372	2898	44194
7P	Lime Green	899 3363	899 3374	2900	44196
7Y	Tawny Orange	899 3365	899 3376	2902	44198
G6	Renegade Orange	899 3001	899 3012	2607	42856
G7	Alpine White	899 3105	899 3121	2702	43499
G9	Medium Blue Poly	899 3123	899 3107	2704	43501
H2	Reef Green Poly	899 7090	899 7085	45020	44164
H4	Dark Cocoa Poly	899 3110	899 3126	2796	43503
J1	Pewter Gray Poly	899 7092	899 7087	33160	44163
FA	Transport Yellow	80020	83928
FB	Omaha Orange	60281	83215
FC	Federal Gray	31817	91640
FE	Forest Green	44586	7762
FH	Olive Drab	42955	29149
P1	Classic Black	899 0636	899 0757	9000	99

** Use prefix: DAR - for Acrylic Enamel

DDL - for Acrylic Lacquer

DQE - for Alkyd Enamel

Use suffix: A - for Acrylic Enamel

D - for Alkyd Enamel

L - for Acrylic Lacquer

GENERAL INFORMATION

INTERIOR COLORS . . .

LOW GLOSS or FLAT COLORS -

COLOR	PAINT CODE	SPRAY CAN NO.	DITZLER CODE NO.	DUPONT CODE NO.
Berry	75-R-45 (Metal)	899 3160	50937
	75-R-51 (Plastic)	899 3098
Black	73-R-27 (Metal)	899 3155	9399
	73-R-23 (Plastic)	899 2885	99L
Blue	75-R-2 (Metal)	899 3156	14736
	75-R-26 (Plastic)	899 3094
Tan	75-R-4 (Metal)	899 3158	24055
	75-R-28 (Plastic)	899 3096
White	75-R-5 (Metal)	899 3159	0894
	75-R-29 (Plastic)	899 3097

MISCELLANEOUS PAINTS . . .

COLOR NAME	DITZLER CODE	DUPONT CODE
Bumper Insert - Satin Gray (73-R-58)	33075
Engine Enamel - Blue (73-R-87)	14688
Engine Enamel - Blue Poly	DQE13730
Painted Ornamentation (Cherokee Chief) Black (75-R-100-J)*	9425	44956A
Striping Color - Black (72-R-40)	9000
Striping Color - Copper Poly (74-R-24)	24007
Striping Color - Gold (72-R-35)	23681

* Spray Can, Order 899 7177 - Brush Top, Order 899 7176.

1977

EXTERIOR COLORS . . .

PAINT CODE	COLOR NAME	DITZLER			DUPONT			SHERWIN - WILLIAMS		
		SPRAY CAN	BRUSH TOP	AIR DRY ENAMEL	ACRYLIC LACQUER	AIR DRY DULUX	ACRYLIC LACQUER	ACRYLIC ENAMEL	ACRYLIC	LACQUER
1	Primer	899 0451
	Leveler	899 0452
6D	Sand Tan	899 3254	899 3266	DAR2820	DDL2820	44111A	44111L	F10N3708	L10N3708	
6P	Fire Cracker Red	899 3258	899 3270	DAR2824	DDL2824	44116AW	44116LH	F10R3710	L10R3710	
6R	Brilliant Blue	899 3259	899 3271	DAR2825	DDL2825	44117AH	44117LH	F10L3711	L10L3711	
6V	Sunshine Yellow	899 3261	899 3273	DAR2827	DDL2827	44119AH	44119L	F10Y3712	L10Y3712	
7B	Mocha Brown (M)	899 3358	899 3369	DAR2895	DDL2895	44191A	44191L	F11N3777	L11N3777	
7E	Oak Leaf Brown	899 7182	899 7181	DAR24443	DDL24443	45101A	45101L	J5-8574	J4-8574	
7K	Midnight Blue (M)	899 3360	899 3371	DAR2897	DDL2897	44193A	44193L	F11L3764	L11L3764	

GENERAL INFORMATION

7L	Loden Green (M)	899 3361	899 3372	DAR2898	DDL2898	44194A	44194L	F11G3765	L11G3765
7M	Golden Ginger (M)	899 3362	899 3373	DAR2899	DDL2899	44195A	44195L	F11N3774	L11N3774
7W	Captain Blue (M)	899 3364	899 3375	DAR2901	DDL2901	44197A	44197L	F11L3769	L11L3769
7Y	Tawny Orange	899 3365	899 3376	DAR2902	DDL2902	44198A	44198L	F10E3766	L10E3766
7Z	Sun Orange	899 3366	899 3377	DAR2903	DDL2903	44199A	44199L	F10E3768	L10E3768
8C	Quick Silver (M).....	899 3489	899 3492	DAR3030	DDL3030	45104AH	45104L	F11A3909	L11A3909
FA	Transport Yellow.....	DAR80020	DDL80020	83928A	83928L	J5-7800	J4-7800
FB	Omaha Orange	DAR60281	DDL60281	83215A	83215L	J5-7801	J4-7801
FC	Federal Gray	DAR31817	DDL31817	91640A	91640L	J5-7802	J4-7802
FE	Forest Green	DAR44586	DDL44586	7762A	7762L	J5-7803	J4-7803
FH	Olive Drab	DAR42955	DDL42955	29149A	29149L	J5-7804	J4-7804
G7	Alpine White.....	899 3105	899 3121	DQE2702	DDL2702	43499D	43499L	F10A3606	L10A3606
H8	Autumn Red (M)	899 3114	899 3130	DQE2711	DDL2711	43507D	43507L
J1	Pewter Gray (M).....	899 7092	899 7087	DAR33160	DDL33160	44163A	44163D
P1	Classic Black	899 0636	899 0757	DAR9000	DDL9300	99A	99L	F10B1738	L10B1738

INTERIOR COLORS . . .

LOW GLOSS or FLAT COLORS -

COLOR	PAINT CODE	SPRAY CAN NO.	DITZLER	DUPONT
			CODE NO.	CODE NO.
Berry	75-R-45 (Metal)	899 3160	50937
	75-R-51 (Plastic)	899 3098
Black	- 73-R-27 (Metal).....	899 3155	9399
	73-R-23 (Plastic)	899 2885	99L
Blue	- 75-R-2 (Metal).....	899 3156	14736
	75-R-26 (Plastic)	899 3094
Dark Desert Tan-	78-R-14 (Metal).....	899 3495	24500
	78-R-28 (Plastic)	899 3499
Desert Beige	- 76-R-20J (Plastic)	899 3501
Flax	- 78-R-30 (Plastic)	899 3502
Tan	- 75-R-4 (Metal)	899 3096
White	- 75-R-5 (Metal)	899 3159	0894
	75-R-29 (Plastic)	899 3097

MISCELLANEOUS PAINTS . . .

COLOR NAME	DITZLER CODE	DUPONT CODE
Bumper Insert - Satin Gray (73-R-58).....	33075
Engine Enamel - Blue (73-R-87)	14688
Engine Enamel - Blue Poly	DQE13730
Painted Ornamentation (Cherokee Chief) Black (75-R-100-J)*	9425	44956A
Striping Color - Black (72-R-40)	9000
Striping Color - Copper Poly (74-R-24)	24007
Striping Color - Gold (72-R-35)	23681

* Spray Can, Order 899 7177 - Brush Top, Order 899 7176.

GENERAL INFORMATION

1978

EXTERIOR COLORS . . .

PAINT CODE	COLOR NAME	SPRAY CAN	BRUSH TOP	DITZLER		DUPONT		SHERWIN - WILLIAMS	
				AIR DRY ENAMEL	DURACRYL LACQUER	AIR DRY DULUX	LUCITE LACQUER	ACRYLIC ENAMEL	ACRYLIC LACQUER
1	Primer	899 0451							
	Leveler	899 0452							
6D	Sand Tan.....	899 3254	899 3266	DAR2820	DDL2820	44111A	44111L	F10N3708	L10N3708
6P	Fire Cracker Red.....	899 3258	899 3270	DAR2824	DDL2824	44116AW	44116LH	F10R3710	L10R3710
6R	Brilliant Blue.....	899 3259	899 3271	DAR2825	DDL2825	44117AH	44117LH	F10L3711	L10L3711
6V	Sunshine Yellow	899 3261	899 3273	DAR2827	DDL2827	44119AH	44119L	F10Y3712	L10Y3712
7B	Mocha Brown (M).....	899 3358	899 3369	DAR2895	DDL2895	44191A	44191L	F11N3777	L11N3777
7E	Oak Leaf Brown.....	899 7182	899 7181	DAR24443	DDL24443	45101A	45101L	J5-8574	J4-8574
7L	Loden Green (M).....	899 3361	899 3372	DAR2898	DDL2898	44194A	44194L	F11G3765	L11G3765
7M	Golden Ginger (M).....	899 3362	899 3373	DAR2899	DDL2899	44195A	44195L	F11N3774	L11N3774
7W	Captain Blue (M).....	899 3364	899 3375	DAR2901	DDL2901	44197A	44197L	F11L3769	L11L3769
7Z	Sun Orange	899 3366	899 3377	DAR2903	DDL2903	44199A	44199L	F10E3768	L10E3768
FA	Transport Yellow			DAR80020	DDL80020	83928A	83928L	J5-7800	J4-7800
FB	Omaha Orange			DAR60281	DDL60281	83215A	83215L	J5-7801	J4-7801
FC	Federal Gray			DAR31817	DDL31817	91640A	91640L	J5-7802	J4-7802
FE	Forest Green			DAR44586	DDL44586	7762A	7762L	J5-7803	J4-7803
FH	Olive Drab			DAR42955	DDL42955	29149A	29149L	J5-7804	J4-7804
G7	Alpine White.....	899 3105	899 3121	DQE2702	DDL2702	43499D	43499L	F10A3606	L10A3606
H8	Autumn Red (M).....	899 3114	899 3130	DQE2711	DDL2711	43507D	43507L
J1	Pewter Gray (M).....	899 7092	899 7087	DAR33160	DDL33160	44163A	44163D
P1	Classic Black	899 0636	899 0757	DAR9000	DDL9300	99A	99L	F10B1738	L10B1738

INTERIOR COLORS . . .

LOW GLOSS or FLAT COLORS -

COLOR	PAINT CODE	SPRAY CAN NO.	DITZLER		DUPONT	
			CODE NO.	CODE NO.	CODE NO.	CODE NO.
Berry	75-R-45 (Metal).....	899 3160	50937
	75-R-51 (Plastic).....	899 3098
Black	73-R-27 (Metal).....	899 3155	9399
	73-R-23 (Plastic).....	899 2885	99L
Blue	75-R-2 (Metal).....	899 3156	14736
	75-R-26 (Plastic).....	899 3094
Dark Desert Tan-	78-R-14 (Metal).....	899 3495	24500
	78-R-28 (Plastic).....	899 3499
Desert Beige	76-R-6J (Metal).....	899 7202	24498
	76-R-20J (Plastic).....	899 3501
Flax	78-R-16 (Metal).....	899 7203	24497
	78-R-30 (Plastic).....	899 3502

GENERAL INFORMATION

MISCELLANEOUS PAINTS . . .

COLOR NAME	DITZLER CODE	DUPONT CODE
Bumper Insert - Satin Gray (73-R-58)	33075
Engine Enamel - Blue (73-R-87)	14688
Engine Enamel - Blue Poly	DQE13730
Painted Ornamentation (Cherokee Chief) Black (75-R-100-J)*	9425	44956A
Road Wheels - Golden Eagle - Gold (72-R-61)	23674
Road Wheels - Snow White	2265
Striping Color - Black (72-R-40)	9000
Striping Color - Copper Poly (74-R-24)	24007
Striping Color - Gold (72-R-35)	23681

* Spray Can, Order 899 7177 — Brush Top, Order 899 7176.

1979

EXTERIOR COLORS . . .

PAINT CODE	COLOR NAME	SPRAY CAN	BRUSH TOP	DITZLER		DUPONT		SHERWIN - WILLIAMS	
				AIR DRY ENAMEL	DURACRYL LACQUER	AIR DRY DULUX	LUCITE ACRYLIC LACQUER	ACRYLIC ENAMEL	ACRYLIC LACQUER
1	Primer	899 0451
	Leveler	899 0452
6P	Fire Cracker Red.....	899 3258	899 3270	DAR2824	DDL2824	44116AW	44116LH	F10R3710	L10R3710
8C	Quick Silver (M).....	899 3489	899 3492	DAR3030	DDL3030	45104AH	45104L	F11A3909	L11A3909
9A	Alpaca Brown (M)	899 3569	899 3579	DAR3106	DDL3106	45700A	45700L	35.30169	34.30169
9B	Olympic White	899 3570	899 3580	DAR3107	DDL3107	45701A	45701L	35.30146	34.30146
9C	Russet (M)	899 3571	899 3581	DAR3108	DDL3108	45702A	45702L	35.30174	34.30174
9E	Wedgwood Blue	899 3572	899 3582	DAR3109	DDL3109	45704A	45704L	35.30147	34.30147
9H	Cumberland Green (M).....	899 3573	899 3583	DAR3110	DDL3110	45705A	45705L	35.30093	34.30093
9J	Arrowhead Silver (M).....	899 7229	899 7231	DAR3118	DDL3118	45706A	45706L	35.30176	34.30176
9K	Sable Brown (M).....	899 3574	899 3584	DAR3112	DDL3112	45707A	45707L	35.30148	34.30148
9L	Saxon Yellow	899 3575	899 3585	DAR3113	DDL3113	45708A	45708L	35.30091	34.30091
9N	Morocco Buff	899 3577	899 3587	DAR3115	DDL3115	45710A	45710L	35.30149	34.30149
9P	Bordeaux (M)	899 3578	899 3588	DAR3111	DDL3111	45711A	45711L	35.30150	34.30150
9T	Ensign Blue	899 7230	899 7232	DAR3117	DDL3117	45713A	45713L	35.30170	34.30170
9W	Mandarin Orange	899 7248	899 7249	DAR3116	DDL3116	45714A	45714L	35.30171	34.30171
9Z	Misty Beige	899 3634	899 3607	DAR24635	DDL24635	45850A	45850L	35.30175	34.30175
OB	Smoke Gray (M)	899 3656	899 3668	DAR3239	DDL3239	B8081A	B8081L	35.30716	34.30716
OE	Dark Green (M)	899 3659	899 3671	DAR3242	DDL3242	B8084A	B8084L	35.30719	34.30719
OH	Navy Blue	899 3660	899 3672	DAR3243	DDL3243	B8085A	B8085L	35.30720	34.30720
OJ	Teal Blue	899 7265	899 7266	DAR3244	DDL3244	B8091A	B8091L	35.30721	34.30721
OK	Cameo Tan	899 3661	899 3673	DAR3245	DDL3245	B8086A	B8086L	35.30722	34.30722
OM	Dark Brown (M)	899 3663	899 3675	DAR3247	DDL3247	B8088A	B8088L	35.30724	34.30724
OP	Cardinal Red	899 3664	899 3676	DAR3248	DDL3248	B8089A	B8089L	35.30725	34.30725
OR	Caramel	899 3665	899 3677	DAR3249	DDL3249	B8090A	B8090L	35.30726	34.30726
P1	Classic Black	899 0636	899 0757	DAR9000	DDL9300	99A	99L	F10B1738	L10B1738

GENERAL INFORMATION

INTERIOR COLORS . . .

LOW GLOSS or FLAT COLORS -

COLOR	ACRYLIC	PAINT CODE	DITZLER SPRAY CAN NO.	DUPONT CODE NO.
Black	-	73-R-27 (Metal)..... 73-R-23 (Plastic).....	899 3155 899 2885	9399 99L
Blue	-	79-R-2 (Metal)	899 3593
		79-R-14 (Plastic)	899 3597
Dark Desert Tan-		78-R-14 (Metal)..... 78-R-28 (Plastic).....	899 3495 899 3499	24500
Desert Beige	-	76-R-6J (Metal)	899 7202	24498
		76-R-20J (Plastic)	899 3501
Flax	-	78-R-16 (Metal)	899 7203	24497
		78-R-30 (Plastic)	899 3502
Russet	-	79-R-1 (Metal)	899 3592
		79-R-13 (Plastic)	899 3596

MISCELLANEOUS PAINTS . . .

COLOR NAME	DITZLER CODE	DUPONT CODE
Engine Enamel - Blue (73-R-87).....	14688
Engine Enamel - Blue Poly	DQE13730
Painted Ornamentation (Cherokee Chief) Black (75-R-100-J)*	9425	44956A
Road Wheels - Golden Eagle - Gold (72-R-61)	23674
Road Wheels - Snow White	2265
Striping Color - Black (72-R-40)	9000
Striping Color - Gold (72-R-35).....	23681

* Spray Can, Order 899 7177 - Brush Top, Order 899 7176.

GENERAL INFORMATION

1980

INTERIOR COLORS

EXTERIOR COLORS . . .

PAINT CODE	COLOR NAME	DITZLER		DUPONT		SHERWIN - WILLIAMS			
		DELSTAR	DURACRYL	AIR DRY	LUCITE	ACRYLIC	ACRYLIC		
		SPRAY CAN	BRUSH TOP	ACRYLIC ENAMEL	ACRYLIC LACQUER	DULUX	LACQUER		
	Introductory Assortment	899 7268	899 7269		
1	Primer	899 0451		
	Leveler	899 0452		
1A	Montana Blue	899 7332	899 7334	DAR3366	DDL3366	C8190A	C8190L	35.31503	34.31503
1B	Moonlight Blue	899 3768	899 3776	DAR3367	DDL3367	C8191A	C8191L	35.31504	34.31504
1C	Sherwood Green (M)	899 3769	899 3777	DAR3368	DDL3368	C8192A	C8192L	35.31505	34.31505
1D	Autumn Gold	899 3770	899 3778	DAR3369	DDL3369	C8193A	C8193L	35.31506	34.31506
1E	Copper Brown (M)	899 3771	899 3779	DAR3370	DDL3370	C8194A	C8194L	35.31507	34.31507
1J	Vintage Red (M)	899 3772	899 3780	DAR3372	DDL3372	C8196A	C8196L	35.31509	34.31509
1K	Deep Maroon (M)	899 3773	899 3781	DAR3373	DDL3373	C8197A	C8197L	35.31510	34.31510
1H	Chestnut Brown (M)	899 7333	899 7335	DAR3371	DDL3371	C8195A	C8195L	35.31508	34.31508
1L	Steel Gray (M)	899 3774	899 3782	DAR3374	DDL3374	C8198A	C8198L	35.31511	34.31511
9A	Alpaca Brown (M)	899 3569	899 3579	DAR3106	DDL3106	45700A	45700L	35.30169	34.30169
9B	Olympic White	899 3570	899 3580	DAR3107	DDL3107	45701A	45701L	35.30146	34.30146
9C	Russet (M)	899 3571	899 3581	DAR3108	DDL3108	45702A	45702L	35.30174	34.30174
9L	Saxon Yellow	899 3575	899 3585	DAR3113	DDL3113	45708A	45708L	35.30091	34.30091
9P	Bordeaux (M)	899 3578	899 3588	DAR3111	DDL3111	45711A	45711L	35.30150	34.30150
OB	Smoke Gray (M)	899 3656	899 3668	DAR3239	DDL3239	B8081A	B8081L	35.30716	34.30716
OE	Dark Green (M)	899 3659	899 3671	DAR3242	DDL3242	B8084A	B8084L	35.30719	34.30719
OH	Navy Blue	899 3660	899 3672	DAR3243	DDL3243	B8085A	B8085L	35.30720	34.30720
OJ	Teal Blue	899 7265	899 7266	DAR3244	DDL3244	B8091A	B8091L	35.30721	34.30721
OK	Cameo Tan	899 3661	899 3673	DAR3245	DDL3245	B8086A	B8086L	35.30722	34.30722
OM	Dark Brown (M)	899 3663	899 3675	DAR3247	DDL3247	B8088A	B8088L	35.30724	34.30724
OP	Cardinal Red	899 3664	899 3676	DAR3248	DDL3248	B8089A	B8089L	35.30725	34.30725
OR	Caramel	899 3665	899 3677	DAR3249	DDL3249	B8090A	B8090L	35.30726	34.30726
P1	Classic Black	899 0636	899 0757	DAR9000	DDL9300	99A	99L	F10B1738	L10B1738

GENERAL INFORMATION

INTERIOR COLORS . . .

LOW GLOSS or FLAT COLORS -

COLOR NAME	PAINT CODE	SPRAY CAN NO.	DITZLER CODE NO.	DUPONT CODE NO.	SHERWIN- WILLIAMS NO.
Introductory Assortment - Interior Colors	899 7270
Black - 73-R-27 (Metal)	899 3155	9399
73-R-23 (Plastic)	899 2885	99L
Blue - 79-R-2 (Metal)	899 3593
79-R-14 (Plastic)	899 3597
Dark Desert Tan - 78-R-14 (Metal)	899 3495	24500
78-R-28 (Plastic)	899 3499
Desert Beige - 76-R-6J (Metal)	899 7202	24498
76-R-20J (Plastic)	899 3501
Flax - 78-R-16 (Metal)	899 7203	24497
78-R-30 (Plastic)	899 3502
Medium Brown - 81-P-8 (Metal)	899 3785	24916	34.31525
81-P-23 (Plastic)	899 3790	24917
Nutmeg - 81-P-9 (Metal)	899 3786	34.31526
81-P-24 (Plastic)	899 3791	24930
Russet - 79-R-1 (Metal)	899 3592
79-R-13 (Plastic)	899 3596

MISCELLANEOUS PAINTS . . .

COLOR NAME	DITZLER CODE	DUPONT CODE
Engine Enamel - Blue (73-R-87)	14688
Engine Enamel - Blue Poly	DQE13730
Painted Ornamentation (Cherokee Chief) Black (75-R-100-J)*	9425	44956A
Road Wheels - Golden Eagle - Gold (72-R-61)	23674
Road Wheels - Snow White	2265
Striping Color - Black (72-R-40)	9000
Striping Color - Gold (72-R-35)	23681

* Spray Can, Order 899 7177 - Brush Top, Order 899 7176.

GENERAL INFORMATION

TELEGRAPHIC CODES . . .

PARTS DIVISION

ORDERING PARTS -

There is a decided cost advantage in using code words for common phrases covering shipping instructions. Established code words are as follows:

TYCBA	Q.C.D. collection before or arrival date specified above	Q.C.D.	Q.C.D.
TYCBY	Q.C.D. collection before or arrival date specified above	Q.C.D.	Q.C.D.
TYEAL	Ship by Truck C.O.D.	TYEAL	TYEAL
TYEAN	Ship by Truck	TYEAN	TYEAN
YAM	Ship by Parcel Post	YAM	YAM
YAMS	Ship by Parcel Post Special Delivery	YAMS	YAMS
YAMX	Ship by Parcel Post Special Delivery C.O.D.	YAMX	YAMX
YANK	Ship by Parcel Post C.O.D.	YANK	YANK
YANKL	Emergency order car tied up	YANKL	YANKL
YAP	Ship by Air Parcel Post	YAP	YAP
YAPL	Ship by Air Mail	YAPL	YAPL
YAPLS	Ship by Air Parcel Post C.O.D.	YAPLS	YAPLS
YAPS	Ship by Air Parcel Post Special Delivery	YAPS	YAPS
YAPSL	Ship by Air Parcel Post Special Delivery C.O.D.	YAPSL	YAPSL
YAPSO	Ship by Air Express	YAPSO	YAPSO
YAT	Ship by Air Cargo	YAT	YAT
YATS	Ship by Air Cargo C.O.D.	YATS	YATS
YEAN	Ship by Express	YEAN	YEAN
YEARN	Ship by Express C.O.D.	YEARN	YEARN
YOLD	Ship by Freight	YOLD	YOLD
YOLK	Ship by Freight C.O.D.	YOLK	YOLK
YOPSX	Ship by Air Express C.O.D.	YOPSX	YOPSX
YORE	Ship by Freight with carload	YORE	YORE

EXAMPLE: YAMS BOULEVARD CHICAGO ONE EACH 311 4850 312 9543 313 2723

Decoded reads:

SHIP BY PARCEL POST SPECIAL DELIVERY TO BOULEVARD CHICAGO ONE EACH
PART NUMBERS 311 4850 312 9543 313 2723

GENERAL INFORMATION

PARTS INQUIRIES -

There is a decided cost advantage in using code words for common phrases covering inquiries concerning parts orders, inventories and transfers. It is always good practice to use the following code words whenever possible.

- COB..... Cancelled off back order. Re-entered on invoice -----
JAY..... Advise need for quantity of -----
JEP..... Unable to locate. Duplicating in order to avoid further delay via -----
YEA..... Refer your or our order number -----
YEB..... Our records indicate open account - order specifies C.O.D. - Advise
YEC..... Our records indicate C.O.D. - order specifies open account - Advise
YED..... Advise model, trim and serial number
YEE..... Advise - Right or Left, Front or Rear required
YEF..... Advise - Part number, group number and description do not agree
YEG..... Advise - Part number and price do not agree
YEH..... Cancelling. No record of part number, suggest recheck and reorder
(Form wire)
YEJ..... Cancelling. Fill from zone stock. (Form wire)
YEK..... Advise - Right hand drive part
YEM..... Cancelled - Refer Parts and Accessories Letter -----
YEMS..... Cancelled - Refer Service Letter -----
YEN..... Cancelled as requested
YENS..... Refer parts release and change notice ----- Dated -----
YEO..... Unable to cancel as requested - Shipped
YEP..... Incorrect material received - Check Stock
YEQ..... Cancelling. Purchase locally. Refer to Mr. A. J. Peterson's letter of
1-17-68 subject "Replacement Glass" for further details. (Form wire)
YER..... Verify stock depletion
YES..... Unable to locate in our attempt to cancel as requested. Suggest you
advise dealer accordingly
YET..... Unable to locate in our attempt to cancel. Try to intercept at zone
level in consolidated
YEU..... Believe dealer ordering incorrectly due to extremely limited production
of this first type panel. Recheck and reorder including car sequence
code number. Cancelling. (Form wire)
YEV..... Advise present inventory
YEW..... Advise by wire shipping information of order -----
YEX..... Advise date on which following invoices were received and screened
against back order file
YEY..... Return at once on Z-269 cheapest way prepaid (Quantity), (Part number).
Mail 1 and 2 copies Z-269 attention writer, reference this wire. Advise
YEYS..... Return at once on Z-269 cheapest way prepaid (Quantity), (Part number).
Mail 1 and 2 copies Z-269 attention writer, reference this wire. Advise.
Freight charges will be allowed
YEZ..... Ship at once via (Carrier), (Quantity), (Part number) to (Destination)
Advise
YOA..... Suggest use part ----- and fill from zone stock. Cancelling
(Form wire)

When making inquiries by wire regarding a dealer order, be sure to mention the dealers name, city and state as well as the order and invoice numbers if available.

EXAMPLE: YEW BOULEVARD CHICAGO 195670

Decoded reads:

ADVISE BY WIRE SHIPPING INFORMATION OF ORDER 195670 FOR BOULEVARD CHICAGO

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
- A -			
ABSORBER, Bumper Rail Energy.....	12.310-1		
ACCELERATOR KIT	4.051-1		
ACCENT STRIP, Cover Assembly.....	10.280-3c		
ACTUATOR, Hydramatic Transmission Parking Brake	6.551-1		
ACTUATOR, Ignition Switch	3.131-1		
ACTUATOR, Power Door Lock	23.067-14		
ACTUATOR, Safety Jam Switch.....	23.330-5a		
ACTUATOR, Steering Wheel.....	10.830-1		
ADAPTER, Backup Lamp Switch.....	3.319-4		
ADAPTER, Bracket And Shield Front Wheel Disc	8.845-1		
ADAPTER, Bracket To Support.....	8.224-3		
ADAPTER, Carburetor Air Intake	20.115-2		
ADAPTER, Carburetor To Intake Manifold...	4.004-3		
ADAPTER, Clutch Housing To Transmission	5.052-1		
ADAPTER, Directional Switch To Instrument Panel Harness	3.321-17		
ADAPTER, Duct To Air Cleaner	4.092-2		
ADAPTER, Gasoline Tank Air Vent Hose...	4.141-24		
ADAPTER, Instrument Panel Bracket To Steering Column	10.339-1a		
ADAPTER, Modulator	4.005-1b		
ADAPTER, Power Head – Power Unit On Bracket	8.410-1		
ADAPTER, Power Head Unit	8.415-2		
ADAPTER, Pull Back Spring Anchor	4.080-5		
ADAPTER, Spare Wheel	14.205-1		
ADAPTER, Speedometer Driven Gear To Transfer Case	3.591-2		
ADAPTER, Transfer Case And Transmission Mount.....	18.193-1		
ADAPTER, Transmission Rear Bearing.....	6.052-2		
ADAPTER KIT, Headlamp Ring Mounting ...	3.275-3		
ADHESIVE CAULK, Door Waterdam Paper To Inner Door Panel	23.012-13		
ADJUSTER, Clutch Wear.....	5.187-3		
ADJUSTER, Steering Gear Worm Ball Bearing	10.326-1		
ADJUSTER ASSEMBLY, Power Steering Gear Upper Thrust Bearing	10.635-1		
ADJUSTER KIT, Brake Automatic.....	8.013-1		
AIR DEFLECTOR, Left Vent.....	22.020-1a		
AMMETER	3.600-1		
AMPLIFIER, Radio Power	15.320-25		
ANCHOR, Clutch Throwout Lever Spring ..	5.132-2		
ANCHOR, Spare Tire Hold Down	14.160-2		
ANCHOR ROD, Equalizer.....	8.215-5		
ANTENNA, Radio Front Fender.....	15.030-1		
ANTISQUEAK, Gasoline Tank.....	4.130-3		
ANTISQUEAK, Gasoline Tank Strap	4.152-7		
ANTISQUEAK, Instrument Panel To Cowl Panel	22.056-12		
ANTISQUEAK, Spare Wheel Support	14.202-1		
ARM, Fourspeed Transmission Reverse Shifting	6.085-1		
ARM, Front Bumper Back Bar Side.....	12.175-5		
ARM, Rear Bumper Back Bar.....	12.178-1		
ARM, Steering Linkage Pitman.....	10.104-1		
ARM, Tailgate Support.....	23.006-12		
ARM, Valve Rocker	1.097-1		
ARM, Ventilating Windshield Adjusting	25.012-1		
ARM, Windshield Wiper	22.044-1		
A - Cont.			
ARM AND BRACKET, Outside Rear View Mirror Mounting	15.270-6		
ARM ASSEMBLY, Control Selector	6.190-5		
ARM ASSEMBLY, Liftgate Prop.....	28.600-1		
ARM ASSEMBLY, Reverse Rocker.....	6.198-5b		
ARM ASSEMBLY, Tailgate Support.....	31.134-1		
ARMREST, Door	29.075-1		
ARMREST, Rear Quarter Side.....	29.056-1		
ARMREST ASSEMBLY, Front Seat Center ..	29.140-1		
ASH RECEIVER ASSEMBLY, Front Seat Back	29.110-1		
AXLE, Locking Differential Rear	9.001-2		
AXLE ASSEMBLY, Differential Rear	9.001-1		
AXLE ASSEMBLY, Front	9.301-1		
- B -			
BAFFLE, Choke Housing Shield	4.004-5		
BAFFLE, Front Axle Pinion Bearing Oil....	9.364-4		
BAFFLE, Stop And Backup Light	3.306-3		
BAFFLE ASSEMBLY, Reduction Unit	18.600-5		
BAG, Jack	14.138-5		
BAG, Sun Roof Glass Stowage	28.813-1		
BAIL, Air Cleaner Retainer	4.088-3a		
BALL, Fourspeed Transmission Shift Rail End Plunger Poppet	6.020-6		
BALL, Fourspeed Transmission Synchro- nizer Low And Second Poppet Spring	6.100-8		
BALL, Hydramatic Transmission Control Valve Body Case Pad.....	6.660-3		
BALL, Instrument Panel Ash Receiver.....	22.092-1a		
BALL, Poppet.....	18.565-6		
BALL, Reduction Unit Shift Rail Poppet....	18.620-6		
BALL, Rocker Arm.....	1.099-1		
BALL, Throwout Lever	5.130-3		
BALL, Transfer Case Shift Rod Poppet.....	18.100-6		
BALL JOINT, Adjusting Link	5.160-3		
BALL KIT, Power Steering Gear-Piston.....	10.572-1		
BAND, Hydramatic Transmission Direct Clutch Brake	6.562-2		
BAND, Hydramatic Transmission Rear Bracket	6.592-2		
BAR, Front Bumper Inner Back.....	12.175-1		
BAR, Front Bumper Outer Back.....	12.175-3		
BAR, Front Door Division.....	23.125-1		
BAR, Spare Wheel Mounting	14.150-1		
BASE, Domelamp	3.346-1		
BASE, Electric Tailgate Window Regulator..	23.306-2		
BASE, Front Fender Side Lamp	3.720-3		
BASE, Jack	14.140-1		
BASE, Pick-Up Box Cargo Lamp	3.671-1		
BASE, Rear Cargo Lamp	3.670-1		
BASE, Rear Side Marker.....	3.741-1		
BASE, Tailgate Latch Release Handle.....	31.126-5		
BASE ASSEMBLY, Strobe Warning Lamp	15.516-1		
BASE AND LEAD-IN ASSEMBLY, CB Antenna	15.030-1e		
BATTERY (Dry-Charge).....	3.080-1		
BEARING, Brake Pedal	8.140-2		
BEARING, Camshaft	1.041-1a		
BEARING, Clutch Pedal	5.135-4		
BEARING, Connecting Rod.....	1.138-1		

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
B - Cont.			B - Cont.
BEARING, Differential Needle.....	18.545-2	BELLCRANK, Power Brake Unit Operatin...	8.430-1
BEARING, Drive Sprocket Front	18.520-7	BELLCRANK, Tailgate Latch Actuating...	31.129-1
BEARING, Drive Sprocket Rear.....	18.520-13	BELLCRANK, Upper Clutch Release	5.168-2
BEARING, Front Axle Differential Side	9.341-1	BELLCRANK AND LINK, Rear Door Remote	
BEARING, Front Axle Pinion (Inner Front)	9.352-1	Control To Locking Knob.....	23.057-1
BEARING, Front Axle Pinion (Outer Rear)	9.352-2	BELLOWS, Automatic Speed Control Vacuum	
BEARING, Front Axle Pinion Kit (Inner-Pinion)	9.355-3	Servo	4.380-1
BEARING, Front Axle Pinion Kit (Outer-Pinion)	9.355-4	BELT, Air Conditioning	13.425-1
BEARING, Front Wheel.....	8.292-1	BELT,	13.425-2
BEARING, Gear Shift Cross Shaft Bracket...	7.075-3	Air Conditioning	Thru
BEARING, Gear Shift Upper Lever Housing	7.020-10	Compressor.....	13.425-5
BEARING, Hydramatic Transmission Case	6.503-4	BELT, Alternator And Radiator Fan.....	3.008-1
BEARING, Main	1.023-1	BELT, Crankshaft To Air Pump	
BEARING, Needle	18.615-7	To Compressor.....	4.620-1
BEARING, Oil Pump Drive Shaft	1.161-1a	BELT, Crankshaft To Exhaust Emission	
BEARING, Output Shaft Annular	18.540-9	Air Pump.....	4.612-1
BEARING, Power Steering Gear Pitman Shaft Needle.....	10.595-1	BELT, Front Seat.....	27.290-1
BEARING, Power Steering Gear Upper Thrust Bearing Adjuster Needle.....	10.640-1	BELT, Front Seat Center (Buckle End)	27.290-4b
BEARING, Rear Axle Differential Side.....	9.041-1	BELT, Front Seat Center (Connector End)....	27.290-4
BEARING, Rear Axle Pinion (Inner).....	9.052-2	BELT, Front Seat Outer (Buckle End)	27.290-4a
BEARING, Rear Axle Pinion (Outer).....	9.052-1	BELT, Front Seat Outer (Connector End)....	27.290-3
BEARING, Rear Wheel.....	8.300-1	BELT, Power Steering Pump To Exhaust Emission Air Pump.....	4.615-1
BEARING, Reduction Unit Mainshaft Rear...	18.615-21	BELT, Radiator Fan And Alternator.....	2.016-1
BEARING, Steering Gear Jacket Tube Upper.....	10.344-1	BELT, Rear Seat.....	27.290-9
BEARING, Steering Gear Lower Shaft To Steering Gear Coupling.....	10.745	BELT, Rear Seat Center (Buckle End)	27.290-9c
BEARING, Steering Gear Shaft Lower (Ball)	10.765	BELT, Rear Seat Center (Connector End) ...	27.290-9d
BEARING, Steering Gear Shaft Lower (Roller)	10.827-2	BELT, Rear Seat Outer (Buckle End)	27.290-9a
BEARING, Steering Gear Shaft Upper.....	10.827-1	BELT, Rear Seat Outer (Connector End) ...	27.290-9b
BEARING, Steering Gear Upper Shaft To Lower Shaft Coupling	10.722-1	BELT ASSEMBLY, Shoulder.....	27.292-1
BEARING, Steering Gear Worm.....	10.322-1	BELT SET, Alternator And Radiator Fan	3.088-2
BEARING, Transfer Case Intermediate Gear Shaft Needle.....	18.050-3	BELT SET, Radiator Fan	3.016-2
BEARING, Transfer Case Shift Lever Control Case Shift Rod.....	18.150-2	BEZEL, Clock	3.361-2
BEARING, Transmission Front Ball.....	6.040-1	BEZEL, Dome And Reading Lamp.....	3.346-21
BEARING, Transmission Rear Ball.....	6.052-1	BEZEL, Door Radio Speaker Grille.....	29.070-11
BEARING AND RACES KIT	6.518-5	BEZEL, Door Speaker Grille	15.320-17
BEARING ASSEMBLY, Front Wheel	8.292	BEZEL, Electric Window Regulator	
BEARING ASSEMBLY, Housina Steering Column	10.336-1a	Switch On Instrument Panel.....	23.330-7
BEARING ASSEMBLY, Steering Spindle.....	10.004-13	BEZEL, Front Park And Directional.....	3.292-10
BEARING KIT	8.300-1b	BEZEL, Hazard Warning Switch.....	3.690-3
BEARING KIT, Power Steering Gear Lower Thrust.....	10.565-1	BEZEL, Heated Rear Window Switch	3.770-2
BEARING KIT, Power Steering Gear Upper Thrust.....	10.630-1	BEZEL, Heater And Defroster Switch.....	13.078-1b
BEARING KIT, Rear Axle Differential	9.044-1	BEZEL, Hood Center.....	12.001-7
BEARING KIT, Rear Axle Pinion Inner	9.055-3	BEZEL, Horn Blowing.....	3.401-2
BEARING KIT, Rear Axle Pinion Outer	9.055-4	BEZEL, Ignition Switch.....	3.130-3
BEARING SET, Camshaft.....	1.041-1	BEZEL, Instrument Cluster	3.510-1
BELLCRANK, Accelerator Control	4.060-1	BEZEL, Lighting Switch.....	3.145-3
BELLCRANK, Accelerator Pedal Rod	4.050-1	BEZEL, Pick-Up Box Cargo Lamp	3.671-6
BELLCRANK, Automatic Transmission Throttle Valve Control	16.517-1	BEZEL, Power Door Lock	23.067-4
BELLCRANK, Clutch Release Idler	5.168-1	BEZEL, Power Door Lock And Power Window	23.067-5
BELLCRANK, Column Gear Shift	7.110-1	BEZEL, Radio Trim.....	15.320-8
		BEZEL, Roll Bar And Auxiliary Lamps	3.246-5
		BEZEL, Steering Gear Jacket Tube To Instrument Panel	10.338-3
		BEZEL, Steering Wheel Cover	10.280-7
		BEZEL, Windshield Wiper Control.....	22.038-4
		BLADE, Windshield Wiper.....	22.043-1
		BLADES, Fan	2.002-1
		BLOCK, Fuse	3.155-2
		BLOCK, Junction	3.213-1

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
B - Cont.			B - Cont.
BLOCK, Rear Axle Differential Pinion		BRACE, Power Steering Pump Mounting	
Shaft Thrust	9.039-1	Bracket To Block	10.449-1a
BLOCK, Tailgate Electric Operated		BRACE, Rear Bumper Back Bar	12.178-3
Window Regulator Harness Junction	23.325-5	BRACE, Rear Crossmember	11.066-11
BLOCK ASSEMBLY, Engine Cylinder.....	1.020-1	BRACE ASSEMBLY, Clutch Pedal	5.136-1a
BODY, Headlamp	3.248-2	BRACKET, Accelerator Control Cable.....	4.057-6
BODY, Hydramatic Transmission Oil Pump..	6.535-1	BRACKET, Accelerator Pedal Rod Bellcrank	4.050-3
BODY, Power Steering Pump	10.430-4	BRACKET, Air Conditioning Blower Motor	
BODY, Windshield Wiper Pivot Shaft.....	22.047-1	Housing Support	13.488-5
BOLT, Alternator Pivot Mounting	3.018-6	BRACKET, Air Conditioning Blower Motor	
BOLT, Brake Master Cylinder Piston Stop...	8.050-1	To Housing Mounting	13.072-5
BOLT, Clutch Cover To Flywheel.....	5.050-1	BRACKET, Air Conditioning Compressor	
BOLT, Cylinder Head To Block.....	1.063-1	Mounting.....	13.410-1
BOLT, Housing Retainer – Disc		BRACKET, Air Conditioning Drive Belt Back	
Caliper Brake.....	8.810-4	Idler Pulley	13.435-3
BOLT, Hub To Brake Drum (Front Axle Set).	8.247-1	BRACKET, Air Conditioning Evaporator	
BOLT, Hub To Brake Drum (Rear Axle Set)..	8.247-2	Hoses To Dash	13.050-8a
BOLT, Pivot To Cylinder Head.....	1.101-2	BRACKET, Air Conditioning Intermediate	
BOLT, Power Brake Master Cylinder Stop ...	8.515-2	Pulley Mounting.....	13.430-3
BOLT, Rear Axle Drive Shaft.....	9.068-2	BRACKET, Air Conditioning Intermediate	
BOLT, Steering Column Locking.....	10.337-2	Pulley Upper Adjusting	13.430-7
BOLT, Steering Knuckle To Spindle.....	10.004-6	BRACKET, Air Deflector Vent Control	
BOLT, Turning Radius Stop.....	10.010-1	To Panel.....	22.020-10
BOOT, Brake Master Cylinder	8.052-1	BRACKET, Alternator	3.018-1
BOOT, Clutch Cable	5.161-5	BRACKET, Alternator Belt Tension	
BOOT, Clutch Pedal Rod Seal	5.160-6	Adjusting	3.018-4
BOOT, Clutch Pivot Inner	5.168-15	BRACKET, Ammeter	3.600-4
BOOT, Clutch Pivot Outer	5.168-14	BRACKET, Ash Receiver To Instrument	
BOOT, Clutch Throwout Lever.....	5.125-1	Panel.....	22.092-2
BOOT, Floor Gear Shift Lever	7.013-2	BRACKET, Automatic Speed Control Vacuum	
BOOT, Headlamp Dimmer Switch Cover	3.158-4	Servo Bellows Mounting	4.385-1
BOOT, Reduction Unit Cable	18.650-1a	BRACKET, Automatic Transmission Throttle	
BOOT, Seat Belt.....	27.290-8	Valve Control Rod Pivot (Lower)	16.515-1
BOOT, Shoulder Belt	27.292-5	BRACKET, Auxiliary Gasoline Tank	
BOOT, Transfer Case And Transmission		Hold Down	4.131-16
Shift Lever.....	18.128-1a	BRACKET, Auxiliary Oil Cooler	16.231-4
BOOT, Transmission And Transfer Case		BRACKET, Battery Adapter	3.082-9
Shift Lever.....	7.013-2a	BRACKET, Battery Hold Down.....	3.084-1
BOTTLE, Coolant Recovery.....	2.025-1	BRACKET, Bellcrank Retaining	5.168-3
BOW, Cap Roof Support.....	28.714-1	BRACKET, Bellcrank Support	18.680-1
BOX, Battery Tray	3.082-1	BRACKET, Bezel Support.....	12.001-10
BOX, Glove	22.058-1	BRACKET, Body Hold Down	11.054-1
BOX, Trailer Towing Relay And Circuit		BRACKET, Brake Line Hose Support.....	8.116-5
Breaker.....	3.780-10	BRACKET, Brake Tube Assembly To Dash	
BRACE, Air Conditioning Compressor		Panel.....	8.101-4
To Intake Manifold Support	13.410-10	BRACKET, Carburetor Choke Heater Tube	
BRACE, Alternator Mounting Front	3.018-1a	To Clean Air Tube	4.020-10
BRACE, Body Side Lower Front Panel.....	31.065-2	BRACKET, Carburetor Lever To Accelerator	
BRACE, Clutch Cable Bracket To Transfer		Cable.....	4.070-5
Case	5.165-8	BRACKET, Carburetor Pull Back Spring	4.080-2
BRACE, Draw Bar	11.068-4	BRACKET, Choke And Air Deflector Cable ..	22.056-13
BRACE, Draw Bar Upper.....	11.066-14	BRACKET, Cigar Lighter	3.352-7
BRACE, Driver's Seat Cushion Support	29.132-3a	BRACKET, Clamp To Insulator	4.219-1d
BRACE, Exhaust Emission Air Pump		BRACKET, Clutch Cable Anchor	5.165-3
Reinforcement	4.525-1	BRACKET, Clutch Control Cable	5.165-1
BRACE, Exhaust Emission Air Pump Support	4.515-1	BRACKET, Clutch Pedal Retainer	5.136-1
BRACE, Exhaust Pipe.....	4.195-1	BRACKET, Clutch Slave Cylinder.....	5.221-2
BRACE, Fender	31.065-1	BRACKET, Clutch Throwout Lever	
BRACE, Front Fender Stone Shield		Return Spring	5.190-2
Extension	12.076-3	BRACKET, Coolant Recovery Bottle	2.025-3
BRACE, Heater Control Housing To Panel...	13.017-2a		

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
B - Cont.			
BRACKET, Cowl Side Front Outer Splash Apron.....	20.155-4	BRACKET, Hydramatic Transmission Parking Brake	6.552-6
BRACKET, Dash Panel Rod Mounting.....	20.130-4	BRACKET, Ignition Coil.....	3.060-1
BRACKET, Directional Signal Flasher Holder.....	3.330-2	BRACKET, Ignition Wire Separation	3.230-2
BRACKET, Directional Signal Switch Mounting	3.321-4	BRACKET, Injection Manifold Hose Clip....	4.621-2
BRACKET, Distributor Vacuum Control Solenoid	3.051-7	BRACKET, Insulator Support Muffler Heat Deflector.....	4.211-2
BRACKET, Division Bar To Inner Door	23.125-1b	BRACKET, Latch.....	14.210-3
BRACKET, Energy Absorber Body Mounting ..	12.320-1	BRACKET, License Lamp.....	3.336-1
BRACKET, Energy Absorber To Bumper Rail Mounting.....	12.315-1	BRACKET, License Plate Holder	3.336-3
BRACKET, Engine Front Support Mounting..	1.004-3	BRACKET, Liftgate Support Arm	28.600-3
BRACKET, Evaporator To Evaporator Support	13.488-6	BRACKET, Liquid Check Valve	20.275-1
BRACKET, Exhaust Emission Air Pump Mounting.....	4.520-1	BRACKET, Longitudinal Seat Front Stabilizer	29.201-5
BRACKET, Exhaust Gas Recirculating Back Pressure Sensor.....	4.700-5	BRACKET, Longitudinal Seat Rear Stabilizer	29.201-7
BRACKET, Exhaust Pipe Support Clamp	4.195-1b	BRACKET, Master Cylinder Brake Tube To Frame Mounting	8.101-6
BRACKET, Fender To Dash	12.076-1	BRACKET, Muffler Rear Hanger And Intermediate Pipe Support	4.219-1b
BRACKET, Flasher Mounting.....	3.690-6	BRACKET, Muffler Support To Crossmember	4.200-2a
BRACKET, Foot Operated Parking Brake Stabilizer	8.180-13	BRACKET, Muffler To Frame	4.200-2
BRACKET, Front Axle Bumper Frame	9.304-3	BRACKET, Oil Filler Tube Support	6.510-4
BRACKET, Front Brake Hose	8.116-4	BRACKET, Oil Level Indicator.....	1.187-3
BRACKET, Front Door Division Bar To Door Panel	23.125-2	BRACKET, Oil Pressure Gauge.....	3.605-2b
BRACKET, Front Door Glass Stop	25.054-1	BRACKET, Parking Brake Cable Guide....	8.224-1
BRACKET, Front Door Restraint Pin	23.015-5	BRACKET, Parking Brake Cable Pivot Anchor	8.224-5
BRACKET, Front Door Speaker Mounting....	15.320-13a	BRACKET, Parking Brake Release Cable ...	8.182-6
BRACKET, Front Energy Absorber To Support.....	12.322-1	BRACKET, Parking Brake Warning Lamp Switch	3.650-3
BRACKET, Front Engine Mounting Support..	1.004-1	BRACKET, Pick-Up Box Body Hold Down...	31.005-3
BRACKET, Front License Plate	14.098-1	BRACKET, Pintle Hook	11.066-7
BRACKET, Front Shock To Frame	11.201-1	BRACKET, Power Steering Pump Adjusting .	10.431.1a
BRACKET, Front Spring Bumper	11.070-5	BRACKET, Power Steering Pump Mounting ..	10.448-1
BRACKET, Front Suspension Sway Stabilizer Connecting Link To Spring Tie Plate	10.260-8	BRACKET, Power Steering Pump Pivot....	10.431-1
BRACKET, Front Suspension Sway Stabilizer To Frame	10.260-3	BRACKET, Power Steering Support.....	13.430-10
BRACKET, Front To Side Rail	31.205-1	BRACKET, Radiator Stabilizer	2.021-1
BRACKET, Fuel Line To Frame.....	4.160-7	BRACKET, Radio Mounting.....	15.320-10
BRACKET, Fuel Vapor Storage Canister....	4.144-2	BRACKET, Radio Speaker Balance Control..	15.320-12a
BRACKET, Gasoline Tank Mounting.....	4.152-4	BRACKET, Rear Auxiliary Floor Carpet	29.420-6
BRACKET, Gasoline Tank Strap Support....	4.152-3	BRACKET, Rear Brake Tube Tee At Axle Differential Cover.....	8.112-1
BRACKET, Gear Selector Dial Lamp	7.535-1	BRACKET, Rear Bumper Mounting	12.178-2a
BRACKET, Gear Shift Cross Shaft	7.075-1	BRACKET, Rear Compartment	15.320-14a
BRACKET, Generator Assembly.....	3.014-4	BRACKET, Rear Crossmember Angle Stabilizer	31.005-5
BRACKET, Glass Stop	23.040-4	BRACKET, Rear Door Division Bar To Door Panel	23.165-2
BRACKET, Grille To Grille Face Panel	20.116-4	BRACKET, Rear Door Glass Stop.....	25.054-4
BRACKET, Heated Rear Window Indicator Lamp	3.770-5	BRACKET, Rear Engine Crossmember Reinforcement	1.010-1a
BRACKET, Heater Hose To Fender	13.050-8	BRACKET, Rear License Plate.....	14.098-3
BRACKET, Heat Shield Support.....	4.211-2a	BRACKET, Rear License Plate Spring Retaining	14.098-10
BRACKET, Hood Catch.....	12.060-17	BRACKET, Rear Quarter Window Pivotina Glass Handle	25.027-14
BRACKET, Hood Prop Catch	12.008-5	BRACKET, Rear Seat Cushion Pan Hinge Pivot	29.181-4
BRACKET, Hood Prop Retainer.....	12.008-3	BRACKET, Rear Shock Mounting.....	11.224-1
BRACKET, Hood Prop Rod Support.....	12.008-8	BRACKET, Rear Spring Hanger Pivot.....	11.107-1
BRACKET, Hydramatic Transmission Oil Cooler Lines Support	6.631-6	BRACKET, Reduction Unit Control Cable Clamp	18.630-5

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
B - Cont.			B - Cont.
BRACKET, Release Rod	29.105-17	BRACKET AND PIN ASSEMBLY, Exhaust	
BRACKET, Retractable Security Cover		Pipe Support	4.178-5
Catch	29.147-3	BRACKET AND WELD BOLT, Exhaust Pipe	
BRACKET, Retractable Security Cover		Heat Shield To Manifold Stud	4.180-2
Mounting	29.147-2	BRACKET ASSEMBLY, Bellcrank Support	7.112-1
BRACKET, Roll Bar And Auxiliary Lamp	3.246-17	BRACKET ASSEMBLY, Body Hold Down	
BRACKET, Seat Back Frame Extension	29.201-3	Stabilizer	20.001-5a
BRACKET, Shield To Frame Rail	4.130-10	BRACKET ASSEMBLY, Front Bumper Rail	
BRACKET, Shift Lever Support	18.125-4	Mounting	12.176-1
BRACKET, Side Rail To Roll Bar	31.210-1	BRACKET ASSEMBLY, Jack Hold Down	14.139-1
BRACKET, Skid Plate	4.131-6	BRACKETS, Draw Bar To Frame	11.068-2c
BRACKET, Skid Plate To Front Gasoline		BREAKER, Electric Operated Window	
Tank	4.131-4	Regulator Harness Circuit	23.325-1
BRACKET, Spare Wheel Support	14.201-1	BREAKER, Power Seats Circuit	29.127-5
BRACKET, Spare Wheel Support To Body	14.200-1	BREAKER, Trailer Towing Harness Circuit ..	3.780-6
BRACKET, Spring Pivot	11.008-1	BREAKER, Windshield Wiper Motor Circuit ..	22.036-3
BRACKET, Spring Shackle	11.005-1	BREATHER, Front Axle	9.301-2
BRACKET, Stabilizer Brake Pedal Retainer	8.164-4	BREATHER, Rear Axle	9.001-3
BRACKET, Starting Motor	3.020-3	BREATHER, Transfer Case	18.010-2
BRACKET, Steering Gear	10.290-3	BREATHER, Transmission Case	6.005-3
BRACKET, Steering Damper To Leaf Spring	10.260-15	BREATHER ASSEMBLY	18.560-4
BRACKET, Steering Damper To Tie Rod	10.260-16	BRIDGE, Rocker Arm	1.101-1a
BRACKET, Steering Gear Jacket Tube		BRUSH, Horn Contact	3.400-8
To Instrument Panel	10.339-1	BULB	3.215-1
BRACKET, Steering Gear Jacket Tube		BULB, Ammeter Or Voltmeter	3.600-6
To Instrument Panel Seat	10.339-6	BULB, Ash Receiver Lamp	22.092-7
BRACKET, Step Support	31.051-1	BULB, Backup Lamp	3.317-4
BRACKET, Sun Visor Retaininga	29.003-4	BULB, Brake Pressure Warning Lamp	3.651-3
BRACKET, Support Clutch Release Idler		BULB, Clock	3.369-1
Pivot Outer	5.168-6	BULB, Courtesy Lamp	3.349-5
BRACKET, Tachometer	3.700-2	BULB, Domelamp	3.346-10
BRACKET, Tail And Backup Lamp	31.006-1	BULB, Engine Compartment	3.662-3
BRACKET, Tailgate Pillar Lower Filler		BULB, Front Fender Side Lamp	3.720-4
Extension	20.315-9	BULB, Gear Selector Dial Lamp	7.535-8
BRACKET, Tailgate Support Arm		BULB, Headlamp	3.280-1
To Pickup Box	31.134-4	BULB, Heated Rear Window	3.770-4a
BRACKET, Tailgate Support Arm		BULB, Heater And Defroster Control Lamp	13.017-13
To Tailgate	31.134-2	BULB, Heater Control Harness	13.017-21
BRACKET, Tailgate Support Cable	23.037-1	BULB, Instrument Cluster Illumination	3.531-4
BRACKET, Tail Pipe Insulator Hanger		BULB, License Plate Lamp	3.341-13
To Frame	4.234-7a	BULB, Parking And Front Directional	
BRACKET, Tail Pipe Support	4.234-1	Signal Lamp	3.292-7
BRACKET, Tail-Stop And Directional Lamp	3.300-3	BULB, Pick-Up Box Cargo Lamp	3.671-14
BRACKET, Tail-Stop-Directional		BULB, Rear Domelamp	3.670-5
And Backup Lamp	3.300-2	BULB, Rear Side Marker Lamp	3.740-4
BRACKET, Tire Stop	14.210-9	BULB, Roll Bar And Auxiliary Lamp Switch ..	3.246-16
BRACKET, Torque Reaction Restrictor	18.197-6	BULB, Tachometer	3.700-5
BRACKET, Tow Shackle Assembly To Frame	11.067-3	BULB, Tail And Stop Lamp	3.312-2
BRACKET, Trailer Harness Receptacle	3.780-4	BULB, Tail, Stop And Directional	3.312-1
BRACKET, Transfer Case And Transmission		BUMPER, Axle Housing Front Windup Pinion	9.304-3a
Mounting	18.215-1	BUMPER, Brake Pedal Stop	8.140-6
BRACKET, Transfer Case And Transmission		BUMPER, Carrier Assembly	14.210-5
Support Plate Insulator	18.196-1	BUMPER, Cowl Ventilator Intake Cover	
BRACKET, Transfer Case Insulator Support	18.190-1	To Dash Panel	22.016-4
BRACKET, Transfer Case Support	18.189-1	BUMPER, Dovetail Receptacle Insert	23.006-17b
BRACKET, Transfer Case Torque Reaction	18.200-1	BUMPER, Fold Down Windshield	12.009-1
BRACKET, Transfer Case Torque Reaction		BUMPER, Front Axle	9.304-1
Insulator Stud	18.200-7	BUMPER, Front Door Glass Stop	25.054-3
BRACKET, Transmission Kickdown Switch	6.665-2	BUMPER, Front Seat Frame	29.103-10
BRACKET, Ventilating Windshield Arm		BUMPER, Front Springa	11.070-3
Mounting (On Frame)	25.013-1	BUMPER, Glass Stop Bracket	23.040-6
BRACKET, Ventilating Windshield Arm		BUMPER, Glove Box Door	22.072-1
Mounting (On Windshield)	25.014-1	BUMPER, Hood Adjustable	12.001-12
BRACKET, Voltmeter	3.600-8	BUMPER, Latch Bracket	14.210-2
BRACKET, Windshield Wiper Motor Mountina	22.027-3	BUMPER, Rear Axle	9.086-1

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.	
B - Cont.			B - Cont.	
BUMPER, Rear Axle Housing	9.004-1	BUSHING, Throttle Valve Lever To Rod	16.505-3	
BUMPER, Rear Cushion Frame To Floor Riser	29.181-9	BUSHING, Transfer Case Rear Bearing Cap .	18.080-3	
BUMPER, Rear Door Glass Stop	25.054-6	BUSHING, Transfer Case Shift Lever.....	18.125-3	
BUMPER, Rear License Plate	14.108-2	BUSHING, Transfer Case Shifting Lever....	18.180-4	
BUMPER, Rear Seat Adjustable Stop.....	29.181-8	BUSHING, Transmission Reverse Idler Gear.	6.170-4a	
BUMPER, Spare Tire	14.203-3	BUSHING, Valve Stem To Wheel	8.270-3	
BUMPER, Stationary Hood.....	12.001-14	BUSHING, Wire To Roll Bar	3.246-12	
BUMPER, Steering Wheel Actuator	10.830-2	BUSHING AND VALVE, Hydramatic Trans-mission Pressure Regulator Booster	6.512-1	
BUMPER, Steering Wheel Actuator Down....	10.830-5	BUTTON, Center Horn Blowing Cap	3.400-1	
BUMPER, Tailgate.....	23.006-1b	BUTTON, Door Trim Panel	29.070-7	
BUMPER, Tailgate End Panel	31.135-2	BUTTON, Plug.....	27.038-1	
BUMPER, Tailgate Latch Release Handle...	31.126-7	BUTTON, Upholstery.....	29.367-1	
BUMPER, Tailgate Support Arm.....	23.006-15	BUZZER, Headlight Warning	3.140-6	
BUMPER, Windshield	25.015-1	BUZZER, Seat Belt Warning And Key Alarm .	3.786-1	
BUMPER - SCREW - NUT, Grille Panel	2.050-13			
BUMPERETTE.....	12.168-11			
BUSHING, Bellcrank Assembly To Lower Pivot Rod To Bracket.....	16.505-2	- C -		
BUSHING, Bellcrank Shaft	7.110-3	CABLE, Accelerator	4.057-1	
BUSHING, Bellcrank To Bracket.....	4.050-7	CABLE, Automatic Speed Control Reaulator To Transfer Case	3.570-2	
BUSHING, Carburetor Rod Throttle Valve Control At Bellcrank.....	16.503-2	CABLE, Battery Ground	3.196-1	
BUSHING, Clock Knob.....	3.360-3	CABLE, Battery Ground Jumper		
BUSHING, Clutch Release Idler Pivot Inner .	5.168-16	To Crossmember	3.196-4	
BUSHING, Clutch Release Idler Pivot Outer .	5.168-17	CABLE, Battery To Starter Relay.....	3.200-2	
BUSHING, Clutch Rod Retainer To Floor....	5.160-9	CABLE, Brake Shoe Automatic Adjusting Link.....	8.010-1	
BUSHING, Column Gear Shift Upper Lever...	7.020-11	CABLE, Clutch Release	5.161-1	
BUSHING, Crankshaft Pilot	1.043-1	CABLE, Equalizer Cable To Rear Wheels...	8.220-1	
BUSHING, Defroster Nozzle Outlet.....	13.118-4	CABLE, Equalizer To Rear Cable.....	8.215-1	
BUSHING, Front And Rear Shock Absorber Mounting	11.202-1	CABLE, Foot Operated Parking Brake Lever To Equalizer	8.192-1	
BUSHING, Front Door Locking Rod.....	23.055-2	CABLE, Front Fender Side Lamp.....	3.720-5	
BUSHING, Front Spring	11.144-1	CABLE, Heater And Defroster Control (Defroster)	13.017-15	
BUSHING, Gear Shift Damper	6.190-7	CABLE, Heater And Defroster Control (Heater Damper)	13.017-17	
BUSHING, Gear Shift Rod	18.690-4	CABLE, Rear Side Marker Lamp.....	3.742-1	
BUSHING, Hydramatic Transmission Case...	6.503-3	CABLE, Reduction Unit.....	18.650-1	
BUSHING, Hydramatic Transmission Center Support	6.556-4	CABLE, Secondary Air Vent Control.....	22.020-6a	
BUSHING, Hydramatic Transmission Oil Pump Body.....	6.535-3	CABLE, Secondary Temperature Control	13.017-8a	
BUSHING, Hydramatic Transmission Oil Pump Stator Shaft	6.535-4	CABLE, Solenoid To Starting Motor.....	3.020-8	
BUSHING, Hydramatic Transmission Output Shaft	6.635-4	CABLE, Speedometer		
BUSHING, Hydramatic Transmission Sun Gear Shaft.....	6.518-3	Thru	3.570-1b	
BUSHING, Leaf Spring Shackle	11.170-3	CABLE, Tailgate Support	23.036-1	
BUSHING, Lock Release Rod Guide	29.105-20	CABLE, Temperature Control.....	13.017-8	
BUSHING, Rear Door Hinge	23.023-1a	CABLE, Voltmeter	3.600-10	
BUSHING, Rear Spring.....	11.144-2	CABLE ASSEMBLY, Power Seat Motor		
BUSHING, Reduction Unit Shift Lever	18.660-2	To Track.....	29.126-2	
BUSHING, Shifter Shaft	18.180-6b	CALIPER ASSEMBLY, Front Wheel Disc Brake	8.810-1	
BUSHING, Shock Absorber Mounting	11.202-1	CAM, Directional Signal Cancelling.....	3.321-14	
BUSHING, Speedometer Driven Gear.....	18.580-5	CAM, Tailgate Slam	28.580-2	
BUSHING, Steering Gear Cross Shaft	10.307-1	CAMSHAFT	1.040-1	
BUSHING, Steering Gear Cross Shaft	10.307-2	CANISTER, Fuel Vapor Storage.....	4.144-1	
BUSHING, Steering Gear Jacket Tube Lower.	10.346-1	CAP, Air Conditioning Compressor Suction And Discharge Valve Stem.....	13.405-3	
BUSHING, Steering Wheel Cover Snap In....	10.280-6	CAP, Air Deflector Drain Hose End	22.020-3d	
BUSHING, Steering Wheel To Cover	3.401-5	CAP, Auxiliary Gasoline Tank Filler Tube ..	4.131-23	
BUSHING, Tailgate Hinge.....	23.006-6f	CAP, Battery Vent	3.080-2	
BUSHING, Threespeed Transmission Mainshaft	6.068-5a	CAP, Battery Vent	15.072-1	
		CAP, Canister Carburetor Bowl Vent	4.144-1d	

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
C - Cont.			C - Cont.
CAP, Carburetor Vacuum Nipple	4.001-3	CASE, Rear Axle Differential (LLD)	9.024-1
CAP, Coolant Recovery	2.025-2	CASE, Rear Axle Differential (WLD)	9.024-2
CAP, Distributor	3.032-1	CASE, Transfer	18.010-1
CAP, Door Speaker Wire Retainer	15.320-11c	CASE, Transfer Case Shift Lever Control	18.150-1
CAP, Engine Oil Pump Release Valve Spring	1.187-1	CASE, Transmission	6.005-1
CAP, Escutcheon Door Assist Handle	29.072-3	CASE ASSEMBLY, Front Axle Differential	9.321-1
CAP, Front Body Pillar Drip Moulding.....	20.395-3	CASE ASSEMBLY, Rear Axle Differential (LLD)	9.021-1
CAP, Front Fender Radio Antenna Dress	15.030-3	CASE ASSEMBLY, Rear Axle Differential (WLD)	9.021-2
CAP, Front Propeller Shaft Sleeve Yoke Dust	9.110-1	CATALYST, Catalytic Converter	4.212-5
CAP, Front Wheel Grease Retainer Outer	8.296-2	CATCH, Hood Assembly	12.060-15
CAP, Gasoline Tank Vent Outlet Tubes.....	4.130-4	CATCH, Windshield Hold Down	25.006-1
CAP, Intake Manifold Nipple	1.067-21	CAULK, Auto	30.020-2
CAP, Nonlocking Gasoline Tank Filler	4.138-1	"C" CLIP, Equalizer Cable To Rear Cable	8.215-4
CAP, Oil Filler.....	1.022-1	CEMENT	30.020-1
CAP, Power Steering Pump Oil Reservoir Filler.....	10.465-2	CENTER SUPPORT AND RACE KIT, Hydramatic Transmission	6.556-1
CAP, Radiator Core	2.032-1	CHAIN, Automatic Speed Control Bellows To Shaft	4.390-1
CAP, Rear Propeller Shaft Sleeve Yoke Dust	9.110-2	CHAIN, Drive	18.530-1
CAP, Rear Wheel Grease Retainer Outer	8.296-3	CHAIN, Timing	1.130-1
CAP, Sun Roof Hinge Clip Screw	28.805-4	CHAIN ASSEMBLY, Tailgate	23.006-6c
CAP, Sun Visor End Retaining Rod	29.004-2	CHAIN ASSEMBLY, Tailgate	31.160-1
CAP, Tailgate Upper Outer End	23.013-6	CHANNEL, Front Door Lowering Glass Bottom	25.030-1
CAP, Tee Nipple	1.117-4	CHANNEL, Front Door Lowering Glass Slide	25.036-1
CAP, Threespeed Transmission Shift Rail ...	6.018-4	CHANNEL, Rear Door Division Bar Stationary Glass	23.165-1
CAP, Transfer Case Front Output Shaft Rear Bearing.....	18.028-1	CHANNEL, Rear Door Lowering Glass Bottom	25.032-1
CAP, Transfer Case Output Shaft Bearing...	18.015-1	CHANNEL, Rear Door Lowering Glass Slide	25.038-1
CAP, Transfer Case Rear Bearing.....	18.080-1	CHANNEL, Rear Window Glass	25.044-1
CAP, Transmission Control Housing.....	7.013-2b	CHANNEL, Tailgate Glass Bottom	25.033-1
CAP, Transmission Front Bearing.....	6.017-1	CHANNEL, Tailgate Glass Run	25.033-4
CAP, Wheel Hub.....	8.274-1	CHANNEL, Tailgate Glass Slide Lower	25.039-1
CAP, Windshield Washer Reservoir	22.052-8	CHANNEL, Windshield Glass	25.002-1
CAPACITOR, Radio Interference Suppression	15.320-18	CHECK VALVE KIT, Power Steering Gear Pressure	10.524-1
CARBURÉTOR	4.001-1	CLAMP, Auxiliary Gasoline Tank Hose	4.131-12
CARPET, Front Floor	29.294-3	CLAMP, Bolt Battery Hold Down	3.095-1
CARPET, Front Floor Extension (One-Piece)	29.294-5	CLAMP, Bypass Hose	2.080-9
CARPET, Front Floor Extension (Two-Piece)	29.294-4	CLAMP, Cap To Vent Valve Tee	1.117-5
CARPET, Front Floor Rear	29.294-3a	CLAMP, Carburetor Vacuum Nipple Cap	4.001-4
CARPET, Front Quarter Trim Panel	29.460-5a	CLAMP, Clutch Pedal Push Rod Boot	5.160-6b
CARPET, Rear Auxiliary Floor	29.420-2	CLAMP, Conduit	18.585-12
CARPET, Rear Auxiliary Side Panel Support	29.420-5	CLAMP, Crankcase Vent Valve Hose	1.117-2
CARPET, Rear Floor	29.302-2	CLAMP, Distributor	3.039-1
CARPET, Rear Floor Riser	29.202-3	CLAMP, Exhaust Emission Air Pump To Backfire Valve Hose	4.586-1
CARPET, Rear Floor Sill	29.302-3	CLAMP, Exhaust Emission Backfire Valve (At Tee Or Manifold)	4.566-1
CARPET, Rear Quarter Trim Panel	29.460-6	CLAMP, Exhaust Emission Backfire Valve (At Valve)	4.566-2
CARPET, Tailgate	29.465-1	CLAMP, Exhaust Emission Backfire Valve To Injection Manifold Hose	4.600-2
CARPET, Wheelhouse Trim	29.435-1	CLAMP, Exhaust Pipe To Bracket	4.195-3
CARPET ASSEMBLY, Front And Rear Floor	29.294-3b	CLAMP, Expansion Valve Bulb	13.470-1a
CARPET ASSEMBLY, Rear Auxiliary Floor	29.420-2a		
CARRIER, Hydramatic Transmission Reaction Assembly	6.590-1		
CARRIER ASSEMBLY, Hydramatic Transmission Output	6.592-1		
CARRIER ASSEMBLY, Swingout Spare Tire ..	14.210-1		
CASE, Console Compartment Door Lock	27.280-1a		
CASE, Front Axle Differential	9.324-1		
CASE, Glove Box Lock	22.073-2b		
CASE, Heater Air Inlet	13.012-2f		
CASE, Hydramatic Transmission	6.503-1		
CASE, Instrument Cluster	3.505-1		

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
C - Cont.			
CLAMP, Extension Pipe To Exhaust Pipe...	4.178-2a	CLAMP ASSEMBLY, Muffler To Tail Pipe Or Tail Pipe To Insulator	4.230-1
CLAMP, Filler Hose To Filler Neck Flange.	4.141-17a	CLAMP RING, Sun Roof	28.808-1
CLAMP, Filler Neck To Flange.....	4.141-2	CLAMPS, Fuel Line.....	4.160-6
CLAMP, Fuel Pump In-Line Filter Hose	4.110-5	CLAMPS, Vapor Canister Hose	4.144-17
CLAMP, Fuel Vapor Line Connecting.....	4.142-10	CLEANER, Carburetor Air	4.088-1
CLAMP, Fuel Vapor Storage Canister To Brackets	4.144-6	CLEVIS, Parking Brake Cable Pivot.....	8.215-2
CLAMP, Gasoline Filler Neck Tube Connector To Tank.....	4.141-14	CLIP, Accelerator Cable To Carburetor Bellcrank	4.057-1a
CLAMP, Gasoline Tank Air Vent Hose.....	4.141-21	CLIP, Alarm Switch Retaining	3.140-2
CLAMP, Gasoline Tank Filler Hose	4.141-2a	CLIP, Anchor Accelerator Spring.....	4.050-5
CLAMP, Gasoline Tank Filler Neck.....	4.141-4	CLIP, Brake Tube Fastening.....	8.116-3
CLAMP, Gasoline Tank Filler Neck To Tank	4.141-5	CLIP, Brake Tube Left And Right At Master Cylinder	8.106-2
CLAMP, Gasoline Tank Filler Neck Tube To Connector	4.141-12	CLIP, Brake Tube To Clutch Boot	8.106-4
CLAMP, Gasoline Tank Vent Outlet Tube Cap	4.130-5	CLIP, Canister Hose To Air Cleaner	4.144-11
CLAMP, Harness To Directional Switch....	3.321-5	CLIP, Clutch Cable To Dash Panel And Engine Mounting Bracket	5.161-3
CLAMP, Heater Core Drain Hose.....	13.028-5	CLIP, Exhaust Emission Backfire Valve To Injection Manifold Hose	4.621-1
CLAMP, Heater Hose.....	13.086-1	CLIP, Front Fender Side Marker Cable.....	3.720-6
CLAMP, Heater Hose, Heater Core To Intake Manifold	13.050-8a	CLIP, Front Master Cylinder Bracket Tube To Bracket	8.101-7a
CLAMP, Heat Shield To Exhaust Pipe	4.180-6	CLIP, Fuel Line To Rocker Arm Cover	4.176-2
CLAMP, Hose To Radiator	2.020-5	CLIP, Gasoline Tank Vent Tube	4.141-22a
CLAMP, Hydramatic Transmission Oil Cooler Tube At Radiator	6.631-9	CLIP, Gear Shift Rod Trunnion Retaining ...	7.125-9
CLAMP, Hydramatic Transmission Vacuum Hose	6.515-3	CLIP, Heater Hose To Upper Radiator Hose.	13.050-11
CLAMP, Ignition Coil.....	3.056-4	CLIP, Hydramatic Transmission Oil Tube...	6.631-8
CLAMP, Intake Manifold Nipple Cap.....	1.067-22	CLIP, Hydramatic Transmission Vacuum Tube Support	6.515-4
CLAMP, Power Brake Unit Vacuum Hose....	8.460-7	CLIP, Oil Filler Tube To Bracket.....	6.510-5
CLAMP, Power Steering Gear Worm Ball Bearing Return Guide.....	10.577-1	CLIP, Overflow Hose To Core.....	2.020-4
CLAMP, Power Steering Return Hose To Reservoir	10.470-4	CLIP, Power Steering Pump Hoses.....	10.470-5
CLAMP, Radiator Hoses.....	2.039-1	CLIP, Power Steering Pump Hoses To Frame	10.470-6
CLAMP, Rear Propeller Shaft Body End Dust Cover	9.113-4	CLIP, Reduction Unit Cable To Brake Tube .	18.650-7
CLAMP, Rear Propeller Shaft Dust Cover ...	9.113-5	CLIP, Return Line To Fuel Line	4.110-7
CLAMP, Reduction Unit Control Cable Bracket.....	18.630-7	CLIP, Shoulder Belt Comfort	27.292-6
CLAMP, Rollover Valve Hose	4.146-4	CLIP, Shoulder Belt Retaining.....	27.292-3
CLAMP, Seat Lea.....	29.201-15	CLIP, Spring Retaining.....	8.220-5
CLAMP, Speedometer Driven Gear Adapter ..	3.591-5	CLIP, Steering Gear Jacket Tube Lower Bushing To Jacket Tube	10.348
CLAMP, Steering Gear Jacket Tube To Toeboard Plate	10.350-5	CLIP, "S" Type Clutch Tube To Brake Tube	5.231-1
CLAMP, Steering Gear Shaft Lower Bearing .	10.768-1	CLIP, Sun Roof Hinge	28.805-2
CLAMP, Steering Gear To Lower Shaft Coupling.....	10.742-1	CLIP, Tailgate Electric Operated Window Regulator Molded Harness	
CLAMP, Steering Linkage Tie Rod Adjusting Tube	10.224-1	To Body	23.320-6
CLAMP, Tail Pipe To Hanger	4.234-6	CLIP, Thermal - Vacuum Spark Switch Retaining	4.088-12a
CLAMP, Vent Hose To Carburetor.....	4.144-20a	CLIP, Vacuum Line	18.585-5a
CLAMP, Water Pump Or Heater Hose Nipple.....	2.080-11	CLIP, Vacuum Tube.....	3.051-17
CLAMP, Windshield Hold Down.....	25.005-1	CLIP, Vacuum Tube Connecting	4.703-2
CLAMP, Windshield Washer Hose	22.053-2	CLIP, Vent Tube	18.560-4b
CLAMP, Windshield Wiper Motor Wire	22.027-11	CLIP, Wiper Arm Retainer.....	22.044-2
CLAMP ASSEMBLY, Exhaust Pipe To Crossover Pipe	4.178-4	CLIP BRAKE TUBE.....	8.101-1
CLAMP ASSEMBLY, Exhaust Pipe To Muffler.....	4.205-1	CLOCK.....	3.360-1
		CLUSTER ASSEMBLY, Instruments	3.500-1
		CLUTCH, Air Conditioning Compressor Drive.....	13.415-1
		CLUTCH ASSEMBLY, Fourspeed Trans- mission Synchronizer Low And Second ...	6.080-4
		CLUTCH ASSEMBLY, Fourspeed Trans- mission Synchronizer Third And Fourth...	6.080-3

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
C - Cont.			C - Cont.
CLUTCH ASSEMBLY, Threespeed Transmission Synchronizer Low And Reverse ...	6.080-2	CONTROL, Electronic Emission	3.053-1
CLUTCH ASSEMBLY, Threespeed Transmission Synchronizer Second And High ...	6.080-1	CONTROL, Electronic Ignition	3.044-1
COIL, Air Conditioning Compressor Drive Pulley.....	13.415-3	CONTROL, Fresh Air Duct	22.020-6
COIL, Ignition.....	3.056-1	CONTROL, Front Door Latch Remote.....	23.056-1
COLLAR, Brake And Clutch Pedal Shaft	5.148-3	CONTROL, Radio Speaker Balance	15.320-12
COLLAR, Reduction Unit Shift.....	18.615-13	CONTROL, Rear Door Latch Remote	23.056-3
COLUMN ASSEMBLY, Steering	10.337-1	CONTROL, Tailgate Remote	23.039-3
COMPRESSOR, Air Conditioning.....	13.400-1	CONTROL, Windshield Wiper	22.038-1
CONDENSER, Distributor	3.033-1	CONTROL ASSEMBLY, Heater And Defroster.....	13.017-1
CONDUCTOR, Instrument Cluster	3.520-1	CONVERSION KIT, Right Hand Drive Hydraulic Clutch Linkage	5.044-1
CONDUIT, Vacuum Hose Protective.....	18.585-11	CONVERTER, Catalytic	4.212-1
CONE AND ROLLER, Transfer Case Front Output Shaft.....	18.025-4	CONVERTER, Hydramatic Transmission.....	6.519-1
CONE AND ROLLER, Transfer Case Rear Bearing Cap (Front)	18.088-1	COOLER, Auxiliary Oil.....	16.231-1
CONE AND ROLLER, Transfer Case Rear Bearing Cap (Rear)	18.085-1	CORE, Air Conditioning Condenser	13.450-1
CONNECTING LINK, Bellcrank To Column..	7.125-2	CORE, Air Conditioning Evaporator	13.475-1
CONNECTOR.....	4.144-18b	CORE, Heater.....	13.028-1
CONNECTOR, Carburetor Nipple To Vacuum Hose	4.701-3	CORE, Radiator.....	2.020-1
CONNECTOR, 45 Degree Anale Hose.....	16.230-4	CORE, Speedometer Cable.....	3.575
CONNECTOR, Dome Light Harness To Lighted Vanity Mirror	3.218-2	CORD, Engine Heater	15.145-1
CONNECTOR, Engine Compartment Wire Harness.....	3.165-2b	COUNTERSHAFT, Transmission.....	6.159-1
CONNECTOR, Engine Harness To Coil	3.218-1	COUPLING, Air Conditioning Hose Disconnect (Female Half)	13.440-3c
CONNECTOR, Engine Wire Harness To Coil	3.056-5	COUPLING, Air Conditioning Hose Disconnect (Male Half)	13.440-3a
CONNECTOR, Exhaust Gas Recirculating Adapter Hose	4.703-4	COUPLING, Steering Gear Lower Shaft To Steering Gear	10.740
CONNECTOR, Front Seat Adjuster Wire	29.133-1	COUPLING, Steering Gear Upper Shaft To Lower Shaft	10.720-1
CONNECTOR, Fuse Panel Accessory	3.155-3	COVER, Air Conditioning Hose Hole	20.120-18
CONNECTOR, Gasoline Filler Neck Tube To Tank	4.141-13	COVER, Auxiliary Gasoline Tank End Panel	4.131-18
CONNECTOR, Hydramatic Transmission	6.631-4a	COVER, Auxiliary Gasoline Tank Filler Opening Plate	4.131-22
CONNECTOR, Hydramatic Transmission Stator Sleeve	6.660-4	COVER, Brake Adjusting Hole	8.030-1
CONNECTOR, Hydraulic Tube To Master Cylinder	5.213-2	COVER, Brake Cylinder Hole Plate	20.120-4
CONNECTOR, Ignition Switch	3.218-3	COVER, Brake Master Cylinder Filler	8.038-1
CONNECTOR, Instrument Wiring Harness To Fuse Block And Dash.....	3.165-2a	COVER, Brake Pedal Pad Rubber	8.148-1
CONNECTOR, Inverted Flair.....	1.119-1a	COVER, Carburetor Air Cleaner	4.088-7
CONNECTOR, Oil Filter Bypass.....	1.223-1	COVER, Clutch Housing	5.054-3
CONNECTOR, Splice Trailer	3.780-13	COVER, Clutch Pedal Pad	5.144-1
CONNECTOR, Tee To Vacuum Hose	18.585-7a	COVER, Clutch Push Rod	20.120-10
CONNECTOR, Vacuum Hose ("F" Type) ...	4.703-1b	COVER, Cylinder Head.....	1.068-1
CONNECTOR, Vacuum Hose (Reduction Fitting)	4.367-3	COVER, Electronic Emission Control Module Watershield.....	3.053-2
CONNECTOR, Vacuum Tube	13.020-18a	COVER, Engine Oil Pump.....	1.164-1
CONNECTOR, Windshield Washer Hose	22.053-3	COVER, Evaporator Core	13.488-3
CONNECTOR, Windshield Washer Hose (Tee)	22.053-4	COVER, Exhaust Gas Recirculation Ports	4.700-9
CONNECTOR, Windshield Wiper Motor To Control	22.027-10	COVER, Exhaust Pipe Shield	4.180-1a
CONNECTOR, Wiring.....	3.165-2	COVER, Floor Gear Shift Lever	7.013-1
CONTACT AND WIRE ASSEMBLY, Steering Wheel Cover.....	3.401-10	COVER, Foot Operated Parking Brake	8.180-4
CONTACT KIT, Ignition	3.002-1	COVER, Fourspeed Transmission Case Side Opening	6.009-5
CONTACT SET, Ignition.....	3.031-1	COVER, Fresh Air Duct	22.020-3
CONTROL, Diaphragm.....	18.565-1	COVER, Front Axle Housing	9.307-1
		COVER, Front Bucket Seat Sidewall.....	29.120-1
		COVER, Front Floor Pan	20.005-12
		COVER, Front Floor Pan Drain Hole	20.005-7
		COVER, Front Floor Pan Master Cylinder Inspection	20.005-5
		COVER, Front Floor Pan Transmission Access	20.005-3
		COVER, Front Seat Adjuster Handle	29.133-2

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
C - Cont.			C - Cont.
COVER, Front Seat Center Armrest Support		COVER, Transfer Case	18.510-3
Bracket	29.145-1	COVER, Transfer Case Bottom	18.010-5
COVER, Fuel Vapor Storage Canister Filter	4.144-1c	COVER, Transfer Case Shift Lever Control	
COVER, Gasoline Tank Check Valve.....	4.132-1	Case Bottom	18.152-5
COVER, Gasoline Tank Filler Tube		COVER, Transfer Case Shift Lever Control	
Protective.....	4.143-1	Case Dust	18.152-4
COVER, Heater Motor Opening	20.120-2	COVER, Transfer Case Shift Lever Opening .	20.120-7
COVER, Hydramatic Transmission Adapter		COVER, Transfer Case Shift Rod	18.100-5
Plate	20.120-21	COVER, Transmission Case.....	6.009-2
COVER, Hydramatic Transmission Converter		COVER, Wheel Hub	8.274-2
Housing Lower.....	6.528-1	COVER, Windshield Wiper Linkage Access	
COVER, Hydramatic Transmission Front....	6.527-1	Hole.....	25.003-3
COVER, Hydramatic Transmission Governor.	6.545-2	COVER, Windshield Wiper Motor (Bottom	
COVER, Hydramatic Transmission Oil Pump.	6.535-2	Mounted)	22.027-6
COVER, Hydramatic Transmission Rear		COVER, Windshield Wiper Motor (Less	
Servo.....	6.540-5	Crash Pad)	22.027-7b
COVER, Inertia Reel	29.020	COVER ASSEMBLY, Clutch	5.001-1
COVER, Instrument Cluster Heater Control		COVER ASSEMBLY, Timing Case.....	1.120-1
Opening.....	3.510-3	COVER ASSEMBLY, Transmission Control ..	6.009-1
COVER, Instrument Panel Ash Receiver	22.092-1b	CRANK, Cap Side Window.....	28.706-5
COVER, Instrument Panel Clock Opening ...	22.100-6	CRANK, Electric Windshield Wiper	
COVER, Instrument Panel Heater	22.100-4	Motor Drive.....	22.033-1
COVER, Instrument Panel Radio Opening ...	22.100-8	CRANKSHAFT ASSEMBLY.....	1.042-1
COVER, Power Brake Master Cylinder Filler	8.510-2	CROSSMEMBER, Center	11.024-1
COVER, Power Steering Gear Pitman Shaft..	10.610-1	CROSSMEMBER, Engine Rear Support	1.010-1
COVER, Power Takeoff Transfer Case Cover	18.515-1	CROSSMEMBER, Front	10.002-1
COVER, Push Rod	1.108-1	CROSSMEMBER, Hood Diagonal.....	12.001-3
COVER, Radio Lower	15.320-2a	CROSSMEMBER, Intermediate Rear.....	11.024-2
COVER, Radio Upper.....	15.320-2	CROSSMEMBER, Rear	11.024-3
COVER, Rear Axle Housing	9.007-1	CRUTCH TIP, Longitudinal Seat Lea.....	29.201-13
COVER, Rear Door And Rear Quarter Ash		CUP, Console Compartment Door Lock.....	27.280-2
Receiver Outside	23.182-2	CUP, Contact Horn Button.....	3.400-12
COVER, Rear Floor Pan Sending Unit		CUP, Front Axle Differential Side Gear	
Access Hole Plate	20.035-6	Bearing	9.343-1
COVER, Rear Propeller Shaft Grease Flat...	9.113-6	CUP, Front Axle Pinion Bearing (Inner-	
COVER, Rear Quarter Lower Front Inner....	20.269-2	Front)	9.355-1
COVER, Reduction Unit Power Takeoff	18.610-7	CUP, Front Axle Pinion Bearing (Outer-	
COVER, Retractable Security.....	29.147-1	Rear)	9.355-2
COVER, Seat Back Lock Striker.....	29.105-27	CUP, Front Wheel Bearing	8.294-1
COVER, Seat Belt Bolt Heat Shield	27.290-8a	CUP, Front Wheel Retainer - Spring	8.296-10
COVER, Seat Lock Latch	29.105-28	CUP, Glove Box Door Lock Clamp	22.073-3
COVER, Seat Lock Latch Finger Tab	29.105-26	CUP, Rear Axle Pinion Bearing (Inner)	9.055-2
COVER, Shift Fork Vent.....	18.560-1	CUP, Rear Axle Pinion Bearing (Outer)	9.055-1
COVER, Shoulder Belt Guide	27.292-7	CUP, Rear Wheel Bearing	8.302-1
COVER, Spare Tire	29.461	CUP, Steering Column Housing Thrust.....	10.336-3
COVER, Steering Arm To Steering Tie Rod		CUP, Steering Gear Worm Bearing.....	10.324-1
End Dust.....	10.232-2	CUP, Tachometer Cover	3.700-6
COVER, Steering Column Access Plate	20.120-14	CUP, Transfer Case Front Output Shaft Cone	
COVER, Steering Gear Housing Cross Shaft .	10.300-1	And Roller	18.025-5
COVER, Steering Gear Shaft Lock.....	10.702-1	CUP, Transfer Case Rear Bearing Cap Cone	
COVER, Steering Housing Worm.....	10.296-1	And Roller (Front)	18.088-2
COVER, Steering Linkage Pitman Arm		CUP, Transfer Case Rear Bearing Cap Cone	
To Steering Arm Tie Rod End Dust	10.232-1	And Roller (Rear)	18.085-2
COVER, Steering Wheel.....	10.280-3	CUSHION, Bottom Frame Hinge Antirattle ..	29.181-12
COVER, Steering Wheel Actuator		CUSHION, Front Suspension Sway	
And Directional Signal Switch.....	10.805-1	Stabilizer To Frame	10.260-2
COVER, Sun Roof Frame Splice.....	28.809-2	CUSHION, Tailgate Glass Upper.....	25.033-6
COVER, Sun Roof Screw	28.809-1	"C" WASHER, Fourspeed Transmission	
COVER, Tailgate Chain	23.006-6d	Shifting Shoe Reverse	6.085-6
COVER, Tailgate Chain	31.163-1	"C" WASHER, Fourspeed Transmission	
COVER, Tailgate Window Regulator Access.	23.006-3	Shift Rail End Reverse Plunger	6.020-5
COVER, Thermostat Outlet To Housing.....	2.102-4	CYLINDER, Console Compartment Door Lock	27.280-1
COVER, Trailer Towing Relay And Circuit		CYLINDER, Front Door Lock.....	23.081-2a
Breaker Box	3.780-11		

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
C - Cont.			
CYLINDER, Glove Box Lock	22.073-2a		
CYLINDER, Ignition Switch	3.135-3		
CYLINDER, Ignition Switch Lock (Incl. Keys).....	3.135-1		
CYLINDER, Ignition Switch Lock (Less Keys).....	3.135-2		
CYLINDER ASSEMBLY, Brake Master	8.035-1		
CYLINDER ASSEMBLY, Brake Wheel Front	8.068-1		
CYLINDER ASSEMBLY, Brake Wheel Rear	8.068-2		
CYLINDER ASSEMBLY, Clutch Master	5.207-1		
CYLINDER ASSEMBLY, Clutch Slave	5.221-1		
CYLINDER ASSEMBLY, Power Brake Master	8.510-1		
CYLINDER ASSEMBLY, Stowage Compartment Lock.....	15.201-1		
CYLINDER ASSEMBLY, Tailgate Lock.....	23.081-4		
CYLINDER HEAD, Air Conditioning Compressor	13.400-15a		
- D -			
DAMPENER, Spare Wheel Vibration	14.203-1		
DAMPER, Crankshaft Vibration.....	1.045-1		
DAMPER, Exhaust Manifold.....	1.067-15		
DAMPER, Steering.....	10.260-12		
DAMPER KIT, Exhaust Manifold.....	1.067-14		
DAMPER KIT, Steering	10.260-12a		
DASH ASSEMBLY	20.120-1		
DECAL, Quadra Trac.....	18.585-4		
DECAL, Tailgate Window	14.145-9		
DECAL, Transfer Case Shifting.....	18.001-5		
DECAL, Unleaded Fuel.....	14.145-8		
DECAL RALLY STRIPES.....	26		
DEFLECTOR, Carburetor Air Intake	20.115-4		
DEFLECTOR, Exhaust Valve Stem	1.078-6		
DEFLECTOR, Front Bumper Rail Air.....	12.168-1c		
DEFLECTOR, Intake Valve Stem	1.077-6		
DEFLECTOR, Valve Rocker Arm Shaft Oil..	1.102-1		
DEFLECTOR, Windshield Defroster Air.....	25.004-1		
DEFLECTOR ASSEMBLY, Carburetor Cooler Fan	4.007-1		
DETENT, Hydramatic Transmission Roller And Spring	6.551-5		
DIAL, Gear Selector Pointer.....	7.537-1		
DIAPHRAGM, Power Brake Valve Body	8.485-1		
DIELECTRIC COMPOUND	30.035-1		
DIFFERENTIAL ASSEMBLY	18.545-1		
DIFFUSER, Instrument Cluster Lamp	3.525-2		
DIRECT CLUTCH KIT, Hydramatic Transmission.....	6.562-12		
DISC, Horn Button	3.400-1a		
DISC, Tone Control.....	15.320-4a		
DISC ASSEMBLY, Front Wheel Disc Brake ..	8.805-1		
DISC KIT, Rear Axle Differential Clutch Friction	9.035-2		
DISTRIBUTOR.....	3.030-1		
DOOR, Console Compartment	27.270-1		
DOOR, Glove Box	22.060-1		
DOOR, Headlamp	3.252-1		
DOOR ASSEMBLY, Front	23.001-1		
DOOR ASSEMBLY, Rear Station Wagon	23.002-1		
DOVETAIL, Hood Lock Lower	12.060-2		
DOVETAIL ASSEMBLY, Hood Lock Lower ..	12.060-1		
D - Cont.			
DOVETAIL ASSEMBLY, Tailgate.....	23.006-16		
DOWEL, Clutch Housing	5.054-5		
DOWEL, Cylinder Block To Clutch On Converter Housing.....	1.020-2		
DOWEL, Cylinder Head To Manifold Dowel ..	1.059-2		
DRAIN COCK, Radiator Core.....	3.036-1		
DRAW BAR	11.068-2b		
DRAW BAR AND PINTLE HOOK REINFORCEMENT	11.068-2a		
DRAW BAR ASSEMBLY	11.068-2		
DRAW BAR KIT	11.068-1		
DRIVE GEAR KIT, Windshield Wiper Motor ..	22.031-1		
DRUM, Front Brake	8.245-1		
DRUM, Rear Brake	8.245-2		
DRUM ASSEMBLY, Front Brake.....	8.240-1		
DRUM ASSEMBLY, Rear Brake	8.240-2		
DUCT, Air	22.020-3a		
DUCT, Cold Air Induction	4.092-1		
DUCT, Fresh Air Intake	22.020-1		
DUCT ASSEMBLY, Carburetor Cooler Fan ..	4.007-4		
DUCT EXTENSION, Left Side.....	13.510-1		
DUST KIT, Rear Propeller Shaft Cover And Clamp	9.113-2		
DUST SHIELD, Alternator Bearing	3.018-19		
E -			
ECCENTRIC, Fuel Pump	1.134-4		
ECCENTRIC, Fuel Pump	4.118-1		
ECCENTRIC, Idler Pulley Adjusting	13.430-9		
ELBOW, Cylinder Head Cover To PCV Filter Hose	1.116-4		
ELBOW, Decel Valve Inlet	4.095-2		
ELBOW, Heater Hose	13.050-5		
ELBOW, Hydramatic Transmission (Oil Cooler Lines To Transmission)	6.631-4		
ELBOW, Hydramatic Transmission (Oil Cooler Tube At Radiator)	6.631-10		
ELBOW, Oil Pressure Gauge	3.605-7		
ELBOW, Vacuum Tube Inverted Flared	13.020-13		
ELBOW, Water Hose At Intake Manifold	2.102-8		
ELEMENT, Carburetor Air Cleaner	4.088-5		
ELEMENT, Cigar Lighter	3.352-6		
ELEMENT, Oil Filter	1.206-1		
ELEMENT, Roll Bar And Auxiliary Lamps And Fog Lamp	3.246-2		
ELEMENT, Windshield Wiper Blade	22.043-2		
END, Clutch Master Cylinder Push Rod	5.207-5		
END, Fourspeed Transmission Shift Rail First And Second	6.020-1		
END, Fourspeed Transmission Shift Rail Direct And Third	6.020-1a		
END, Fourspeed Transmission Shift Rail Reverse	6.020-2		
END ASSEMBLY, Pitman Arm To Steering Arm Tie Rod	10.126-2		
END ASSEMBLY, Steering Arm To Steering Arm Tie Rod	10.126-1		
END RAIL, Luggage Rack	15.250-8		
ENGINE ASSEMBLY	1.002-1		
EQUALIZER, Parking Brake Cable	8.214-1		
ESCUTCHEON, Horn Switch	3.106-5		

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
E - Cont.			
ESCUTCHEON, Latch Opening Front Seat Cushion.....	29.103-16	FITTING, Heater Hose Elbow	13.050-5a
ESCUTCHEON, Outside Rear View Remote Control Mirror.....	15.270-8	FITTING, Intake Manifold Vacuum	1.067-19
ESCUTCHEON, Power Amplifier Fader Switch	15.320-32	FITTING, Lubrication	5.168-19
ESCUTCHEON, Sun Visor Mounting Bracket	29.003-6	FITTING, Power Steering Pump Pressure Hose	10.470-8
EXHAUST PIPE, Intermediate	4.178-1a	FITTING, Propeller Shaft Lubrication	9.112-1
EXTENSION, Front Bumper Rail	12.168-1a	FITTING, Steering Gear Lower Shaft U-Joint Lubrication (In Slip Yoke)	10.700-4
EXTENSION, Front Fender.....	12.075-6	FITTING, Steering Gear Lower Shaft U-Joint Lubrication (In Clamp Yoke)	10.700-5
EXTENSION, Front Fender Stone Shield.....	12.075-5	FITTING, Steering Linkage Tie Rod End Lubrication.....	10.220-1
EXTENSION, Hydramatic Transmission Case	6.503-2	FITTING, Transfer Case Shifting Lever Lubrication.....	18.180-5
EXTENSION, Modulator.....	4.005-1a	FITTING, Transfer Case Shift Lever Control Case Bottom Cover Grease	18.152-8
EXTENSION, Pick-Up Box Floor To Rear Body Side Lower Panel	31.052-1	FITTING, Transfer Case Shift Lever Lubrication.....	18.125-8
EXTENSION, Rear Fender	20.173-1	FLANGE, Exhaust Pipe Manifold	4.186-2
EXTENSION, Rear Floor Pan.....	20.035-2	FLANGE, Front Axle Shaft Drive	9.369-1
EXTENSION, Tire Valve.....	8.274-7	FLANGE, Gasoline Tank Filler Neck.....	4.141-15
EXTENSION, Upper Tailgate Inner Rear Pillar Opening.....	20.315-7	FLANGE, Horn Button Contact.....	3.400-3
EXTENSION, Windshield Wiper Motor Wire Extension	22.036-1	FLANGE, Steering Gear To Shaft	10.710-1
EXTENSION AND CAP, Tailgate Window Regulator	23.306-5	FLANGE, Transfer Case Universal Joint End	18.115-4
EXTENSION KIT, Mirror Arm	15.270-11	FLASHER, Directional Signal	3.330-1
EXTENSION KIT, Tail Pipe Side Exhaust...	4.227-2	FLASHER, Hazard Warning.....	3.690-9
EXTERIOR DECAL RALLY STRIPES	26	FITTING, Vent Tube	18.560-4c
EXTERIOR ORNAMENTATION	26	FLASH TUBE, Strobe Warning Lamp.....	15.516-3
EYEBOLT, Safety Chain Pintle Hook.....	11.066-5	FLYWHEEL ASSEMBLY, Crankshaft	1.056-1
EYELET, Windshield Hold Down Strap	25.008-2	FOOTMAN LOOP, Longitudinal Seat	29.201-9
F -			
FACEPLATE, Control Panel	13.480-1	FORK, Four-speed Transmission Shifter First And Second.....	6.198-4
FAN, Alternator	3.017-5	FORK, Four-speed Transmission Shifter Reverse.....	6.198-5
FAN, Carburetor Cooling.....	3.170-1	FORK, Four-speed Transmission Shifter Third And Direct.....	6.198-2
FAN, Exhaust Emission Air Pump Filter	4.510-1	FORK, Reduction Unit Shift Lever.....	18.620-5
FASTENER, Automatic Speed Control Vacuum Hose	4.367-4	FORK, Threespeed Transmission Shifter Low And Reverse	6.198-1
FENDER, Rear.....	31.040-1	FORK, Threespeed Transmission Shifter Third And Direct	6.198-3
FENDER ASSEMBLY, Front.....	12.075-1	FORK, Transfer Case Shift.....	18.095-1
FILLER, Body Center Pillar Lower	20.220-2	FORWARD CLUTCH HOUSING AND WASHER KIT, Hydramatic Transmission.....	6.595-1
FILLER, Cowl Top Panel To Front Body Pillar.....	20.150-3	FORWARD CLUTCH KIT, Hydramatic Transmission.....	6.595-2
FILLER, Front Bumper Rail.....	12.350-1	FRAME	11.001-1
FILLER, Rear Bumper To Rear Cross Sill...	12.360-1	FRAME, Front Door Ventilator.....	23.114-1
FILLER, Tailgate Pillar Lower.....	20.315-8	FRAME, Front Door Window.....	23.008-2
FILTER, Ash Receiver Bulb	22.092-6	FRAME, Front Seat Back Center Armrest....	29.142-1
FILTER, Cylinder Head Cover To Air Cleaner Hose.....	1.116-2	FRAME, Front Seat Center Cushion.....	29.157-1
FILTER, Fuel Vapor Storage Canister	4.144-1b	FRAME, Front Seat Cushion.....	29.103-2
FILTER, Gasoline.....	4.110-3	FRAME, Rear Door Stationary Glass.....	23.126-1
FILTER, Gasoline Tank.....	4.134-1	FRAME, Rear Door Window.....	23.008-4
FILTER KIT, Fuel Pump In-Line	4.110-3a	FRAME, Rear Quarter Pivoting Type Window ..	25.027-1
FILTER SERVICE KIT	22.051-3	FRAME, Rear Quarter Window Lower	20.350-2
FITTING, Bolt Hydraulic Hose To Slave Cylinder	5.216-2	FRAME, Rear Quarter Window Upper.....	20.350-1
FITTING, Elbow To Oil Pressure Sending Unit	3.605-6	FRAME, Rear Window	20.397-1
FITTING, Fuel Line To Carburetor.....	4.124-1	FRAME, Sun Roof Metal	28.804-1
FITTING, Heater And Defroster Damper.....	13.113-4	FRAME, Tailgate Glass	23.008-1

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
F - Cont.			G - Cont.
FRAME, Ventilating Windshield Upper Half	25.003-2	GASKET, Fresh Air Duct	22.020-4
FRAME, Vertically Mounted Spare Tire	14.155-1	GASKET, Front Axle Drive Shaft Flange	9.368-7
FRAME, Windshield.....	25.003-1	GASKET, Front Axle Housing Cover	9.307-3
FRAME ASSEMBLY, Front Seat	29.105-1	GASKET, Front Bearing Cap	6.017-3
FRAME ASSEMBLY, Front Seat Back	29.105-3	GASKET, Front Door Lock Cylinder Assembly	23.081-5
FRAME ASSEMBLY, Front Seat Cushion	29.103-1	GASKET, Front Door Outside Handle.....	23.074-7
FRAME ASSEMBLY, Longitudinal Seat	29.201-1	GASKET, Fuel Pump.....	4.116-1
FRAME ASSEMBLY, Rear Seat.....	29.181-1	GASKET, Gasoline Gauge To Gasoline Tank.....	3.615-5
FRAME ASSEMBLY, Rear Seat Back.....	29.220-1	GASKET, Gasoline Tank Filler Neck Flange	4.141-16
FRAME ASSEMBLY, Rear Seat Cushion	29.181-3	GASKET, Gasoline Tank Outlet And Return Tube Assembly	4.160-16
FRAME ASSEMBLY, Sun Roof Glass	28.805-1	GASKET, Grease Catcher Front At Backing Plate.....	8.296-13
FULCRUM, Floor Gear Shift Lever	7.001-2	GASKET, Heater Motor To Plate	13.072-2c
FUSE.....	3.155-1	GASKET, Hydramatic Transmission Extension To Case.....	6.503-6
FUSE, Automatic Speed Control Harness	4.330-4	GASKET, Hydramatic Transmission Governor Cover.....	6.545-4
FUSE, Carburetor Cooling Fan	3.170-6	GASKET, Hydramatic Transmission Oil Pan	6.507-2
FUSE, Roll Bar And Auxiliary Lamps.....	3.246-14	GASKET, Hydramatic Transmission Oil Pump To Case	6.535-6
FUSE HOLDER, Roll Bar And Auxiliary Lamps	3.246-13	GASKET, Hydramatic Transmission Rear Servo Cover.....	6.540-6
FUSIBLE LINK, Starter Relay	3.167-1	GASKET, Hydramatic Transmission Solenoid	6.660-5
G -			
GASKET, Access Cover To Tailgate	23.006-4	GASKET, Hydramatic Transmission Valve Body To Plate	6.660-6
GASKET, Backup Lamp Lens.....	3.317-3	GASKET, Hydramatic Transmission Valve Plate To Case	6.660-7
GASKET, Backup Lamp To Panel.....	3.315-2	GASKET, Intake Manifold To Cylinder Head..	1.067-5
GASKET, Base To Roof	15.250-4	GASKET, Intake Manifold To Exhaust Manifold	1.067-4
GASKET, Bearing Retainer Cover	18.660-4	GASKET, Lamp Mounting Directional And Parking	3.292-8
GASKET, Brake Master Cylinder Filler Cover.....	8.038-2	GASKET, License Plate Lamp Housing To Bracket	3.339-4
GASKET, Brake Tube Hose	8.116-2	GASKET, License Plate Lamp Lens	3.339-3
GASKET, Carburetor	4.004-1	GASKET, Liftgate Handle	28.575-5
GASKET, Carburetor Adapter To Intake Manifold	4.004-4	GASKET, Oil Pump Drive Shaft Cover Plate ..	1.161-1c
GASKET, Carburetor Air Cleaner Or Adapter To Carburetor.....	4.088-2	GASKET, Outside Rear View Mirror.....	15.270-5
GASKET, Carburetor Choke Heater Tube....	4.020-5	GASKET, Parking And Front Directional Lamp Lens.....	3.292-3
GASKET, Cargo Lamp Lens.....	3.671-5	GASKET, Power Brake Cylinder Filler Cover	8.510-4
GASKET, Converter To Exhaust Pipe Flange	4.212-3	GASKET, Power Steering Gear Pitman Shaft Cover	10.612-1
GASKET, Cowl Ventilator Intake Cover Panel	22.016-5	GASKET, Push Rod Cover	1.108-2
GASKET, Cylinder Head.....	1.061-1	GASKET, Rear Axle Housing Cover	9.007-4
GASKET, Cylinder Head Cover	1.072-1	GASKET, Rear Brake Grease Protector	8.312-3
GASKET, Distributor	3.039-5	GASKET, Rear Door Outside Handle.....	23.074-8
GASKET, Engine Oil Pan Drain Plug.....	1.151-4	GASKET, Rear License Plate Bracket.....	14.098-7
GASKET, Engine Oil Pump Cover.....	1.165-1	GASKET, Rear Propeller Shaft Housing Cover	9.113-7
GASKET, Engine Oil Pump Release Valve Spring Cap	1.178-2	GASKET, Reduction Unit Power Takeoff Cover To Housing	18.610-9
GASKET, Engine Oil Pump To Cylinder Block.....	1.155-1	GASKET, Retainer	18.660-4a
GASKET, Exhaust Emission Air Injection Manifold	4.539-1	GASKET, Spark Plug	3.001-2
GASKET, Exhaust Gas Recirculating Valve And Sensor	4.700-2	GASKET, Speaker Mounting Bracket To Trim Panel	15.320-15
GASKET, Exhaust Manifold Damper	1.067-16		
GASKET, Exhaust Manifold Emission Hole Plug.....	1.067-10		
GASKET, Exhaust Manifold To Cylinder Head	1.067-8a		
GASKET, Fourspeed Transmission Case Side Opening Cover.....	6.009-7		
GASKET, Fourspeed Transmission Rear Bearing Retainer.....	6.052-3		

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
G - Cont.			G - Cont.
GASKET, Steering Gear Housing Cross Shaft Cover.....	10.302-1	GEAR, Distributor (On Distributor)	3.042-1
GASKET, Tail And Stop Lamp.....	3.305-3	GEAR, Distributor (On Camshaft)	3.042-2
GASKET, Tail And Stop Lamp Lens.....	3.305-2	GEAR, Engine Oil Pump Idler	1.157-1
GASKET, Tail And Stop Lamp To Body.....	3.305-1	GEAR, Flywheel Ring.....	1.056-3
GASKET, Tailgate Handle.....	23.078-3	GEAR, Fourspeed Transmission Third Speed	6.130-1
GASKET, Tailgate Regulator Base To Panel.....	23.306-4	GEAR, Hydramatic Transmission Rear Internal Mainshaft.....	6.634-1
GASKET, Thermostat Housing.....	2.102-7	GEAR, Hydramatic Transmission Sun.....	6.518-1
GASKET, Thermostat Outlet Cover To Housing.....	2.102-5	GEAR, Oil Pump Drive	1.160-2
GASKET, Threespeed Transmission Front Bearing Cap Screw	6.017-4	GEAR, Rear Axle Differential Pinion	9.031
GASKET, Timing Case Cover.....	1.121-1	GEAR, Rear Axle Differential Side	9.027-3
GASKET, Transfer Case Bottom Cover.....	18.010-7	GEAR, Reduction Unit Holding Plate.....	18.615-19
GASKET, Transfer Case Front Bearing Cap ..	18.015-3	GEAR, Reduction Unit Planetary Sun.....	18.615-5
GASKET, Transfer Case Rear Bearing Cap..	18.080-4	GEAR, Reduction Unit Ring.....	18.615-10
GASKET, Transfer Case Shift Lever.....	18.128-6	GEAR, Reverse Idler Sliding	6.170-2
GASKET, Transfer Case Shift Lever Control Case Bottom Cover	18.152-7	GEAR, Speedometer Drive.....	18.580-1
GASKET, Transfer Case Shift Lever Opening Cover	20.120-9	GEAR, Speedometer Driven.....	3.590-1
GASKET, Transfer Case To Transfer Case Cover.....	18.510-8	GEAR, Threespeed Transmission Low	6.144-2
GASKET, Transfer Case To Transmission (LQT)	18.001-3	GEAR, Threespeed Transmission Reverse	6.144-3
GASKET, Transfer Case To Transmission (WQT)	18.500-3	GEAR, Transfer Case Front Output Shaft....	18.035-1
GASKET, Transmission Adapter Plate To Transfer Case	6.053-3	GEAR, Transfer Case Front Output Shaft Sliding	18.030-1
GASKET, Transmission Cap Control Housing.....	7.013-2c	GEAR, Transfer Case Intermediate	18.050-1
GASKET, Transmission Case Cover.....	6.009-4	GEAR, Transfer Case Mainshaft	18.070-1
GASKET, Vent Cover.....	18.560-3	GEAR, Transfer Case Rear Output Shaft Sliding	18.065-1
GASKET, Windshield Hinge	25.005-1a	GEAR, Transmission Countershaft	6.164-1
GASKET, Water Pump.....	2.098-1	GEAR, Transmission Low	6.144
GASKET, Windshield Wiper Motor Cover	22.027-7a	GEAR, Transmission Reverse Idler	6.170-1
GASKET, Windshield Wiper Motor Mounting ..	22.027-4a	GEAR, Transmission Second Speed	6.120-1
GASKET AND SEAL SET, Transfer Case (Model 20).....	18.002-1	GEAR, Transmission Speedometer Drive	18.240-1
GASKET AND SEAL SET, Transfer Case (Quadra Trac)	18.500-4	GEAR AND PIN, Hydramatic Governor Transmission Driven	6.545-5
GASKET KIT, Air Conditioning Compressor.....	13.400-5	GEAR ASSEMBLY, Steering	10.290-1
GASKET SET, Air Conditioning Compressor Suction And Discharge Valve	13.405-2	GEAR SET, Front Axle	9.350-1
GASKET SET, Engine (Overhaul)	1.060-2	GEAR SET, Front Axle Differential Side	9.327-1
GASKET SET, Engine (Valve Grind)	1.060-1	GEAR SET, Rear Axle Differential Side(LLD)	9.027-1
GASKET SET, Engine Lower	1.060-3	GEAR SET, Rear Axle Differential Side(WLD)	9.027-2
GASKET SET, Engine Oil Pan.....	1.152-1	GEAR SET, Rear Axle Ring	9.050-1
GASKET SET, Hydramatic Transmission.....	6.501-1	GENERATOR	3.005-1
GASKET SET, Intake Manifold.....	1.067-6	GLASS, Front Door Lowering	25.018-1
GASKET SET, Timing Case Cover	1.121-2	GLASS, Front Door Ventilator	25.016-1
GASKET SET, Transmission Overhaul	6.002-1	GLASS, Outside Rear View Mirror	15.270-7
GATE, Steering Column Locking.....	10.337-3	GLASS, Rear Door Lowering	25.020-1
GAUGE, Bearing.....	1.031-1	GLASS, Rear Door Stationary	25.023-1
GAUGE, Gasoline (In Instrument Cluster) ...	3.615-1	GLASS, Rear Quarter Pivoting Type Window	25.027-3
GAUGE, Gasoline (Sending Unit In Gasoline Tank)	3.615-3	GLASS, Rear Quarter Stationary	25.026-1
GAUGE, Indicator.....	6.510-2	GLASS, Rear Window	25.028-1
GAUGE, Oil Level.....	1.187-1	GLASS, Sun Roof Frame	28.812-1
GAUGE, Oil Pressure.....	3.605-1	GLASS, Tailgate	25.028-2
GAUGE, Water Temperature.....	3.610-1	GLASS, Top Enclosure Liftgate	28.585-1
		GLASS, Top Enclosure Body Side Panel	28.560-1
		GLASS, Windshield	25.001-1
		GLASS AND FRAME ASSEMBLY, Front Door Ventilator	23.114-2
		GLASS KIT, Sun Roof	28.812-2
		GLAZING VINYL, Sun Roof Glass Frame	28.811-1
		GOVERNOR, Intermittent Windshield Wiper	22.042-1
		GOVERNOR ASSEMBLY, Hydramatic Transmission	6.545-1
		GRID REPAIR KIT, Heated Rear Window	3.774-1

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
G - Cont.			
GRILLE, Air Conditioning Blower Housing ..	13.072-7a	GUIDE, Power Steering Gear Worm Ball	
GRILLE, Center Insert.....	2.050-15	Bearing Return.....	10.575-1
GRILLE, Door Speaker	29.070-9	GUIDE, Push Rod.....	1.095-2
GRILLE, Front Door Or Rear Compartment Speaker	15.320-16	GUIDE, Rear Seat Back Latch.....	29.226-4
GRILLE, Radiator.....	2.050-1	GUIDE, Steering Wheel Tilt Spring	10.857
GRILLE, Radio Speaker.....	15.320-6	GUIDE AND CLAMP KIT, Steering Gear	
GROMMET, Air Cleaner.....	4.088-15	Worm Ball Bearing Return	10.316-1
GROMMET, Air Conditioning Hose In Dash..	13.440-12	GUSSET, Body Side Panel And Dash	
GROMMET, Antenna Wire	15.030-2	To No. 1 Body Bracket	20.120-20
GROMMET, Auxiliary Gasoline Tank Filler Neck.....	4.131-15	GUSSET, Side Rail To Rear Engine	
GROMMET, Body Side Lower Panel Wire Harness (Sportside)	3.300-2a	Crossmember	11.012-1
GROMMET, Body Side Lower Panel Wire Harness (Thriftside).....	31.050-7	GUSSET, Steering Gear Mounting Bracket ...	10.290-3a
GROMMET, Cylinder Block Ventilation Valve To Cylinder Head Cover.....	1.119-2	- H -	
GROMMET, Cylinder Block Ventilation Valve To Intake Manifold	1.119-3	HANDLE, Door Assist.....	29.072-1
GROMMET, Domelamp Harness.....	3.346-14	HANDLE, Door Window Regulator.....	23.100-1
GROMMET, Filler Neck Flange.....	4.141-16a	HANDLE, Front Door Outside	23.074-1
GROMMET, Front Door Lock Push Knob	23.054-3	HANDLE, Front Seat Back Rod Lock Release	29.105-38
GROMMET, Front Fender Side Marker Cable	3.720-5a	HANDLE, Hood Lock Release	12.060-19
GROMMET, Gear Shift Rod	18.690-3	HANDLE, Instrument Panel Assist	22.100-13
GROMMET, Harness Thru Back Panel	3.671-11	HANDLE, Jack.....	14.138-2
GROMMET, Harness Thru Dash.....	3.106-8	HANDLE, Latch	14.210-4
GROMMET, Headlamp Harness Thru Panel ..	3.164-3	HANDLE, Parking Brake Release Rod.....	8.182-1
GROMMET, License Plate Lamp Wire.....	3.341-10	HANDLE, Rear Door Outside.....	23.074-3
GROMMET, Motor To Mounting Bracket	22.027-5	HANDLE, Rear Liftgate Window Inside	28.711-1
GROMMET, Parking Brake Cable At Dash...	8.192-3	HANDLE, Rear Liftgate Window Outside....	28.710-1
GROMMET, Power Brake Unit Vacuum Check Valve	8.460-2	HANDLE, Remote Control.....	23.058-1
GROMMET, Power Steering Pump Pressure And Return Hose	10.470-11	HANDLE, Tailgate Latch Release	23.039-5
GROMMET, Rear Door Lock Push Knob.....	23.054-4	HANDLE, Tailgate Latch Release	31.126-3
GROMMET, Rear Side Marker Lamp Cable To Body	3.742-3	HANDLE, Tailgate Window Regulator.....	23.078-1
GROMMET, Reduction Unit Cable.....	18.650-4	HANDLE, Ventilating Windshield Opening...	25.010-1
GROMMET, Speedometer Cable	3.570-4	HANDLE ASSEMBLY, Rear Quarter Pivoting Glass.....	25.027-6
GROMMET, Steering Gear Jacket Tube To Toeboard.....	10.350-7	HANDLE ASSEMBLY, Tailgate Latch Release.....	31.126-1
GROMMET, Temperature Control Cable	13.017-11	HANDLE ASSEMBLY, Top Enclosure Liftgate	28.575-1
GROMMET, Trailer Harness Thru Rear Panel	3.780-2	HANDLE KIT, Front Door Ventilator Lock...	23.121-1
GROMMET, Vacuum Tubes And Reduction Unit Cable	18.585-9	HANDLE KIT, Instrument Panel Assist	22.100-12
GROMMET, Vacuum Tube Thru Dash Panel..	13.020-19	HANGER, Rear Spring Shackle.....	11.106-1
GROMMET, Windshield Washer	22.055-1	HANGER, Tail Pipe Rear	4.234-3a
GROMMET, Windshield Wiper Motor Wire	22.027-8	HARDWARE KIT, Sun Roof Arm Operator....	28.806-2a
GROMMET, Wiring	3.166-1	HARNESS	3.163-2
GROMMET - SEAL, Fuel Vapor	4.142-6a	HARNESS, Air Conditioning Wire.....	13.477-3
GUARD, Bumper Rail.....	12.302-1	HARNESS, Automatic Speed Control Wiring ..	4.330-1
GUARD ASSEMBLY, Front Bumper	12.184-1	HARNESS, Carburetor Cooling Fan	3.170-3
GUARD, Valve Assembly	18.585-1a	HARNESS, Carburetor Solenoid	3.165-1c
GUARD, Power Brake Unit Link To Brake Pedal	8.420-3	HARNESS, Clock	3.369-3
GUARD, Power Brake Unit Valve Push Rod ..	8.480-2	HARNESS, Courtesy Lamp	3.349-7
GUARD ASSEMBLY, Rear Bumper	12.184-5	HARNESS, Domelamp.....	3.346-7
GUIDE, Brake Shoe Automatic Adjusting Cable.....	8.011-1	HARNESS, Electronic Emission Control.....	3.053-5
GUIDE, Front Door Window Regulator Arm...	25.030-3	HARNESS, Electronic Ignition Adapter.....	3.044-4

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
H - Cont.			H - Cont.
HARNESS, Jumper Assembly Vacuum Control Solenoid To Temperature Override Switch.	3.051-4	HINGE, Rear Seat Back Catch Arm And Outer Latch Half	29.221-2
HARNESS, Jumper Tachometer To Fuse Panel.....	3.700-8	HINGE, Rear Seat Back Latch Half.....	29.221-1
HARNESS, License Lamp	3.341-1	HINGE, Rear Seat Back Pivot Pin And Outer Half.....	29.221-3
HARNESS, License Plate Lamp To Cross Harness.....	3.341-6	HINGE, Tailgate.....	23.006-6
HARNESS, Low Sound Horn Relay To Horn And Relay.....	3.106-7	HINGE, Tailgate.....	31.150-1
HARNESS, Neutral Safety Switch And Automatic Transmission.....	3.022-4	HINGE, Top Enclosure Liftgate.....	28.572-1
HARNESS, Oil Pressure Switch Electric Choke	3.605-4	HINGE, Windshield.....	25.005-1
HARNESS, Pickup Cargo Lamp And Domelamp	3.671-9	HINGE ASSEMBLY, Rear Quarter Pivotina Window	25.027-11
HARNESS, Power Door Lock	23.067-7	HINGE ASSEMBLY, Sun Roof.....	28.805-5
HARNESS, Power Door Lock Instrument Panel.....	23.067-6	HINGE ASSEMBLY, Swingout Spare Tire....	14.210-7
HARNESS, Power Seat (Instrument Panel) ...	29.127-3	HITCH PIN, Spring Anchor To Throttle Valve Rod.....	16.508-2
HARNESS, Power Seat (Seat)	29.127-4	HOG RING	30.025
HARNESS, Power Windows And Door Locks Doors.....	23.067-9	HOLD DOWN KIT, Brake Shoe.....	8.004-3
HARNESS, Power Windows And Door Locks Instrument Panel	23.067-8	HOLDER, CB Microphone	15.320-20a
HARNESS, Power Windows And Doors Front To Rear.....	23.067-10	HOLDER, Roll Bar And Auxiliary Light Bulb	3.246-3
HARNESS, Rear Domelamp	3.670-4	HOOD, Gear Selector Dial Lamp	7.539-1
HARNESS, Rear End Lighting And Sianals ..	3.163-1	HOOD ASSEMBLY.....	12.001-1
HARNESS, Switch To Relay.....	3.106-6	HOOK, Coat	27.130-1
HARNESS, Tailgate Electric Operated Window Regulator (Body)	23.320-2	HOOK, Pintle	11.066-2
HARNESS, Tailgate Electric Operated Window Regulator (Frame)	23.320-3	HOOK, Spare Tire Retaining	14.160-1
HARNESS, Tailgate Electric Operated Window Regulator (Molded)	23.320-1	HOOK, Towing	11.067-1
HARNESS, Tailgate Electric Operated Window Regulator Disconnect Switch To Junction Block.....	23.320-4	HOOK KIT, Pintle	11.066-1
HARNESS, Trailer Towing	3.780-1	HORN, Dual	3.105-1
HARNESS, Transmission Kickdown.....	6.665-4	HORN, Low Sound	3.106-2
HARNESS, Vacuum Exhaust Gas Recirculating Thermal Vacuum Switch.....	4.703-1a	HORN, Single	3.105-2
HARNESS, Winshield Wiper Motor	22.036-2	HORN KIT, Low Sound Horn.....	3.106-1
HARNESS ADAPTER, Radio To Fuse Block.	15.320-1d	HOSE, Air Cleaner To Sensor And/Or Intake Manifold	4.088-14
HARNESS ASSEMBLY, Radio Speaker	15.320-5a	HOSE, Air Conditioning (Compressor To Condenser)	13.440-1
HARNESS-JUMPER, Power Amplifier Switch To Radio Speakers	15.320-34	HOSE, Air Conditioning (Evaporator To Compressor)	13.440-4
HEAD ASSEMBLY, Cylinder.....	1.059-1	HOSE, Air Conditioning (Quick Couplina To Evaporator)	13.440-3b
HEADER, Rear Opening	20.390-1	HOSE, Air Conditioning (Receiver To Quick Couplina)	13.440-3
HEADLAMP ASSEMBLY	3.245-1	HOSE, Ai Conditioning Receiver To Evaporator	13.440-3e
HEADLINING.....	29.015-1	HOSE, Air Deflector Drain	22.020-3b
HEAT SHIELD, Front Floor And Dash	20.005-2	HOSE, Automatic Speed Control Vacuum	4.367-1
HEAT SHIELD ASSEMBLY, Catalytic Converter	4.212-6	HOSE, Auxiliary Gasoline Tank Filler Neck To Main Tank	4.131-13
HEAT SHIELD ASSEMBLY, Pre-Catalyst In Exhaust Pipe.....	4.180-1c	HOSE, Auxiliary Gasoline Tank To Filler Neck	4.131-11
HINGE, Console Door	27.276-1	HOSE, Auxiliary Oil Cooler	16.231-3
HINGE, Front Door Lower.....	23.016-1	HOSE, Brake Tube.....	8.116-1
HINGE, Front Door Upper.....	23.015-1	HOSE, Canister To Air Cleaner	4.144-13
HINGE, Glove Box Door	22.060-3	HOSE, Canister To Carburetor	4.144-1b
HINGE, Hood	12.035-1	HOSE, Canister To Spark Port Tee	4.144-19a
HINGE, Rear Door Lower	23.018-1	HOSE, Canister To Vent Line	4.144-14
HINGE, Rear Door Upper.....	23.017-1	HOSE, Carburetor Bowl Vent To Tee	4.144-18c
HINGE, Rear License Plate.....	14.098-12	HOSE, Carburetor Clean Air.....	4.020-8
		HOSE, Check Valve Connector And Gasoline Tank Vent Tube.....	4.142-20
		HOSE, Check Valve Hose To Connector Hose And To Vapor Storage Canister.....	4.142-18
		HOSE, Check Valve To Connector Hose And To Gasoline Tank Vent Tubes	4.142-19
		HOSE, Check Valve To Rollover Valve	4.146-3a

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
H - Cont.			H - Cont.
HOSE, Check Valve Vent Line Hose To Check Valve.....	4.142-17	HOSE, Thermostat Housing To Heater Core... HOSE, Thermostat Housing To Intake	13.050-3 2.102-9
HOSE, Check Valve Vent Line To Canister..	4.144-12	Manifold	
HOSE, Coolant Temperature Override Switch To Tubes	3.051-16	HOSE, Thermo Vacuum Switch To Cold	
HOSE, Crankcase Vent Valve To Carburetor.	1.117-1a	Coolant Switch.....	3.050-8
HOSE, Crankcase Vent Valve To Tee And To Manifold	1.117-1	HOSE, Tube To Carburetor Vent	4.144-20
HOSE, Cylinder Head Cover To Air Cleaner.	1.116-1	HOSE, Vacuum	4.701-1
HOSE, Cylinder Head Heater Tube To Heater Core	13.050-1	HOSE, Vacuum (Bulk)	13.020-9a
HOSE, Defroster.....	13.118-3	HOSE, Vacuum Storage Tank To Manifold....	13.020-4
HOSE, Distributor Vacuum Control Solenoid To Carburetor Vacuum.....	3.051-12	HOSE, Vacuum Tee To Diaphraam On Engine	18.585-8
HOSE, Distributor Vacuum Control Solenoid To Thermal Vacuum Switch And Cold Coolant Switch.....	3.051-13	HOSE, Vacuum Valve Or Distributor To Tube	3.050-3
HOSE, Distributor Vacuum Control Solenoid To Tube.....	3.051-11	HOSE, Vacuum Valve To Tee.....	3.050-4
HOSE, Distributor Vacuum Control To Tube..	3.048-3	HOSE, Valve Assembly To Tee	18.585-6
HOSE, Diverter Valve To Tee.....	3.050-6	HOSE, Valve To Diaphraam Control	18.585-5
HOSE, Exhaust Emission Air Pump To Backfire Valve.....	4.585-1	HOSE, Valve To Tee.....	4.006-3
HOSE, Exhaust Emission Backfire Valve To Fitting.....	4.578-1	HOSE, Vent Tube	18.560-4d
HOSE, Exhaust Emission Backfire Valve To Injection Manifold	4.600-1	HOSE, Water Pump To Heater Core.....	13.050-2
HOSE, Exhaust Emission Backfire Valve To Tee Or Air Injection Manifold	4.565-1	HOSE, Water Pump To Thermostat	
HOSE, Exhaust Emission Backfire Valve Trigger To Carburetor Vacuum Diaphragm.	4.622-1	Housing Bypass	2.080-8
HOSE, Filter To Return Line.....	4.157-1	HOSE, Windshield Washer	22.053-1
HOSE, Front Axle Breather.....	9.301-3	HOSE ASSEMBLY, Hydramatic Transmission	
HOSE, Front Wheel Disc Brakes	8.855-1	Oil Cooler Lines To Radiator.....	6.631-3
HOSE, Fuel Pump In-Line Filter To Tube....	4.110-4	HOUSING, Air Conditioning Blower Motor ...	13.072-4
HOSE, Gasoline Tank Filler.....	4.141-1a	HOUSING, Air Conditioning Evaporator	
HOSE, Gasoline Tank Filler Air Vent.....	4.141-20	Core.....	13.448-1
HOSE, Gasoline Tank To Fuel Tank Reducina.....	4.160-5a	HOUSING, Cigar Lighter	3.352-4
HOSE, Heater Core Drain	13.028-3	HOUSING, Clutch	5.054-1
HOSE, Heater Core To Manifold.....	13.050-4	HOUSING, Column Gear Shift Upper Lever ..	7.020-6
HOSE, Heater Water.....	13.050-4a	HOUSING, Console.....	27.250-1
HOSE, Hydramatic Transmission Vacuum....	6.515-2	HOUSING, Dome And Reading Lamp	3.346-20
HOSE, Hydraulic Clutch	5.216-1	HOUSING, Front Axle	9.303-1
HOSE, Inlet.....	2.038-1	HOUSING, Fuel Filler	4.138-4
HOSE, Main Tank Inlet To Auxiliary Gasoline Tank Outlet	4.131-14	HOUSING, Heater And Defroster Blower....	13.072-3
HOSE, Modulator To Vacuum Control Valve..	4.005-3	HOUSING, Heater Control.....	13.017-2a
HOSE, Oil Filler Cap to Air Cleaner	1.116-3	HOUSING, Hydramatic Transmission Direct	
HOSE, Outlet.....	2.038-2	Clutch.....	6.562-1
HOSE, PCV Valve	1.119-1c	HOUSING, License Plate Lamp	3.335-4
HOSE, Power Brake Vacuum Unit	8.460-6	HOUSING, License Plate Lamp	3.336-4
HOSE, Power Steering Pump Reservoir To Steering Gear Return.....	10.470-2	HOUSING, Plenum Chamber.....	13.012-2a
HOSE, Power Steering Pump To Steering Gear Pressure	10.470-1	HOUSING, Power Amplifier Fader Switch...	15.320-31
HOSE, Pump By-Pass.....	2.080-10a	HOUSING, Rear Axle	9.003-1
HOSE, Radiator Core Overflow.....	2.020-3	HOUSING, Rear Propeller Shaft Universal	
HOSE, Rollover Valve.....	4.146-3	Joint	9.113-1
HOSE, Tee To Manifold Vacuum.....	3.050-7	HOUSING, Reduction Unit.....	18.610-1
HOSE, Tee To Vacuum Fittinga.....	4.006-5	HOUSING, Shift Lever	6.190-9

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
H - Cont.			
HUB, Hydramatic Transmission Forward Clutch.....	6.595-4	INSULATOR, Transfer Case Mounting	18.190-6
HUB, Lockup Coupling.....	18.550-3	INSULATOR, Wire (Female)	3.165-4
HUB, Reduction Unit Collar.....	18.615-15	INSULATOR, Wire (Male)	3.165-3
HUB, Reduction Unit Collar Plate	18.615-14	INTERLOCK, Transfer Case Shift Rod.....	18.100-2
HUB, Reduction Unit Collar Shift	18.615-16	- J -	
HUB ASSEMBLY, Front Brake.....	8.243-1	JACK ASSEMBLY.....	14.138-1
HUB ASSEMBLY, Rear Brake.....	8.243-2	JACKET, Steering Gear Jacket Tube	10.338-6
I -			
INHIBITOR, Steering Column Lock.....	10.337-6	JET, Windshield Washer Nozzle.....	22.053-6
INSERT, Brake Tube Fitting To Wheel Cylinder	8.068-4	JOINT KIT, Rear Propeller Shaft Universal..	9.113-3
INSERT, Crankshaft.....	1.043-1a	JUMPER, Backup Light Switch	3.318-1a
INSERT, Door Armrest.....	29.075-6	- K -	
INSERT, Door Assist Handle Cap	29.072-4	KEY, Camshaft Sprocket.....	1.134-3
INSERT, Drive Pulley	1.046-6	KEY, Compressor Shaft	13.400-36
INSERT, Fork (Pad).....	6.198-6	KEY, Console Compartment Door Lock.....	27.280-3
INSERT, Fork Reverse	6.198-7	KEY, Crankshaft Sprocket.....	1.132-2
INSERT, Horn Blowing Cover.....	3.401-6	KEY, Front Door Lock Cylinder.....	23.085-1
INSERT, Liftgate Support Housing Cap	28.600-2	KEY, Glove Box Door Lock	22.073-5a
INSERT, Steering Wheel Cover.....	10.280-5	KEY, Ignition Switch Lock	3.135-4
INSERT - CENTER LOGO, Cover Assembly ..	10.280-3b	KEY, Liftgate Handle Lock Cylinder	28.575-3
INSULATION, Air Conditioning Hose	13.440-10	KEY, Power Steering Pump Drive Shaft	10.440-4
INSULATION, Blower Motor	13.072-17	KEY, Stowage Compartment Lock	15.201-2
INSULATION, Dash	29.309-1	KEY, Tailgate Lock Cylinder.....	23.085-3
INSULATION, Evaporator Housing	13.488-1a	KEY, Tamper Restraint	31.220-1
INSULATION, Front Floor Pan (Front)	29.309-4	KEY, Vibration Damper Hub.....	1.047-1
INSULATION, Front Floor Pan (Front And Rear)	29.309-4a	KIT, Brake Soring.....	8.008-10
INSULATION, Front Floor Pan (One-Piece) ..	29.309-5a	KNOB, Air Conditioning Blower Switch.....	13.080-3
INSULATION, Front Floor Pan (Two-Piece) ..	29.309-5	KNOB, Air Conditioning Temperature Control Thermostat.....	13.477-2
INSULATION, Front Floor Tunnel.....	29.309-6	KNOB, Cigar Lighter.....	3.352-3
INSULATION, Hood	12.001-2	KNOB, Clock Reset	3.360-2
INSULATION, Rear Auxiliary Floor	29.309-7	KNOB, Directional Signal Lever	3.324-3
INSULATOR, Automatic Speed Control Wiring Harness	4.330-5	KNOB, Front Door Lock Push	23.054-1
INSULATOR, Carburetor.....	4.004-2	KNOB, Front Passenger Seat Actuating Rod ..	29.103-8
INSULATOR, Center Horn Button Receiver ..	3.400-17	KNOB, Front Seat Back Latch Actuating ..	29.105-36
INSULATOR, Directional Signal.....	3.325-1	KNOB, Gear Shift Lever	7.030-1
INSULATOR, Dome Lamp Harness In Door Pillar.....	3.346-8	KNOB, Hazard Warning	3.690-2
INSULATOR, Exhaust Pipe Rear Support....	4.200-1	KNOB, Heated Rear Window Switch	3.770-3
INSULATOR, Front Engine Mounting	1.009-1	KNOB, Heater And Defroster Switch	13.078-1c
INSULATOR, Gasoline Tank Mounting Bracket.....	4.130-7	KNOB, Heater And Defroster Temperature Control.....	13.017-3a
INSULATOR, Gear Shift Lever Trunnion To Bellcrank	7.125-10	KNOB, Lighting Switch	3.150-1
INSULATOR, Instrument Cluster Socket....	3.525-3	KNOB, Power Amplifier Fader Switch.....	15.320-30
INSULATOR, Muffler And Tail Pipe Support	4.219-1	KNOB, Radio Speaker Control	15.320-12d
INSULATOR, Muffler Heat Shield	4.211-1a	KNOB, Rear Door Lock Push	23.054-2
INSULATOR, Muffler Support To Bracket ...	4.219-1a	KNOB, Reduction Unit Shift Lever	18.660-3
INSULATOR, Steering Gear Jacket Tube To Instrument Panel Bracket.....	10.339-3	KNOB, Remote Control Valve Assembly	18.585-3
INSULATOR, Tail Pipe Support.....	4.234-3	KNOB, Station Selector	15.320-3
INSULATOR, Transfer Case.....	18.185-1	KNOB, Sun Roof Operator	28.807-1
INSULATOR, Transfer Case (Plate And Bracket)	18.197-1	KNOB, Tailgate Window Switch.....	23.330-1a
INSULATOR, Transfer Case And Transmission Torque Reaction	18.210-1	KNOB, Transfer Case Shift Lever.....	18.130-1
Jeep			
AI - 18		Printed in U.S.A.	

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
- L -			
LAMP, Ash Receiver.....	22.092-4	LEVER, Reduction Unit Shift.....	18.660-1
LAMP, Brake Pressure Warning	3.651-1	LEVER, Reverse Shift Relay.....	6.199-3
LAMP, Courtesy	3.349-3	LEVER, Steering Wheel Actuator Shoe Release.....	10.848
LAMP, Engine Compartment	3.662-1	LEVER, Steering Wheel Release.....	10.801-1
LAMP, Front Fender Side Marker.....	3.720-1	LEVER, Transfer Case Shift.....	18.125-1
LAMP, Glove Box.....	3.378-2	LEVER, Transfer Case Shifting.....	18.180-1
LAMP, Instrument Panel Controls Identification	22.100-15	LEVER, Transmission Gear Shift	7.130-5
LAMP, Lighted Vanity Mirror	3.351-1	LEVER ASSEMBLY, Automatic Transmission Throttle Valve Control	16.500-1
LAMP, Parking And Front Directional Signal	3.292-1	LEVER ASSEMBLY, Foot Operated Parkina Brake.....	8.180-1
LAMP, Rear Side Marker	3.740-1	LEVER ASSEMBLY, Gear Shift Shaft Offset	6.190-6
LAMP ASSEMBLY, Backup	3.315-1	LEVER ASSEMBLY, Reduction Unit Shift... Lid, Front Floor Pan Tool Compartment Panel.....	18.630-4
LAMP ASSEMBLY, License.....	3.335-1	LIFT, Jack	20.006-2
LAMP ASSEMBLY, Tail, Stop And Rear Directional.....	3.300-1	LIFTGATE, Top Enclosure	14.140-2
LATCH, Front Door.....	23.050-1	LIGHT, Roll Bar And Auxiliary Lamps.....	28.570-1
LATCH, Front Floor Pan Tool Compartment Lid.....	20.006-6	LIGHT ASSEMBLY, Fader Switch Indicator.. LIGHT BAR, Windshield Mounted Auxiliary Lamps	3.246-1 15.320-33
LATCH, Passenger Seat Lock	29.105-21	LIGHTER ASSEMBLY	3.352-1
LATCH, Rear Door.....	23.051-1	LINER, Body Sill	20.001-11
LATCH, Rear Liftgate Window.....	28.712-1	LINK, Brake Master Cylinder.....	8.054-1
LATCH, Rear Seat Back	29.226-1	LINK, Brake Shoe To Cylinder Operatina....	8.016-1
LATCH, Tailgate.....	23.039-1	LINK, Clutch Release Rod	5.160-1c
LATCH, Tailgate Lock.....	31.132-1	LINK, Front Suspension Sway Stabilizer To Spring Tie Plate Connectina	10.260-6
LATCH, Tailgate Slam Lock	28.580-3	LINK, Power Brake Unit To Pedal	8.420-1
LATCH ASSEMBLY, Sun Roof.....	28.806-4	LINK, Tailgate Chain.....	23.006-6b
LEAD TUBE, Condenser To Receiver	13.440-2	LINK, Tailgate Chain Cap	31.165-1
LEAF, Front Spring No. 1	11.072-1	LINK, Throttle Valve Control Adjustina Carburetor To Rod.....	16.510-1
LEAF, Front Spring No. 2	11.072-2	LINK, Transfer Case Shift Control Rod	18.170-1
LEAF, Rear Leaf Spring No. 1	11.104-1	LINK, Transfer Case Shifting Lever	18.182-1
LEAF, Rear Leaf Spring No. 2	11.104-2	LINK, Transfer Case Shifting Lever To Transfer Case	18.180-10
LENS, Backup Lamp	3.317-1	LINK, Windshield Wiper Motor Drive	22.035-1
LENS, Clock	3.369-2	LINK ASSEMBLY, Shifter Control	18.182-3
LFNS, Courtesy Lamp	3.340-4a	LINK ASSEMBLY, Temperature Control Cables	13.017-8b
LENS, Domelamp	3.346-3	LITTER BAG, Front Door Trim Panel	29.070-5
LENS, License Plate Lamp	3.339-1	LOCK, Gasoline Gauge To Gasoline Tank...	3.615-4
LENS, Lighted Vanity Mirror	3.351-2	LOCK, Gasoline Tank Outlet And Return Tube Assembly	4.160-15
LENS, Parkina And Front Directional Lamp (Inner)	3.292-4	LOCK, Hood	12.061-1
LENS, Parkina And Front Directional Signal Lamp	3.292-5a	LOCK, Rear Post Half.....	31.125-1
LENS, Parkina And Front Directional Lamp (Outer)	3.292-5	LOCK, Steering Gear Shaft	10.703-1
LENS, Pick-Up Box Cargo Lamp	3.671-3	LOCK, Tailgate	23.006-6a
LENS, Rear Domelamp	3.670-3	LOCK, Tailgate Half.....	31.120-1
LENS, Strobe Warning Lamp	15.516-2	LOCK, Tailgate Slam	28.580-1
LENS, Tail And Stop Lamp.....	3.306-1	LOCK, Upper Hood.....	12.060-7
LENS AND REFLECTOR ASSEMBLY, Roll Bar And Auxiliary Lamps	3.246-4	LOCK, Valve Spring Retainer.....	1.085-1
LENS KIT, Backup Lamp	3.317-1a	LOCK ASSEMBLY, Glove Box	22.073-1
LEVER, Bellcrank	7.115-1	LOCK BOLT, Steering Column	10.337-2b
LEVER, Bellcrank	18.695-1	LOCK PACKAGE, Rear Sliding Window	25.028-1a
LEVER, Brake Shoe Automatic Adjusting ...	8.012-1	LOCK PLATE, Rear Axle Bearing Nut.....	8.312-4
LEVER, Brake Shoe Parkina Brake.....	8.024-1	LOCK SHAFT, Steering Column.....	10.337-2a
LEVER, Clutch Throwout	5.123-1	LOCKTITE	30.050
LEVER, Column Gear Shift Upper	7.020-1	LOOM, Brake Tube Master Cylinder To Valve	8.101-3
LEVER, Directional Signal.....	3.324-2		
LEVER, Floor Gear Shift	7.001-1		
LEVER, Gear Shift.....	7.130-5		
LEVER, Hydramatic Transmission Detent...	6.551-7		
LEVER, Reduction Unit Control	18.630-1		

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
L - Cont.			
LOOP, Footman	12.001-15		
LOOP, Sun Roof Glass Stowage Bag Footman	28.813-2		
LOOP, Tow Shackle Assembly	11.067-6		
LOOP, Windshield Hold Down Footman	25.009-1		
LOUVER AND BEZEL ASSEMBLY	13.515-1		
LOUVER ASSEMBLY	13.515-2		
LOWER ORNAMENTATION	26		
LUBRICANT	18.500-5		
LUBRIPATE	30.035		
LUG, Third And Direct Shifter Fork	6.198-2a		
LUGGAGE RACK	15.250-2		
	Thru		
	15.250-11b	
- M -			
MAINSHAFT, Reduction Unit	18.615-4		
MANIFOLD, Exhaust Emission Air Injection	4.538-1		
MANIFOLD, Intake	1.067-1		
MANIFOLD ASSEMBLY, Exhaust	1.067-8		
MASK, Instrument Cluster	3.515-4		
MAST, Radio Front Fender Antenna	15.030-1a		
MAT, Front Floor	29.294-1		
MAT, Front Floor Extension	29.294-2		
MAT, Rear Auxiliary Floor	29.420-1		
MAT, Rear Floor	29.302-1		
MEDALLION - NAMEPLATE, Instrument Panel	22.100-10a		
MICROPHONE AND CORD ASSEMBLY, CB Radio	15.320-20		
MIRROR, Inside Rear View	27.084-1		
MIRROR HEAD, Outside Rear View	15.270-3		
MIRROR KIT, Outside Rear View	15.270-2		
MIRROR MOUNTING SUPPORT KIT, Inside Rear View	25.002-2		
MODULATOR, Throttle	4.005-1		
MODULATOR ADAPTER AND LEVER KIT, Hydramatic Transmission	6.655-2		
MODULATOR ASSEMBLY, Hydramatic Transmission Vacuum	6.655-1		
MODULE, Solid State Ignition	3.044-1a		
MOTOR, Air Conditioning Blower	13.072-2		
MOTOR, Carburetor Air Cleaner Air Temperature Control Vacuum	4.088-13		
MOTOR, Front Seat Power Adjusting Slide ..	29.126-1		
MOTOR, Heater And Defroster	13.072-1		
MOTOR, Tailgate Electric Operated Window Regulator	23.310-1		
MOTOR, Vacuum Air Valve	13.020-11		
MOTOR, Windshield Wiper	22.027-1		
MOTOR ASSEMBLY, Electric Window Drive ..	23.300-3		
MOULDING, Armrest	29.075-4		
MOULDING, Cap Flat Trim	28.720-1		
MOULDING, Front Body Pillar Drip	20.395-2		
MOULDING, Front Door Trim Panel	23.198-1		
MOULDING, Headlining Retainer Center	29.014-6		
MOULDING, Headlining Retainer End Cap	29.014-5		
MOULDING, Headlining Side Retainer "J" ..	29.014-1		
MOULDING, Instrument Cluster And Radio Speaker Opening	22.056-6		
MOULDING, Rear Door Trim Panel	23.198-2		
M - Cont.			
MOULDING, Roof Edge Trim	28.718-1		
MOULDING, Side Roof Rail Drip	20.395-1		
MOULDINGS, Exterior Ornamentation	26		
MOULDINGS, Lower Ornamentation	26		
MOULDINGS, Rear Quarter Finish	26		
MOULDINGS, Rear Window Finish	26		
MOULDINGS, Upper Ornamentation	26		
MOULDINGS, Windshield Finish	26		
MUFFLER	4.210-1		
- N -			
NAMEPLATE, Instrument Panel	22.100-10		
NECK, Gasoline Tank Filler Upper	4.141-1		
NIPPLE, Heater Hose To Manifold	13.050-6		
NIPPLE, Power Brake Vacuum Unit	8.460-5		
NOZZLE, Defroster	13.118-1		
NOZZLE, Timing Gear Oil	1.132-1a		
NOZZLE, Windshield Washer	22.053-5		
NO. 1 LEAF, Rear Leaf Spring	11.104-1		
NO. 2 LEAF, Rear Leaf Spring	11.104-2		
NUT, Air Cleaner Mounting Bracket	4.088-11b		
NUT, Brake Shoe Adjusting Screw	8.014-3		
NUT, Carburetor Air Cleaner Retainer	4.088-11		
NUT, Carburetor Choke Heater Tube	4.020-3		
NUT, End Rail Adjusting Stud	15.250-8b		
NUT, External Spare Tire Retaining	14.206-1		
NUT, Front Axle Pinion	9.350-4		
NUT, Front Wheel Braking Retaining	8.296-6		
NUT, Gasoline Gauge Wire To Gauge	3.615-6		
NUT, Internal Spare Tire Retaining	14.160-5		
NUT, Lighting Switch To Instrument Panel ..	3.145-4		
NUT, Lower Dovetail To Crossmember	12.060-4		
NUT, Power Steering Gear Pitman Shaft Adjusting Screw	10.600-1		
NUT, Power Steering Gear Upper Thrust Bearing Adjuster Lock	10.637-1		
NUT, Rear Axle Pinion	9.050-4		
NUT, Rear Wheel Bearing Adjusting	8.312-5		
NUT, Spare Tire Retaining	14.206-1		
NUT, Steering Gear Cross Shaft Adjusting Screw	10.308-2		
NUT, Steering Gear Worm Ball Bearing Adjuster Lock	10.326-2		
NUT, Threespeed Transmission Main Shaft ..	6.068-2		
NUT, Tie Down Stud	15.250-6b		
NUT, Transfer Case Front Yoke To Shaft ..	18.110-3		
NUT, Transfer Case Rear Yoke To Shaft ..	18.115-3		
NUT, Transfer Case Shift Lever Knob	18.130-2		
NUT, Transfer Case Yoke To Output Shaft ..	18.570-3		
NUT, Turning Radius Stop Belt Adjusting ..	10.010-2		
NUT, Upper Dovetail To Crossmember	12.060-3		
NUT, Valve Rocker Arm Ball	1.100-2		
- O -			
"O" RING, Air Conditioning Suction And Discharge Valve To Compressor	13.405-2a		
"O" RING, Brake Master Cylinder Piston Stop	8.050-2		

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.	
O - Cont.			P - Cont.	
"O" RING, Diaphram Control.....	18.565-2	PAD, Front Bucket Seat Back Kickpad Panel	29.112-1	
"O" RING, Engine Heater	15.145-2	PAD, Front Seat Back (High Back)	29.108-1a	
"O" RING, Extension To Cover	6.190-3	PAD, Front Seat Back (Low Back)	29.108-1	
"O" RING, Fourspeed Transmission Shifting Pivot.....	6.085-3	PAD, Front Seat Center Armrest.....	29.144-1	
"O" RING, Hydramatic Transmission Center Support.....	6.556-6	PAD, Front Seat Center Cushion	29.159-1	
"O" RING, Hydramatic Transmission Manual Shaft.....	6.551-3a	PAD, Front Seat Cushion (Cotton).....	29.164-1	
"O" RING, Hydramatic Transmission Oil Pump To Case.....	6.535-10	PAD, Front Seat Cushion (Foam)(Low Back)	29.168-1	
"O" RING, Hydramatic Transmission Parking Brake Pawl Shaft	6.552-3	PAD, Front Seat Cushion (High Back)	29.168-1a	
"O" RING, Oil Cooler Line Elbow To Transmission Seal.....	6.631-5	PAD, Instrument Panel Crash.....	22.100-2	
"O" RING, Output Shaft Seal.....	6.635-3	PAD, Insulator Muffler Front To Frame Bracket	4.211-3	
"O" RING, Power Brake Master Cylinder Piston Stop Bolt	8.515-2a	PAD, Insulator To Muffler Frame Bracket	4.219-1a	
"O" RING, Power Steering Gear Housing End Plug Seal	10.537-1	PAD, Longitudinal Seat Back.....	29.205	
"O" RING, Power Steering Gear Rack- Piston Backup Seal.....	10.582-1	PAD, Longitudinal Seat Cushion	29.206	
"O" RING, Power Steering Gear Upper Thrust Bearing Adjuster Seal	10.646	PAD, Radiator Stabilizer Bracket	2.021-1a	
"O" RING, Power Steering Gear Valve Spool To Valve Body	10.626-1	PAD, Rear Seat Back.....	29.224-1	
"O" RING, Quick Disconnect Coupling.....	13.440-3d	PAD, Rear Seat Cushion (Cotton)	29.194-1	
"O" RING, Reduction Unit Shift Lever	18.630-3	PAD, Rear Seat Cushion (Foam)	29.194-2	
"O" RING, Reverse Rocker Arm	6.198-5d	PAD, Roof Panel Silencer.....	20.420-4	
"O" RING, Speedometer Driven Gear	3.591-6	PAD, Roof Trim Panel.....	29.015-3	
"O" RING, Transfer Case To Transmission ..	18.500-3a	PAD, Silencer Power Seat.....	29.129-1	
"O" RING KIT, Air Conditioning Compressor	13.400-34	PAD, Skid Plate To Tank.....	4.131-9	
"O" RING KIT, Power Steering Gear.....	10.550-1	PAD ASSEMBLY, Fuel Tank	4.130-13	
"O" RING SEAL, Hoses To Gear Or Pump ..	10.528-1	PAN, Hydramatic Transmission Oil.....	6.507-1	
OIL, Motor.....	1.207-1	PAN ASSEMBLY, Center Floor.....	20.007-1	
OIL SEAL, Front Axle Pinion Bearing	9.364-1	PAN ASSEMBLY, Engine Oil.....	1.151-1	
OIL SEAL, Front Axle Shaft Inner.....	9.368-3	PAN ASSEMBLY, Rear Floor.....	20.035-1	
OIL SEAL, Rear Axle Pinion Bearing.....	9.064-1	PANEL, Auxiliary Gasoline Tank Side	4.131-19	
OIL SEAL, Transfer Case Front Bearing Cap	18.015-4	PANEL, Body Lock Pillar Finish	20.205-4	
OIL SEAL, Transfer Case Rear Bearing Cap.	18.080-5	PANEL, Body Rear Center Lower	20.330-1	
OPERATOR, Sun Roof Arm.....	28.806-1	PANEL, Body Rear Center Lower Closing..	20.335-1	
ORNAMENTATION, Exterior	26	PANEL, Body Side.....	20.172-2	
OUTLET, Heater Housing Air	13.012-2b	PANEL, Body Side Lower.....	31.050-1	
OUTPUT SHAFT KIT, Hydramatic Trans- mission To Rear Internal Gear	6.634-3	PANEL, Body Side Upper Rear Inside	20.172-3	
OVERHAUL KIT, Standard Transmission Small Parts.....	6.001-3	PANEL, Cap Roof	28.703-1	
OVERHAUL REPAIR KIT, Hydramatic Transmission.....	6.501-2	PANEL, Cap Side.....	28.702-1	
OVERLAY, Accelerator Pedal Trim	4.040-5	PANEL, Center Pillar Trim.....	29.019-1	
OVERLAY, Bumper Bar Rubber.....	12.184-2	PANEL, Cowl Side Inner.....	20.155-3	
OVERLAY, Door Armrest	23.215-1	PANEL, Cowl Side Outer	20.155-1	
OVERLAY, Front Door Trim Panel	23.198-3	PANEL, Cowl Top.....	20.150-1	
OVERLAY, Rear Door Trim Panel Woodgrain	23.198-4	PANEL, Cowl Trim	29.010-1	
OVERLAY, Instrument Cluster Bezel	3.510-2	PANEL, Cowl Ventilator Intake Cover	22.016-1	
OVERLAY, Instrument Panel	22.100-10b	PANEL, Front Cowl Side Outer.....	20.155-2	
- P -			PANEL, Front Door Outer	23.001-2
PAD, Antenna Mounting	15.030-4	PANEL, Front Door Trim.....	29.070-1	
PAD, Console Armrest.....	27.273-1	PANEL, Front Floor Pan Tool Compartment.	20.006-1	
			PANEL, Front Louver Housing And Control .	13.515-3
			PANEL, Front Quarter Trim	29.460-1
			PANEL, Front Stone Shield	20.117-1
			PANEL, Grille Face Assembly	20.116-1
			PANEL, Instrument	22.056-2
			PANEL, Rear Door Lock Pillar Trim.....	29.023-1
			PANEL, Rear Door Trim	29.071-1
			PANEL, Rear Floor Pan To Side Sill Extension.....	20.035-5
			PANEL, Rear Floor Riser.....	29.202-1
			PANEL, Rear Quarter Center Inner	20.267-1
			PANEL, Rear Quarter Lower	12.125-2
			PANEL, Rear Quarter Lower Front Inner	20.269-1
			PANEL, Rear Quarter Lower Inner	20.268-1
			PANEL, Rear Quarter Trim.....	29.460-2

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
P - Cont.			
PANEL, Rear Quarter Trim (Tool Compartment)	29.460-3	PIN, Front Axle Differential Shaft	9.336-3
PANEL, Rear Quarter Trim Upper	29.026-1	PIN, Front Door Restraint Bracket	23.015-6
PANEL, Rear Quarter Upper	12.125-1	PIN, Front Floor Pan Tool Compartment Lid Hinge	20.006-3
PANEL, Rear Quarter Upper Inner	20.266-1	PIN, Front Seat Frame Pivot	29.105-29
PANEL, Rear Station Wagon Door Outer....	23.002-2	PIN, Hinge License Plate	14.098-13
PANEL, Rear Trim.....	29.028-1	PIN, Horn Blowing Contact	3.400-13
PANEL, Rocker Assembly	20.175-1	PIN, Hydramatic Transmission Front Servo..	6.530-5
PANEL, Splash Apron	12.077-1	PIN, Hydramatic Transmission Manual Shaft Anchor	6.551-4
PANEL, Tailgate Inner.....	23.006-2	PIN, Hydramatic Transmission Oil Pump....	6.535-8
PANEL, Tailgate Opening Lower Pillar Closing.....	20.315-4	PIN, Hydramatic Transmission Rear Band... .	6.546-1
PANEL, Tailgate Opening Side Pillar Closing.....	20.315-5	PIN, Hydramatic Transmission Valve Body Plug	6.660-9
PANEL, Tailgate Outer.....	23.006-1d	PIN, Idler Gear Shaft Retaining	6.168-2
PANEL, Windshield Header	20.150-4	PIN, Oil Pump Drive Gear.....	1.160-3
PANEL ASSEMBLY, Body Rear.....	20.325-1	PIN, Oil Pump To Cylinder Block Dowel....	1.154-3
PANEL ASSEMBLY, Body Side.....	20.172-1	PIN, Piston	1.149-1a
PANEL ASSEMBLY, Body Side.....	31.030-1	PIN, Power Brake Unit Operatina Bellcrank Lever Clevis	8.430-4
PANEL ASSEMBLY, Front.....	31.020-1	PIN, Power Brake Unit Operatina Bellcrank Lever Pivot	8.430-2
PANEL ASSEMBLY, Front Floor.....	20.005-2	PIN, Power Steering Pump Rinq To Body Dowel	10.435-5
PANEL ASSEMBLY, Inner Cowl Top	20.150-5	PIN, Rear Axle Differential Shaft	9.036-3
PANEL ASSEMBLY, Rear Quarter Inner....	20.265-1	PIN, Rear Door Hinge	23.023-1
PANEL ASSEMBLY, Rear Wheelhouse.....	20.272-1	PIN, Rear Quarter Window Handle Sprin.....	25.027-7
PANEL ASSEMBLY, Roof.....	20.420-1	PIN, Reduction Unit Sprin.....	18.620-3
PANEL EXTENSION, Lower Rear Quarter...	12.125-3	PIN, Reverse Selector Fork Pivot	6.171-1
PAWL, Front Passenger Seat Latching.....	29.103-14	PIN, Seat Lock Latch Sprin.....	29.105-24
PAWL, Front Seat Back Latch Control	29.105-32	PIN, Steering Wheel Actuator Lock Shoe Retaining	10.845-1
PAWL, Hydramatic Transmission Parking Brake.....	6.552-1	PIN, Steering Wheel Actuator Pivot.....	10.832-1
PAWL, Transfer Case Shift Control Rod....	18.160-2	PIN, Steering Wheel Actuator Shoe Release Lever	10.849-1
PEDAL, Accelerator	4.040-1	PIN, Tailgate Hinge	23.006-8
PEDAL, Brake	8.140-1	PIN, Threespeed Transmission Guide Control Housing	6.018-4a
PEDAL, Clutch.....	5.135-1	PIN, Threespeed Transmission Idler Gear Shaft Retaining	6.168-2
PEG, Rear Leaf Spring To Axle,.....	11.100-7	PIN, Timing Case Cover To Cylinder Block Dowel	1.120-3
PICK-UP BOX ASSEMBLY	31.001-1	PIN, Tow Shackle Loop To Bracket	11.067-4
PILLAR, Lower Body Front.....	20.195-3	PIN, Transmission Countershaft	6.159-2
PILLAR, Lower Body Lock	20.205-3	PIN, Transmission Speed Finder Interlock...	6.215-1
PILLAR, Rear Quarter Body Lower Lock...	20.235-2	PIN, Valve Rocker Arm Shaft Plaq	1.098-6
PILLAR, Rear Quarter Body Upper Lock ...	20.235-1	PIN, Washer To Output Shaft Roll	6.068-7
PILLAR, Upper Body Front	20.195-2	PIN SET, Piston.....	1.149-1
PILLAR, Upper Tailgate Inner Opening....	20.315-3	PINCHWELT, Roof Rail	29.014-4
PILLAR, Upper Tailgate Outer Opening....	20.315-2	PINION CAGE ASSEMBLY, Reduction Unit.. .	18.615-1
PILLAR ASSEMBLY, Body Center	20.220-1	PINION OUTPUT AND REACTION KIT, Hydramatic Transmission.....	6.590-2
PILLAR ASSEMBLY, Body Front	20.195-1	PIPE, Exhaust	4.178-1
PILLAR ASSEMBLY, Tailgate Opening.....	20.315-1	PIPE, Exhaust Extension	4.178-2
PIN, Automatic Speed Control Chain Clevis ..	4.390-2	PIPE, Hydramatic Transmission Oil Strainer Intake	6.509-2
PIN, Brake Shoe Hold Down Spring Or Clip Retaining	8.008-7	PIPE, Hydramatic Transmission Valve To Governor	6.660-10
PIN, Column Gear Shift Upper Lever Pivot ..	7.020-3	PIPE, Tail.....	4.227-1
PIN, Control Selector Arm Retaining.....	6.190-5a		
PIN, Cylinder Head To Block Dowel.....	1.059-3		
PIN, Engine Oil Pump Release Valve Sprin Retainer Cotter	1.176-3		
PIN, Floor Gear Shift Lever Fulcrum	7.001-4		
PIN, Fourspeed Transmission Gear Shift Interlock.....	6.018-7		
PIN, Fourspeed Transmission Reverse Plunger Poppet Retainer	6.020-8		
PIN, Fourspeed Transmission Shifting Arm Pivot	6.085-4		

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
P - Cont.			P - Cont.
PISTON.....	1.143-1	PLATE, Gasoline Tank Filler Neck Flange	4.141-18
PISTON, Disc Brake Caliper	8.810-8	PLATE, Gasoline Tank Skid	4.131-2
PISTON, Hydramatic Front Servo.....	6.530-1	PLATE, Gear Selector Arm.....	6.198-4a
PISTON, Hydramatic Transmission Direct Clutch Assembly	6.562-4	PLATE, Gear Selector Interlock	6.198-5a
PISTON, Hydramatic Transmission Forward Clutch	6.595-3	PLATE, Gear Shift Operating Shaft Stop	7.038-8
PISTON, Hydramatic Transmission Front Accumulator	6.533-1	PLATE, Heater And Defroster Motor Mounting ..	13.072-1b
PISTON, Hydramatic Transmission Intermediate Clutch	6.554-1a	PLATE, Hydramatic Transmission Direct Clutch Backing	6.562-5
PISTON, Hydramatic Transmission Rear Servo	6.540-1	PLATE, Hydramatic Transmission Direct Clutch Driven.....	6.562-7
PISTON, Hydramatic Transmission Rear Servo Accumulator	6.548-1	PLATE, Hydramatic Transmission Forward Clutch Drive (Steel)	6.595-6
PISTON, Master Cylinder Secondary.....	8.044-1	PLATE, Hydramatic Transmission Forward Clutch Drive (Wave)	6.595-5
PISTON, Power Brake Master Cylinder Secondary	8.515-1	PLATE, Hydramatic Transmission Forward Clutch Driven.....	6.595-7
PISTON KIT, Hydramatic Transmission Intermediate Clutch	6.554-1	PLATE, Hydramatic Transmission Inter- mediate Clutch Driving.....	6.554-2
PISTON SET, Front Brake Wheel Cylinder ..	8.078-1	PLATE, Hydramatic Transmission Inter- mediate Clutch Reaction	6.554-4
PISTON SET, Rear Brake Wheel Cylinder...	8.078-2	PLATE, Hydramatic Transmission Inter- mediate Clutch Reaction Wave	6.554-5
PIVOT, Bellcrank To Throwout Lever Link..	5.229-1	PLATE, Hydramatic Transmission Valve Body Spacer.....	6.660-11
PIVOT, Clutch Release Idler	5.168-9	PLATE, Instrument Cluster Gauge	3.506-1
PIVOT, Control Stop	4.052-2	PLATE, Insulator To Frame Bracket	4.219-2
PIVOT, Fourspeed Transmission Reverse Shifting Arm.....	6.085-2	PLATE, Liftgate Seal Backing	28.587-4
PIVOT, Passenger Seat Hinge	29.105-11	PLATE, Lock Striker Tapping	20.172-8
PIVOT, Valve Rocker Arm	1.101-1	PLATE, Oil Pump Drive Shaft Cover	1.161-1b
PIVOT ASSEMBLY, Clutch Throwout	5.130-1	PLATE, Pintle Hook Reinforcement.....	11.066-4
PIVOT KIT, Front Door Ventilator Window Upper.....	23.118-1	PLATE, Power Lock And Window Switch Mounting	23.067-1a
PLATE, Accelerator Pedal Mounting	4.050-3a	PLATE, Power Steering Pump End.....	10.445-4
PLATE, Air Conditioning Blower Motor Mounting	13.072-12	PLATE, Power Steering Pump Pressure....	10.445-3
PLATE, Blower Motor Switch.....	13.078-2a	PLATE, Power Steering Pump Pulley Belt Adjusting	10.455-5
PLATE, Brake Shoe Anchor Pin Guide.....	8.022-1	PLATE, Rear Brake Support	8.002-1
PLATE, Clutch Master Cylinder Reinforcement	5.207-2	PLATE, Rear Door Scuff.....	27.007-1
PLATE, Column Gear Shift Upper Lever Housing Lock	7.020-7	PLATE, Rear Leaf Spring To Axle U-Bolt Tie	11.136-1
PLATE, Door Hinge Lower Tapping	23.016-3a	PLATE, Reduction Unit Pinion Cage Lockup	18.615-8
PLATE, Draw Bar	11.068-11	PLATE, Reduction Unit Ring Gear Collar...	18.615-11
PLATE, Driven	5.040-1	PLATE, Regulator Mounting To Splash Apron	4.364-1
PLATE, Evaporator Control Panel Access Cover.....	13.488-4	PLATE, Reinforcement	3.084-2
PLATE, Exhaust Gas Recirculating Valve Restrictor	4.700-7	PLATE, Reinforcement Lower Muffler Heat Deflector	4.211-4
PLATE, Fourspeed Transmission Adapter To Transfer Case	6.053-1	PLATE, Ring Gear Flex	6.523-1
PLATE, Fourspeed Transmission Synchro- nizer Low And Second	6.100-3a	PLATE, Seat Belt Anchor	27.290-7
PLATE, Fourspeed Transmission Synchro- nizer Third And Fourth.....	6.100-3	PLATE, Shift Rail Support	6.199-1
PLATE, Frame Reinforcement Rear	11.066-13	PLATE, Spare Tire Retaining	14.160-4
PLATE, Front Brake Support.....	8.001-1	PLATE, Steering Column Access Plate Cover Filler	20.120-16
PLATE, Front Door Scuff	27.005-1	PLATE, Steering Column Shroud Retaining ..	10.852-1
PLATE, Front Leaf Spring To Axle "U" Bolt Tie.....	11.088-3	PLATE, Steering Gear Jacket Tube To Toeboard Support	10.350-1
PLATE, Front Seat Rear Corner Trim.....	29.103-5	PLATE, Striker-Door Latch Assembiy Tapping	23.087-5

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
P - Cont.			P - Cont.
PLATE, Tailgate Lock Striker Tapping	20.315-10	PLUG, Reduction Unit Drain	18.610-3
PLATE, Tailgate Side Wedge.....	23.006-27	PLUG, Reduction Unit Housing Expansion ..	18.620-1
PLATE, Tail Light Mounting	12.125-4	PLUG, Reduction Unit Housing Taper (At Poppet Spring)	18.620-8
PLATE, Threespeed Transmission Synchronizer Clutch Shaft Low And Reverse	6.100-2	PLUG, Reduction Unit Housing Taper (At Shift Rail)	18.620-2
PLATE, Threespeed Transmission Synchronizer Clutch Shaft Second And High	6.100-1	PLUG, Side Panel Holes.....	14.208-1
PLATE, Torque Reaction	18.200-6	PLUG, Steering Housing Oil Filler.....	10.294-1
PLATE, Transfer Case And Transmission Reinforcing	18.210-5	PLUG, Tailgate Hinge Tube.....	31.150-4
PLATE, Transfer Case Intermediate Gear Shaft Lock.....	18.050-7	PLUG, Transfer Case Cover Filler.....	18.151-6
PLATE, Transmission Reverse Idler Shaft And Countershaft.....	6.172-1	PLUG, Transfer Case Cover Magnetic	18.515-9
PLATE, Windshield Catch Hold Down Tapping.....	25.007-1	PLUG, Transfer Case Cover Oil Tube	18.515-11
PLATE, Windshield Wiper Motor Cover.....	22.027-7c	PLUG, Transfer Case Drain.....	18.010-4
PLATE ASSEMBLY, Hydramatic Trans- mission Direct Clutch Drive	6.562-6	PLUG, Transfer Case Drain (Quadra Trac) ..	18.510-10
PLATE ASSEMBLY, Hydramatic Trans- mission Intermediate Clutch Drivina	6.554-3	PLUG, Transfer Case Filler.....	18.010-3
PLUG, Armrest Screw Hole.....	29.075-3	PLUG, Transfer Case Shift Rod Interlock ...	18.100-3
PLUG, Camshaft Rear Bearing.....	1.041-2	PLUG, Transfer Case Shift Rod Poppet Spring	18.100-8
PLUG, Catalytic Converter.....	4.212-1a	PLUG, Transfer Case Taper.....	18.001-4
PLUG, Compressor Oil Filler.....	13.400-33	PLUG, Transmission Control Housing	6.018-5
PLUG, Counter Shaft Rear	6.005-6	PLUG, Transmission Drain.....	6.005-5
PLUG, Cover.....	6.005-7	PLUG, Transmission Filler Pipe.....	6.005-4
PLUG, Cylinder Block Core Hole	1.038-1	PLUG, Valve Body (Pressure Regulator) ..	6.660-12
PLUG, Cylinder Block Drain	1.020-3	PLUG, Valve Body (Valve Bore)	6.660-13
PLUG, Cylinder Block Oil Filter By-Pass...	1.038-2	PLUG, Vapor Canister Meterina.....	4.144-1a
PLUG, Cylinder Head Core.....	1.059-4	PLUG, Wiring Harness Slots In Front And Rear Pillar.....	23.067-12
PLUG, Door Armrest Screw Hole	29.075-3	PLUG KIT, License Plate Lamp	3.341-1a
PLUG, Engine Oil Pan Drain.....	1.151-3	PLUNGER, Backup Lamp Switch	3.319-5
PLUG, Exhaust Manifold.....	1.067-9a	PLUNGER, Engine Oil Pump Release Valve.	1.176-1
PLUG, Exhaust Manifold Air Emission Pump Tube Holes.....	1.067-9	PLUNGER, Fourspeed Transmission Shift Rail End Reverse	6.020-3
PLUG, Fourspeed Transmission Expansion..	6.018-8	PLUNGER, Transmission Gear Shift Interlock.....	6.018-6
PLUG, Front And Rear Door Upper Corner...	23.016-5	PLUNGER, Windshield Wiper And Washer ...	22.038-3
PLUG, Front Axle Differential Housing Filler.....	9.305-1	POINTER, Gear Selector Dial	7.536-1
PLUG, Front Door Front Upper Corner.....	23.016-6	POLY WRAP, Carburetor Air Cleaner Element	4.088-6
PLUG, Gasoline Tank Drain.....	4.130-6	POPPET, Power Steering Gear Pressure Check Valve.....	10.530-1
PLUG, Heater Hose Elbow Fitting.....	13.050-5b	POPPET, Transmission Speed Finder Interlock.....	6.215-3
PLUG, Hydramatic Transmission Case.....	6.505-1	POWER SECTION, Power Brake Unit	8.415-1
PLUG, Hydramatic Transmission Case Oil Passage	6.503-11	POWER STEERING KIT.....	10.360-1
PLUG, Hydramatic Transmission Output Shaft	6.635-2	POWER UNIT ASSEMBLY, Power Brake	8.400-1
PLUG, Hydramatic Transmission Parking Brake Pawl Shaft Cup.....	6.552-4	PROTECTOR, Brake Master Cylinder Piston Cup	8.046-4a
PLUG, Intake Manifold Exhaust Gas Recirculation Holes	1.067-20	PROTECTOR, Cup.....	8.515-4a
PLUG, Intake Manifold Vacuum.....	1.067-18	PROTECTOR, Directional Signal Switch Wire Harness	3.321-16
PLUG, Mat And Carpet Center Armrest Mounting Hole	29.302-4	PROTECTOR, Front Seat Armrest Upholstery	29.145-2
PLUG, Oil Channel	1.185-1	PROTECTOR, Front Seat Back Pad	29.108-2
PLUG, Oil Pressure Regulator Hole.....	1.178-3	PROTECTOR, Front Seat Back Release Handle.....	29.105-40
PLUG, Power Steering Gear Housing End ...	10.535-1	PROTECTOR, Front Seat Cushion Pad.....	29.164-2
PLUG, Power Steering Gear Rack-Piston End	10.585-1	PROTECTOR, Gasoline Cap	4.138-2
PLUG, Rear Axle Filler	9.005-1	PROTECTOR, Gear Selector Dial Lamp Wire	7.535-9
PLUG, Rear Axle Shaft Flange	9.072-2	PROTECTOR, Rear Seat Back Spring.....	29.224-2
PLUG, Rear Door Locating Holes Nylon Button	23.002-5	PROTECTOR, Tailgate Wiring Harness	23.320-9
		PULLEY, Air Conditioning Compressor Drive.....	13.415-5
		PULLEY, Air Conditioning Drive Belt Back Idler.....	13.435-1
		PULLEY, Air Conditioning Intermediate	13.430-1

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
P - Cont.			R - Cont.
PULLEY, Air Injection Pump Drive Damper .	1.046-3	REGULATOR, Tailgate Electric Operated	
PULLEY, Alternator	3.017-2	Window	23.306-1
PULLEY, Exhaust Emission Air Pump.....	4.610-1	REINFORCEMENT, Axle Bumper	10.260-2a
PULLEY, Fan.....	2.003-1	REINFORCEMENT, Body Center Lower	
PULLEY, Vibration Damper.....	1.046-1	Pillar	20.230-2
PULL TAB, Glove Box Door	22.073-7	REINFORCEMENT, Body Center Upper	
PUMP, Exhaust Emission Air.....	4.500-1	Pillar.....	20.230-1
PUMP, Fuel.....	4.110-1	REINFORCEMENT, Bumper Rail.....	12.305-1
PUMP, Windshield Washer.....	22.051-1	REINFORCEMENT, Coolant Recovery Bottle	2.025-5
PUMP ASSEMBLY, Engine Oil.....	1.154-1	REINFORCEMENT, Cowl Top Panel.....	20.150-1a
PUMP ASSEMBLY, Power Steering.....	10.430-1	REINFORCEMENT, Electric Window	
PUMP ASSEMBLY, Water.....	2.080-1	Regulator Motor	23.300-5
- R -			
RACE, Hydramatic Transmission Intermediate Clutch Outer	6.554-6	REINFORCEMENT, Footman Loop	12.001-16
RACE, Steering Gear Shaft Upper Bearing Inner	10.825-1	REINFORCEMENT, Front Engine Mount	1.004-5
RACK, Steering Column Housing.....	10.335-1	REINFORCEMENT, Front Engine Support ...	1.004-7
RACK - PISTON - NUT ASSEMBLY, Power Steering Gear.....	10.555-1	REINFORCEMENT, Front Fender Extension .	12.075-6a
RADIO, In Dash	15.320-1	REINFORCEMENT, Hinge Bracket	14.210-8
RADIO ANTENNA KIT	15.030-1b	REINFORCEMENT, Latch Bracket	14.210-3a
RAIL, Cap Mounting.....	28.716-1	REINFORCEMENT, Lower Cover	15.320-2b
RAIL, Fourspeed Transmission Shift Direct And Third.....	6.018-1a	REINFORCEMENT, Outer Panel Front Door Outside Rear View Mirror.....	15.270-2a
RAIL, Fourspeed Transmission Shift Low And Second.....	6.018-2a	REINFORCEMENT, Plate Assembly.....	7.112-2
RAIL, Fourspeed Transmission Shift Reverse	6.018-3	REINFORCEMENT, Power Brake Unit	
RAIL, Front Bumper (LEAB)	12.168-1	Retainer Bracket	8.400-2a
RAIL, Front Bumper (WEAB)	12.300-1	REINFORCEMENT, Rear Crossmember	11.066-9
RAIL, Rear Bumper (LEAB)	12.168-6	REINFORCEMENT, Rear Cross Sill.....	20.040-2
RAIL, Rear Bumper (WEAB)	12.300-4	REINFORCEMENT, Rear Fender Extension .	20.173-1a
RAIL, Reduction Unit Shift.....	18.620-4	REINFORCEMENT, Rear Spring Hanger And Shock Mounting	11.107-2
RAIL, Side Roof.....	20.255-1	REINFORCEMENT, Right Hand Mirror	
RAIL, Threespeed Transmission Shift High And Intermediate.....	6.018-1	Mounting To Door Outer Panel	15.270-6c
RAIL, Threespeed Transmission Shift Low And Reverse	6.018-2	REINFORCEMENT, Side Roof Rail,.....	20.260-1
RAIL ASSEMBLY, Front	31.200-1	REINFORCEMENT, Spare Tire Hold Down ..	14.160-3
RAIL ASSEMBLY, Side	31.215-1	REINFORCEMENT, Spare Wheel Dampener..	14.204-1
RAIN SHIELD, Front Door	23.012-3	REINFORCEMENT KIT, Frame	11.001-2
RAIN SHIELD, Rear Door.....	23.012-9	RELAY, Automatic Speed Control	4.330-3
RALLY STRIPE, Exterior Decal.....	26	RELAY, Electric Choke	3.169-2
RECEIVER, Center Horn Button	3.400-15	RELAY, Heated Rear Window	3.770-7
RECEIVER ASSEMBLY, Rear Door And Rear Quarter Ash	23.182-1	RELAY, Horn	3.125-1
RECEIVER-DRYER, Air Conditioning.....	13.455-1	RELAY, Starting Motor (Solenoid).....	3.024-1
RECEPTACLE, Dovetail	23.006-17a	RELAY, Thermostat.....	13.477-4
REDUCTION UNIT ASSEMBLY	18.600-1	RELAY, Trailer Towing Harness	3.780-7
REEL, Seat Belt.....	27.290-6	REPAIR KIT, Brake Master Cylinder	8.048-1
REFLECTOR, Front Door Armrest Insert....	29.075-8	REPAIR KIT, Clutch Master Cylinder.....	5.211
REGULATOR, Alternator Voltage	3.019-1	REPAIR KIT, Clutch Slave Cylinder.....	5.227
REGULATOR, Automatic Speed Control	4.335-1	REPAIR KIT, Disc Brake Piston Housing ..	8.820-1
REGULATOR, Front Door Electric Operated Window	23.300-1	REPAIR KIT, Front Brake Wheel Cylinder...	8.080-1
REGULATOR, Generator Voltage.....	3.011-1	REPAIR KIT, Parking Brake Lever And Strut	8.024-5
REGULATOR, Rear Door Electric Operated Window	23.300-2	REPAIR KIT, Power Brake Master Cylinder .	8.512-1
REGULATOR, Rear Door Window	23.098-4	REPAIR KIT, Power Brake Power Unit	8.405-1
REGULATOR, Front Door Window.....	23.098-1	REPAIR KIT, Power Piston	8.485-8
REGULATOR, Manual Tailgate Window.....	23.040-1	REPAIR KIT, Rear Brake Wheel Cylinder...	8.080-2
		RESERVOIR, Power Steering Pump Oil	10.465-1
		RESERVOIR, Windshield Washer.....	22.051-2
		RESISTOR, Heater And Defroster Motor.....	13.072-14
		RESTRICTOR, Front Engine Support	1.009-4
		RETAINER, Backup Lamp Switch	3.319-7
		RETAINER, Body Wire Harness Thru Pillar Reinforcement	3.163-4
		RETAINER, Body Wire Harness Thru Pillar Reinforcement	20.230-4
		RETAINER, Bracket Dome And Reading Lamp	3.346-22

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
R - Cont.			R - Cont.
RETAINER, Brake Master Cylinder Cover ...	8.038-5	RETAINER, Neutral Safety Switch.....	3.022-5
RETAINER, Brake Master Cylinder Piston Cup	8.046-3	RETAINER, Oil Filter Bypass Valve.....	1.220-1
RETAINER, Brake Master Cylinder Push Rod	8.054-1a	RETAINER, Outside Rear View Remote Control Mirror.....	15.270-8
RETAINER, Brake Pedal	8.164-1	RETAINER, Power Brake Master Cylinder ...	8.510-6
RETAINER, Brake Shoe Hold Down Spring ..	8.008-9	RETAINER, Power Brake Master Cylinder Secondary Piston Cup.....	8.515-4
RETAINER, Brake Shoe Parking Brake Lever Strut.....	8.024-3	RETAINER, Rear Auxiliary Floor Mat	29.420-3
RETAINER, Center Horn Button.....	3.400-2	RETAINER, Rear Door Trim Panel	29.071-3
RETAINER, Clutch Push Rod Boot	5.160-6a	RETAINER, Rear Door Window Regulator Stud.....	23.098-6
RETAINER, Clutch Release Idler Pivot Bushina Outer	5.168-18	RETAINER, Rear Wheel Bearing	8.303-1
RETAINER, Console Door	27.276-2	RETAINER, Rear Wheel Guide	8.310
RETAINER, Door Speaker Wire	15.320-11b	RETAINER, Speedometer Cable Grommet ... Control Mirror Escutcheon	3.570-5
RETAINER, Fader Switch Mounting	15.320-29	RETAINER, Steering Gear Jacket Tube Lower Bearing.....	10.347
RETAINER, Floor Gear Shift Lever Boot....	7.013-3	RETAINER, Steering Gear Shaft Lock Cover Screw.....	10.702-3
RETAINER, Floor Gear Shift Lever Cover ...	7.013-1a	RETAINER, Steering Gear Worm Bearina....	10.324-2
RETAINER, Fourspeed Transmission Floor Gear Shift Lever Fulcrum Spring ...	7.001-5	RETAINER, Steering Wheel Tilt Spring	10.856
RETAINER, Front Axle Shaft Inner.....	9.368-9	RETAINER, Stop Light Switch	3.333-2
RETAINER, Front Axle Shaft Seal Outer ...	9.368-8	RETAINER, Tail And Stop Lamp Lens.....	3.306-4
RETAINER, Front Door Lock Cylinder.....	23.086-1	RETAINER, Tailgate Lock Striker Tapping Plate	20.315-11
RETAINER, Front Door Trim Panel.....	29.070-3	RETAINER, Tailgate Window Regulator Stud	23.040-3
RETAINER, Front Door Window Regulator Stud.....	23.098-3	RETAINER, Transfer Case Shift Control Retainer And Pin.....	18.152-3
RETAINER, Front Quarter Trim Panel	29.460-4	RETAINER, Transfer Case Shift Lever Seal .	18.128-7
RETAINER, Front Seat Back Ash Receiver ..	29.110-2	RETAINER, Transmission Floor Gear Shift Lever Fulcrum Spring	7.001-5
RETAINER, Front Wheel Grease	8.296-1	RETAINER, Transmission Rear Bearing	6.052-2a
RETAINER, Gear Selector Dial Lamp Lens ..	7.535-10	RETAINER, Upper Bearing Housing	10.336-1b
RETAINER, Grease Catcher Front At Backing Plate.....	8.296-12	RETAINER, Valve Rocker Arm Shaft	1.102-2
RETAINER, Headlining Center Moulding ...	29.014-7	RETAINER, Valve Spring.....	1.084-1
RETAINER, Headlining Trim Panel Joint ...	29.014-3	RETAINER, Wiring Harness Grommet.....	3.166-2
RETAINER, Hood Lock Lower Dovetail Spring	12.060-5	RETAINER ASSEMBLY, Front Door Ventilator Weatherstrip.....	23.110-3
RETAINER, Hydramatic Transmission	6.655-5	RETAINER ASSEMBLY, Horn Blowing Mechanism	3.401-8
RETAINER, Hydramatic Transmission Case To Adapter	6.655-4	RETAINER ASSEMBLY, Horn Blowing Mechanism	10.280-3a
RETAINER, Hydramatic Transmission Direct Clutch Piston Release Spring	6.562-8	RETAINER AND PIN, Transfer Case Shift Lever.....	18.152-1
RETAINER, Hydramatic Transmission Forward Clutch Piston Spring.....	6.595-8	RETAINER CLIP, Hood Prop Rod.....	12.008-6
RETAINER, Hydramatic Transmission Front Servo Piston Spring	6.530-4	RING, Air Conditioning Blower Air Intake Orifice	13.072-7b
RETAINER, Hydramatic Transmission Intermediate Clutch Outer Race	6.554-7	RING, Ball Louver Retainer	13.515-2a
RETAINER, Hydramatic Transmission Intermediate Clutch Piston Spring	6.554-8	RING, Cancelling Directional Signal.....	3.321-6
RETAINER, Hydramatic Transmission Parking Brake Shaft	6.552-5	RING, Center Horn Button Contact	3.400-14a
RETAINER, Hydramatic Transmission Pressure Regulator Valve Spring	6.512-6	RING, Coupling Sleeve Snap.....	6.593-2
RETAINER, Hydramatic Transmission Rear Servo Piston Spring	6.540-2	RING, Fourspeed Transmission Main Shaft Snap	6.068-6
RETAINER, Ignition Switch Cylinder Harness, Relay To Horn	3.105-6	RING, Fourspeed Transmission Reverse Idler Gear Snap	6.170-3
RETAINER, Instrument Cluster Lens.....	3.515-3	RING, Fourspeed Transmission Synchronizer Low And Second	6.090-4
RETAINER, Instrument Panel Ash Receiver ..	22.096-1	RING, Fourspeed Transmission Synchronizer Low And Second Shifting Plate Retaining.	6.100-9
RETAINER, Lever Pivot Bushina	18.660-2a	RING, Fourspeed Transmission Synchronizer Third And Fourth.....	6.090-3
RETAINER, Lock Striker Tapping Plate ...	20.172-9		
RETAINER, Master Cylinder Push Rod Retention	8.046-1		

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
R - Cont.			
RING, Fourspeed Transmission Synchronizer Third And Fourth Snap.....	6.080-7	RING, Retaining.....	6.171-2
RING, Front Axle Shaft Snap	9.368-6	RING, Retaining Diaphraam Control To Shift Fork	18.565-3
RING, Front Axle Shaft Spider Assembly Snap.....	9.370-2	RING, Road Wheel Side.....	8.270-2
RING, Gear Shift Operating Shaft Retainer...	7.038-7	RING, Second Speed Gear Snap	6.120-4
RING, Headlamp Retaining.....	3.275-1	RING, Shifter Interlock	6.018-7a
RING, Hydramatic Front Servo Piston Oil Seal.....	6.530-3	RING, Speedometer Driven Gear Seal	3.591-3
RING, Hydramatic Transmission Accumulator Piston Oil Seal	6.533-4	RING, Steering Gear Cross Shaft Adjusting Screw Snap.....	10.306-3
RING, Hydramatic Transmission Accumulator Piston Retainer Snap	6.533-3	RING, Steering Gear Jacket Tube Upper Bearing Retaining.....	10.344-5
RING, Hydramatic Transmission Center Support Snap.....	6.556-7	RING, Steering Gear Lower Shaft To Steering Gear Coupling Seal Retainer ..	10.750
RING, Hydramatic Transmission Direct Clutch Hub And Backing Plate Snap	6.562-9	RING, Steering Gear Shaft Lock Retaining...	10.703-2
RING, Hydramatic Transmission Direct Clutch Piston Spring Retainer	6.562-10	RING, Steering Gear Upper Shaft To Lower Or Intermediate Shaft Coupling Seal Retainer	10.733-1
RING, Hydramatic Transmission Forward Clutch Piston Spring Retainer Snap.....	6.595-9	RING, Steering Wheel Actuator Drive Shaft Retaining	10.830-4
RING, Hydramatic Transmission Front Internal Gear	6.634-2	RING, Stud Steering Knuckle Ball Snap	10.013-1
RING, Hydramatic Transmission Intermediate Clutch Backing Plate Snap	6.554-9	RING, Sun Roof Vinyl Trim.....	28.810-2
RING, Hydramatic Transmission Intermediate Clutch Outer Race Retainer Snap	6.554-10	RING, Threespeed Transmission Synchro- nizer Clutch Friction Low And Reverse ..	6.090-5
RING, Hydramatic Transmission Intermediate Clutch Piston Spring Retainer Snap.....	6.554-11	RING, Threespeed Transmission Synchro- nizer Clutch Snap Second And High	6.080-5
RING, Hydramatic Transmission Main Shaft Snap.....	6.630-2	RING, Transmission Front Ball Bearing Lock	6.048-1
RING, Hydramatic Transmission Output Shaft Snap.....	6.635-5	RING, Transmission Front Ball Bearing Snap	6.044-1
RING, Hydramatic Transmission Parkina Snap.....	6.551-6	RING, Valve Tappet Snap.....	1.088-2
RING, Hydramatic Transmission Pressure Regulator Valve Retaining Snap.....	6.512-5	RING AND RETAINER, Front Floor Pan Tool Compartment	20.006-5
RING, Hydramatic Transmission Rear Servo Accumulator Piston Oil Seal.....	6.548-2	RING AND SEAL KIT, Power Steering Gear Valve	10.625-1
RING, Hydramatic Transmission Rear Servo Piston Retainer Snap	6.540-4	RING SET, Fourspeed Transmission Synchronizer Third And Fourth	6.090-3a
RING, Ignition Switch Cylinder Antitheft	3.135-6	RING SET, Piston (Engine)	1.146-1
RING, Lens Retaining	15.516-2a	RING SET, Piston (Single Piston).....	1.146-1a
RING, Lens Retaining, Front Park And Directional	3.292-9	RING SET, Synchronizer Low And Second ...	6.090-4a
RING, Low Gear Snap	6.144-4	RING SET, Threespeed Transmission Synchronizer Clutch Friction	6.090-1
RING, Power Steering Gear Housing End Plug Retaining.....	10.540-1	RING SET, Transmission Overhaul Snap	6.004-1
RING, Power Steering Gear Rack-Piston	10.580-1	RIVET, Upper Pivot	23.118-2
RING, Power Steering Pump.....	10.435-4	ROD, Accelerator Pedal	4.045-1
RING, Power Steering Pump Drive Shaft Retainer Snap.....	10.440-3	ROD, Automatic Gear Selector Column To Bellcrank	7.125-1a
RING, Power Steering Pump End Plate Retaining	10.445-5	ROD, Automatic Transmission Throttle Valve Control	16.505-1
RING, Power Takeoff Cover To Transfer Case Cover Sealing.....	18.515-3	ROD, Automatic Transmission To Bellcrank .	7.125-1b
RING, Rear Axle Bearing Retaining	8.303-2	ROD, Bellcrank To Clutch Pedal Shaft.....	5.160-1
RING, Rear Axle Differential Pinion And Shaft Snap.....	9.040	ROD, Bellcrank To Rear Door Latch.....	23.057-4
		ROD, Bellcrank To Rear Door Lock Push Knob	23.057-3
		ROD, Clutch Pedal To Link	5.160-1a
		ROD, Dash To Radiator Air Deflector.....	20.130-1
		ROD, Front Door Locking	23.055-1
		ROD, Front Passenger Seat Latching	29.103-12
		ROD, Hood Prop	12.008-1
		ROD, Hydramatic Transmission Gear Shift...	7.125-1
		ROD, Link To Clutch Bellcrank.....	5.160-1b
		ROD, Parking Brake Release	8.182-2

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
R - Cont.			S - Cont.
<p>ROD, Passenger Seat Support Latch 29.132-9 ROD, Power Brake Unit Master Cylinder Piston Push 8.505-1 ROD, Power Door Actuator 23.067-16 ROD, Reduction Unit Shift Lever 18.670-1 ROD, Seat Lock Release 29.105-19 ROD, Shift (Lower) 18.700-1 ROD, Shift (Upper) 18.690-1 ROD, Steering Gear Jacket Tube Support 10.340-1 ROD, Sun Visor End Retaining 29.004-1 ROD, Sun Visor Mounting 29.003-2 ROD, Tailgate Counter Balance Torque 23.006-11 ROD, Tailgate Latch Actuating Bellcrank To Latch 31.131-1 ROD, Tailgate Latch Release Handle To Bellcrank 31.130-1 ROD, Transfer Case Shift 18.100-1 ROD, Transfer Case Shift Control (Direct And Low Range) 18.165-1 ROD, Transfer Case Shift Control (4WD And Neutral) 18.160-1 ROD, Transfer Case Shift Control Rod Torsion Spring Retaining 18.165-3 ROD, Transfer Case Shift Lever To Shifting Lever Connecting 18.180-8 ROD, Valve Push 1.095-1 ROD, Upper Throttle Valve Control Carburetor To Bellcrank 16.503-1 ROD ASSEMBLY, Clutch Fork Release 5.187-1 ROD ASSEMBLY, Connecting 1.136-1 ROD ASSEMBLY, Pitman Arm To Steering Arm Tie 10.118-2 ROD ASSEMBLY, Steering Arm To Steering Arm Tie 10.118-1 ROD KIT, Transfer Case Shift Control 18.165-5 ROLLER, Transmission Countershaft Rear Bearing 6.167-1 ROLLER, Transmission Reverse Idler Gear Bearing 6.170-4 ROLLER, Transmission Spline Shaft Pilot Bearing 6.076-1 ROLLER KIT, Hydramatic Transmission Center Support Low Clutch 6.556-3 ROTATOR, Exhaust Valve 1.084-2 ROTOR, Distributor 3.035-1 ROTOR, Power Steering Pump 10.435-3 ROTOR - VANE - RING KIT, Power Steering Pump 10.435-2 </p>			<p>SCREW, Headlamp Adjustina 3.268-1 SCREW, Headlamp Bulb Retaining Rina 3.275-2 SCREW, Hydramatic Transmission Center Support 6.556-5 SCREW, Rear Axle Differential Side Bearing Cap 9.018-1 SCREW, Speedometer Driven Gear Adapter Clamp 3.591-7 SCREW, Steering Column Locking Bolt Spring To Actuator 10.337-10 SCREW, Steering Gear Cross Shaft Adjustina 10.308-1 SCREW, Steering Gear Shaft Lock Cover 10.702-2 SCREW, Transfer Case Shift Control Rod Pawl Set 18.160-3 SCREW, Transfer Case Shift Fork To Rod Set 18.095-2 SCREW KIT, Brake Adjusting Screw 8.014-5 SCREW KIT, Sun Roof 28.806-3 SEAL, Auxiliary Gasoline Tank Outlet Tube 4.131-21 SEAL, Bellcrank To Throwout Lever Link 5.229-5 SEAL, Bezel To Back Panel 3.671-8 SEAL, Black Sponge Rubber-Door Glass Run Channel Weatherstrip 25.020-2 SEAL, Blower Motor To Dash 13.072-2d SEAL, Clutch Wear Adjuster To Throwout Lever 5.187-5 SEAL, Console Compartment Door 27.272-1 SEAL, Console Compartment Drain 27.272-2 SEAL, Door Inner Panel Dust 23.002-3 SEAL, Engine Oil Pan Timina Case Cover 1.152-3 SEAL, Engine Oil Pan To Bearing Cap 1.152-2 SEAL, Exhaust Pipe To Manifold 4.186-1 SEAL, Exhaust Valve 1.078-3 SEAL, Fender 31.040-3 SEAL, Fresh Air Inlet Valve 22.020-5 SEAL, Front Door Hinge 23.015-4 SEAL, Front Floor Pan Transmission Access Cover 20.005-5a SEAL, Front Spindle Bearing 10.004-17 SEAL, Front Steering Spindle Oil 10.004-14 SEAL, Gasoline Tank Filler Tube Protective Cover 4.143-3 SEAL, Gear Selector Bezel On Column Housing 7.537-1a SEAL, Heater Air Intake To Fresh Air Duct 13.012-2h SEAL, Heater And Defroster Blower Housing To Heater Housing 13.072-11 SEAL, Heater Core Drain To Dash 13.028-4 SEAL, Heater Core Tubes 13.028-2 SEAL, Heater Outlet 13.012-2d SEAL, Horn Button To Wheel 3.400-1b SEAL, Hydramatic Transmission Manual Shaft 6.551-3 SEAL, Hydramatic Transmission Oil Connector 6.660-8 SEAL, Hydramatic Transmission Oil Pump Front 6.535-11 SEAL, Hydramatic Transmission Oil Pump To Reaction Carrier 6.535-9 SEAL, Hydramatic Transmission Oil Strainer Intake Pipe 6.509-3 </p>
- S -			
<p>SCREEN, Evaporator Coil Filter 13.475-2 SCREEN, Hydramatic Transmission Governor 6.545-6 SCREEN, Side Window 28.706-3 SCREW, Air Cleaner To Carburetor 4.088-11c SCREW, Brake Shoe Adjustina 8.014-1 SCREW, Brake Wheel Cylinder Bleeder 8.088-1 SCREW, Brake Wheel Cylinder Bleeder 8.830-1 SCREW, Front Axle Differential Side Bearing Cap 9.318-1 SCREW, Gear Shift Plunger Spring 6.018-6b SCREW, Ground Wire To Crossmember 3.615-6a </p>			

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
S - Cont.			S - Cont.
SEAL, Hydramatic Transmission Rear Servo Piston.....	6.540-3	SEAL KIT, Air Conditioning Compressor (Except Four).....	13.400-3
SEAL, Intake Valve.....	1.077-3	SEAL KIT, Air Conditioning Compressor (Four).....	13.400-17a
SEAL, Modulator To Case.....	6.655-3	SEAL KIT, Exhaust Valve	1.078-5
SEAL, Oil Filler Tube To Transmission Case	6.510-3	SEAL KIT, Hydramatic Transmission Intermediate Clutch Piston	6.554-10
SEAL, Output Shaft Front And Rear	18.570-6	SEAL KIT, Intake Valve.....	1.077-5
SEAL, Output Shaft Oil.....	18.570-4	SEAL KIT, Power Steering Gear Housina End Plug.....	10.537-2
SEAL, Power Steering Pump Drive Shaft Oil.....	10.440-2	SEAL KIT, Power Steering Gear Pitman Shaft	10.605-1
SEAL, Power Steering Pump Mountina Stud..	10.430-5	SEAL KIT, Power Steering Gear Pitman Shaft Cover.....	10.612-2
SEAL, Power Steering Pump Oil Reservoir To Pump.....	10.465-3	SEAL KIT, Power Steering Gear Rack - Piston	10.582-2
SEAL, Power Steering Pump Pressure Hose Union Inner.....	10.470-9	SEAL KIT, Power Steering Gear Upper Thrust Bearing Adjuster.....	10.645-1
SEAL, Power Steering Pump Pressure Hose Union Outer	10.470-10	SEAL KIT, Power Steering Pump.....	10.430-3
SEAL, Propeller Shaft Sleeve Yoke Dust Cap	9.110-3	SEAL KIT, Rear Main Bearing Cap.....	1.032-1
SEAL, Rear Axle Bearina	8.303-3	SEAL KIT, Steering Gear Upper Shaft To Lower Shaft Couplina	10.725-1
SEAL, Rear Axle Drive Shaft Inner Oil.....	9.072-1	SEAL SET, Exhaust Valve.....	1.078-4
SEAL, Rear Wheel Oil	8.312-1	SEAL SET, Intake Valve.....	1.077-4
SEAL, Remote Control To Door Trim Panel..	15.270-10a	SEAL SET, Transmission	6.002-3
SEAL, Shifter Shaft	6.190-2	SEAT, Exhaust Valve Sprina	1.083-2
SEAL, Shift Lever Boot To Floor	18.128-2	SEAT, Power Brake Master Cylinder	8.517-2
SEAL, Speedometer Driven Gear	3.590-3	SEAT, Power Steering Gear Pressure Hose Connector.....	10.525-1
SEAL, Speedometer Driven Gear To Transfer Case	3.591-4	SEAT, Power Steering Gear Return Hose Connector.....	10.527-1
SEAL, Steering Gear Cross Shaft.....	10.310-1	SEAT, Steering Gear Jacket Tube Upper Bearing Spring.....	10.344-2
SEAL, Steering Gear Jacket Tube To Instrument Panel	10.339-5	SEAT, Steering Gear Shaft Upper Bearina Inner Race	10.826-1
SEAL, Steering Gear Jacket Tube To Toeboard.....	10.350-4	SEAT ASSEMBLY, Trimmed Front (High Back)	29.100-3
SEAL, Steering Gear Shaft Oil.....	10.320-1	SEAT ASSEMBLY, Trimmed Front (Low Back).....	29.100-2
SEAL, Steering Shaft Lower Couplina.....	10.700-2a	SEAT ASSEMBLY, Trimmed Rear (Incl. Supports)	20.180-1a
SEAL, Sun Roof Glass Frame.....	28.811-2	SEAT ASSEMBLY, Trimmed Rear (Less Supports)	29.180-2
SEAL, Tailgate Inner Panel Dust	23.013-4	SEAT ASSEMBLY KIT, Trimmed Front Passenger.....	29.100-1
SEAL, Tailgate Opening	23.013-2	SEAT ASSEMBLY KIT, Trimmed Rear.....	29.180-1
SEAL, Tailgate Pillar.....	23.013-7	SECTOR, Ignition Switch Actuator.....	3.130-6
SEAL, Timina Case Cover	1.123-1	SENDING UNIT, Oil Pressure.....	3.605-3
SEAL, Top Enclosure To Body Sides	28.608	SENDING UNIT, Water Temperature.....	3.610-3
SEAL, Top Enclosure To Windshield	28.610	SENSOR, Carburetor Cooling Fan	3.170-7
SEAL, Top Enclosure Side Door Header To Windshield	28.612	SENSOR, Engine Coolant Temperature	3.053-7
SEAL, Transfer Case Front Output Shaft Oil.	18.025-3	SENSOR, Exhaust Gas Recirculating Back Pressure	4.700-4
SEAL, Transfer Case Intermediate Gear Shaft	18.050-6	SENSOR, Oxygen And Connector	4.710-1
SEAL, Transfer Case Oil	18.520-9	SENSOR AND SHIELD ASSEMBLY	4.088-9a
SEAL, Transfer Case Shift Lever	18.128-1	SENSOR KIT, Carburetor Air Cleaner Temperature	4.088-9
SEAL, Transfer Case Shift Rod Oil.....	18.100-4	SEPARATOR, Ignition Wire	3.230-1
SEAL, Transmission Adapter Plate.....	6.053-2	SERVICE KIT, Air Conditioning Compressor Clutch	13.415-6
SEAL, Transmission Front Bearina Oil	6.021-1	SERVICE PORT, Air Conditioning Compressor.....	13.400-35
SEAL, Transmission Output Shaft	6.503-9	SHACKLE, Front Leaf Sprina.....	11.170-1
SEAL, Valve Stem	1.078-7	SHACKLE, Rear Leaf Sprina	11.170-2
SEAL, Windshield Wiper Motor Mountina.....	22.027-4	SHACKLE PLATE	11.170-4
SEALER, Front Door.....	10.545-1		
SEALER, Front Door Lowering Glass Bottom Channel.....	23.012-1		
SEALER, Metal Joint.....	25.030-2		
SEALER, Rear Door.....	30.026-1		
SEALER, Rear Door Lowering Glass Bottom Channel	23.012-6		
SEALER, Tailgate.....	25.032-2		
SEALER, Tailgate Glass Bottom Channel...	23.013-1		
SEALING LIP, Defroster Nozzle To Cowl Top	25.033-3		
	13.118-1a		

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
S - Cont.			S - Cont.
SHAFT, Brake Pedal.....	8.160-1	SHIFT LEVER KIT, Quadra Trac	
SHAFT, Carburetor Control.....	4.070-1	Reduction Unit.....	18.660-1a
SHAFT, Clutch And Brake Pedal.....	5.148-1	SHIM, Engine Mounting	1.009-1c
SHAFT, Engine Oil Pump Drive.....	1.161-1	SHIM, Front Door Hinge Pillar.....	23.016-4
SHAFT, Engine Oil Pump Idler Gear.....	1.157-2	SHIM, Front Spring To Axle	11.088-4
SHAFT, Front Axle Differential Pinion Mate	9.336-1	SHIM, Lock Pillar Striker	23.087-3
SHAFT, Front Axle Drive Spindle	9.368-2	SHIM, Rear Axle Bearing	8.300-1a
SHAFT, Front Output.....	18.540-1	SHIM, Rear Axle Differential Case	
SHAFT, Front Seat Back Latch Control	29.105-34	Side Bearing.....	9.045-3
SHAFT, Gear Shift Operatin	7.038-1	SHIM, Rear Axle Drive Pinion Adjusting	9.057-1a
SHAFT, Hydramatic Transmission Main.....	6.630-1	SHIM, Rear Door Hinge Plate To Door	23.023-3
SHAFT, Hydramatic Transmission Manual...	6.551-2	SHIM, Rear Leaf Spring To Spring Seat	11.100-8
SHAFT, Hydramatic Transmission Output...	6.635-1	SHIM, Rear Wheel Bearing	8.315
SHAFT, Hydramatic Transmission Parkin		SHIM, Starter To Block	3.020-6
Brake.....	6.552-2	SHIM, Steering Gear Housing Worm Cover....	10.298-2
SHAFT, Hydramatic Transmission Sun Gear	6.518-2	SHIM, Steering Gear Spacer To Frame.....	10.354-2a
SHAFT, Hydramatic Transmission Turbine ..	6.537-1	SHIM, Tailgate Wedge Plate Striker.....	23.039-9
SHAFT, Oil Pump Drive	1.160-1	SHIM, Transfer Case Front Output Shaft Rear	
SHAFT, Rear Axle Differential	9.036-1	Bearing Cap.....	18.028-3
SHAFT, Rear Axle Drive.....	9.068-1	SHIM KIT, Steering Gear Cross Shaft	
SHAFT, Rear Output.....	18.550-1	Adjusting Screw.....	10.309-1
SHAFT, Rear Shock Mounting.....	11.225-1	SHIM SET, Front Axle Drive Pinion Adjusting	9.357-1
SHAFT, Rear Spring Front Hanger.....	11.106-2	SHIM SET, Front Axle Differential Case	
SHAFT, Steering Gear.....	10.314-1	Side Bearing	9.345-1
SHAFT, Steering Gear Cross	10.306-1	SHIM SET, Front Axle Pinion	9.350-6
SHAFT, Steering Gear Intermediate.....	10.700-3	SHIM SET, Rear Axle Drive Pinion Adjusting	9.057-1
SHAFT, Steering Gear Lower.....	10.700-2	SHIM SET, Rear Axle Differential Case	
SHAFT, Steering Gear Upper	10.700-1	Side Bearing.....	9.045-1
SHAFT, Steering Wheel Actuator Drive.....	10.830-3	SHIM SET, Transfer Case Front Output Shaft	
SHAFT, Tailgate Lock Cylinder	23.081-7	Rear Bearing Cap.....	18.028-4
SHAFT, Transfer Case Intermediate Gear ...	18.050-2	SHIM SET, Transfer Case Rear Output	
SHAFT, Transfer Case Output.....	18.060-1	Shaft Bearing.....	18.080-8
SHAFT, Transfer Case Output Front.....	18.025-1	SHIM SET KIT, Rear Axle Differential Case	
SHAFT, Transfer Case Shift.....	18.180-6a	Side Bearing	9.045-2
SHAFT, Transmission Clutch.....	6.060-1	SHIM STRIP, Center Pillar Lower.....	23.087-4
SHAFT, Transmission Idler Gear.....	6.168-1	SHIM STRIP, Rear Door Lock Pillar.....	23.018-8
SHAFT, Transmission Shifter.....	6.190-1	SHIM STRIP, Rear Quarter Pivoting Type	
SHAFT, Transmission Spline.....	6.068-1	Window	25.027-5a
SHAFT, Valve Rocker Arm.....	1.098-1	SHOCK, Front	11.200-1
SHAFT ASSEMBLY, Front Axle Drive	9.368-1	SHOCK, Rear	11.220-1
Pitman.....	10.590-1	SHOE, Fourspeed Transmission Shifting	
SHAFT ASSEMBLY, Propeller	9.100-1	Reverse.....	6.085-5
SHAFT KIT, Power Steering Pump Drive....	10.440-1	SHOE, Shift Fork	18.565-5
SHEDDER, Crankshaft Sprocket Oil	1.132-3	SHOE, Steering Wheel Actuator Lock	10.843-1
SHELL, Headlamp	3.265-1	SHOE SET, Front Brake	8.004-1
SHELL ASSEMBLY, Body	20.001-1	SHOE SET, Front Wheel Disc Brake	
SCHILD, Battery Cable	3.200-4	(Non-Warranty)	8.816-1
SCHILD, Canister.....	4.144-7	SHOE SET, Front Wheel Disc Brake	
SCHILD, Exhaust Pipe Heat.....	4.180-1	(Warranty)	8.815-1
SCHILD, Front Axle Yoke Dust	9.404-2	SHOE SET, Rear Brake (Non-Warranty)	8.005-2
SCHILD, Fuel Tank Body Hold Down Bracket	4.130-12	SHOE SET, Rear Brake (Warranty)	8.004-2
SCHILD, Fuel Tank Fill Tubes	4.130-11	SHROUD, Exhaust Manifold Heat.....	4.015-3
SCHILD, Gasoline Tank	4.130-8	SHROUD, Fan.....	2.013-1
SCHILD, Insulator Heat.....	1.009-1a	SHROUD, Steering Column Bowl	10.338-8
SCHILD, Rear Brake Drum Splash	8.002-3	SIDE RAIL, Luggage Rack	15.250-6
SCHILD, Slave Cylinder Heat.....	5.230-1	SILENCER, Roof Bow	20.420-2a
SCHILD, Steering Wheel Release Lever.....	10.802	SILL, Front Side	20.070-1
SCHILD, Transfer Case Torque Reaction		SILL, Rear Cross	20.040-1
Support	18.192-1	SKID PLATE, Engine Oil Pan	1.151-5
SCHILD, Valve Stem Oil	1.078-8	SKID PLATE, Under Frame To Transmission	6.007-1
SCHILD AND BRACE, Muffler Heat Deflector	4.211-1	SKID PLATE KIT, Gasoline Tank.....	4.131-1
SHIFT FORK	18.565-4	SKIRT, Steering Wheel	10.283
		SLAT ASSEMBLY, Roof	15.250-11a

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
S - Cont.			S - Cont.
SLEEVE, Carburetor Choke Heater Tube.....	4.020-2	SPACER, Alternator Pulley	3.017-4
SLEEVE, Clutch Throwout Lever	5.109-1	STEP ASSEMBLY, Body	20.176-1
SLEEVE, Crankshaft Pilot.....	1.043-3	SPACER, Backup Lamp Mounting	3.316-7
SLEEVE, Drive.....	18.520-3	SPACER, Carburetor Air Cleaner To Carburetor.....	4.088-8
SLEEVE, Fourspeed Transmission Reverse Idler Shaft.....	6.170-7	SPACER, Clutch And Brake Pedal	5.148-4
SLEEVE, Front Door Locking Rod	23.055-3	SPACER, Clutch Cable Bracket	5.165-4
SLEEVE, Front Park Brake Cable And Equalizer	8.192-1a	SPACER, Clutch Cable Bracket To Transmission	5.165-5
SLEEVE, Pick-Up Box Tailgate Support Arm	31.135-1	SPACER, Clutch Housing To Engine	5.065-1
SLEEVE, Reduction Unit Direct Drive.....	18.615-17	SPACER, Cowl Ventilator Intake Cover Panel.....	22.016-3
SLEEVE, Seat Belt	27.290-5	SPACER, Draw Bar And Bumperette Reinforcement	11.068-4a
SLEEVE, Speedometer Driven Gear.....	3.590-2	SPACER, Drive Pulley To Vibration Damper Pulley.....	1.046-5
SLEEVE, Steering Gear Jacket Tube Upper Bearing.....	10.344-3	SPACER, Electric Tailgate Window Regulator Panel.....	23.306-1c
SLEEVE, Tailgate Support Arm.....	23.006-14	SPACER, Engine Oil Pump Inlet Tube Screen To Oil Pan.....	1.167-2
SLEEVE, Transmission Output Shaft To Transfer Case Input Shaft Coupling ...	6.593-1	SPACER, Fan Blade.....	2.002-3
SLIDE, Front Seat Adjusting.....	29.131-1	SPACER, Floor Strainer To Frame Crossmember	31.005-1
SLIDE, Front Seat Power Adjusting	29.125-1	SPACER, Fourspeed Transmission Speedometer Gear	6.057-1
SLIDER, Air Cleaner Mounting Bracket	4.088-11a	SPACER, Fourspeed Transmission Spline Shaft Pilot Bearing Roller	6.076-2
SLINGER, Front Axle Pinion Bearing Oil ...	9.364-3	SPACER, Front Axle Bumper Frame Bracket	9.304-4
SLINGER, Rear Axle Pinion Bearing Oil	9.064-3	SPACER, Front Spring To Axle Seat.....	11.088-5
SLINGER, Transmission Rear Bearing Oil....	6.053-2a	SPACER, Front Stabilizer Bar Support Bracket	10.260-3b
SNAP RING, Bearing Inner.....	18.540-5	SPACER, Front Steering Spindle.....	14.004-16
SNAP RING, Bearing Outer.....	18.540-7	SPACER, Guard To Bumper Rail	12.302-4
SNAP RING, Compressor Seal Seat	13.400-32	SPACER, Hand Brake Cable.....	8.224-6
SNAP RING, Drive Sleeve To Drive Hub	18.520-5	SPACER, Horn Switch To Flange.....	3.400-7
SNAP RING, Hydramatic Transmission Case Extension Bearing.....	6.503-8	SPACER, Hydramatic Transmission Center Support	6.556-9
SNAP RING, Master Cylinder Push Rod ...	8.046-5	SPACER, Hydramatic Transmission Regulator Valve.....	6.512-2
SNAP RING, Propeller Shaft Universal Joint..	9.107-3	SPACER, Inner Bellcrank Bracket To Clutch Housing	5.168-11a
SNAP RING, Rear Bearing	6.052-2c	SPACER, Intermediate Rear To Frame.....	11.024-3a
SNAP RING, Reduction Unit (Sun Gear To Shaft).....	18.615-6	SPACER, License Bracket And Tail Lamp To Body	3.300-3a
SNAP RING, Reduction Unit (To Reduction Collar Plate Hub)	18.615-9	SPACER, Power Brake Unit To Dash	8.400-2
SNAP RING, Reduction Unit Collar Plate To Ring Gear	18.615-12	SPACER, Rear Leaf Spring To Axle.....	11.100-6
SNAP RING, Reduction Unit Holding Plate..	18.615-18	SPACER, Rear Seat Back Latch Guide Hook	29.226-3
SNAP RING, Reduction Unit Mainshaft Rear ..	18.615-2	SPACER, Reduction Unit	18.615-3
SNAP RING, Reduction Unit Mainshaft Rear Bearing.....	18.615-20	SPACER, Ring Gear Flex Plate To Crankshaft	6.521-1
SNAP RING, Transmission Rear Bearing Adapter	6.052-2b	SPACER, Skid Plate To Engine Rear Support Crossmember	6.007-3
SNAP RING, Threespeed Transmission Synchronizer Clutch Low And Reverse ...	6.080-6	SPACER, Steering Gear Bracket To Front Crossmember	10.290-7
SNAP RING KIT, Hydramatic Transmission..	6.501-3	SPACER, Steering Gear Housing Worm Cover	10.298-1
SNUBBER, Transfer Case Insulator	18.185-2	SPACER, Steering Gear To Frame.....	10.354-1
SOCKET, Brake Shoe Adjusting Screw.....	8.014-2	SPACER, Tailgate To Sealer Lower	23.013-3
SOCKET, Gear Selector Dial Lamp	7.535-7	SPACER, Tailgate Window Regulator Panel	23.040-2a
SOCKET, Heated Rear Window Indicator Lamp	3.770-4	SPACER, Tail Lamp	3.300-8
SOCKET, Instrument Cluster Illumination ...	3.525-1	SPACER, Tail Pipe	4.234-5
SOLENOID, Distributor Vacuum Control.....	3.051-6		
SOLENOID, Idle Air By-Pass.....	4.708-1		
SOLENOID ASSEMBLY, Hydramatic Transmission.....	6.660-14		
SPACER, Air Conditioning Intermediate Pulley Bracket To Mounting Bracket	13.430-4		
SPACER, Alternator Pivot	3.018-18		

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
S - Cont.			S - Cont.
SPACER, Threespeed Transmission Main Shaft Bearing	6.068-5	SPRING, Center Horn Button Receiver	3.400-14
SPACER, Tow Shackle Loop Pin.....	11.067-5	SPRING, Clutch Pedal Over Center.....	5.155-2
SPACER, Transfer Case And Transmission Torque Reaction Bracket.....	18.200-8	SPRING, Clutch Pedal Return	5.155-1
SPACER, Transfer Case Front Output Shaft	18.025-6	SPRING, Clutch Throwout Lever	5.132-1
SPACER, Transfer Case Intermediate Gear Shaft Bearing.....	18.050-4	SPRING, Clutch Throwout Lever Return	5.190-1
SPACER, Transfer Case Mounting Insulator	18.190-7	SPRING, Column Gear Shift Upper Lever Tension	7.020-9
SPACER, Transfer Case Support Bracket....	18.190-5	SPRING, Cross Shaft Rattle	7.080-1
SPACER, Transfer Case Torque Snubber....	18.190-4	SPRING, Diaphragm Control.....	18.565-8
SPACER, Transmission Countershaft Gear Roller Bearing.....	6.167-2	SPRING, Directional Cancelling Cam	3.321-15
SPACER, Transmission Crossmember Mounting.....	1.010-3	SPRING, Electric Tailgate Window Regulator Balance	23.306-1a
SPACER, Transmission To Engine	6.525-1	SPRING, Engine Oil Pump Release Valve...	1.176-2
SPACER, Valve Rocker Arm Shaft Center ...	1.098-5	SPRING, Exhaust Manifold Damper Heat Valve.....	1.067-17
SPACER, Valve Rocker Arm Shaft End.....	1.098-3	SPRING, Floor Gear Shift Lever Fulcrum....	7.001-3
SPACER, Valve Rocker Arm Shaft Intermediate.....	1.098-4	SPRING, Fourspeed Transmission Shift Rail End Plunger Poppet	6.020-7
SPACER, Windshield Washer Nozzle.....	22.053-7	SPRING, Fourspeed Transmission Shift Rail End Reverse Plunger	6.020-4
SPACER, Windshield Wiper Motor Mounting ..	22.027-9	SPRING, Fourspeed Transmission Speed Finder Interlock Poppet First, Second And Reverse.....	6.215-5
SPACER KIT, Rear Leaf Spring To Axle	11.100-4	SPRING, Fourspeed Transmission Speed Finder Interlock Poppet Third And Direct.	6.215-6
SPARK PLUG	3.001-1	SPRING, Fourspeed Transmission Syncro-nizer Low And Second Poppet.....	6.100-7
SPEAKER, Front	15.320-5	SPRING, Fourspeed Transmission Syncro-nizer Third And Fourth.....	6.100-6
SPEAKER, Front Door	15.320-13	SPRING, Front Brake Wheel Cylinder Piston Return.....	8.086-1
SPEAKER, Rear Compartment	15.320-14	SPRING, Front Passenger Seat Pawl Tension	29.103-13
SPEEDOMETER (Miles).....	3.550-1	SPRING, Front Seat Adjusting Assist	29.138-1
SPEEDOMETER (Kilos).....	3.550-2	SPRING, Front Seat Back	29.106-1
SPHERE, Steering Gear Shaft Centering.....	10.839-1a	SPRING, Front Seat Back Latch Control	29.105-35
SPHERE KIT, Steering Gear Shaft Centering.....	10.839-1	SPRING, Front Seat Cushion.....	29.103-4
SPINDLE ASSEMBLY, Steering	10.004-11	SPRING, Front Wheel Retainer.....	8.296-11
SPIDER ASSEMBLY, Front Axle Shaft	9.370-1	SPRING, Gear Selector Dial Housing	7.538-1
SPIDER ASSEMBLY, Front Propeller Shaft Universal Joint	9.107-1	SPRING, Gear Shift Plunger	6.018-6a
SPIDER ASSEMBLY, Propeller Shaft Universal Joint	9.107-2	SPRING, Headlamp Adjusting.....	3.272-1
SPIDER ASSEMBLY, Steering Gear Lower Shaft Or Intermediate Shaft	10.719-1	SPRING, Hinge License Plate.....	14.098-14
SPLITTER BOX, AM CB Or AM-FM CB Antenna.....	15.030-1d	SPRING, Hood Lock Lower Dovetail	12.060-6
SPINDLE, Steering.....	10.004-12	SPRING, Hood Lock Release Handle	12.060-21
SPRAG, Hydramatic Transmission Intermediate Clutch.....	6.554-12	SPRING, Hood Safety Lock Lower	12.061-7
SPRAG-ROLLER ASSEMBLY, Hydramatic Transmission Low Clutch	6.556-2	SPRING, Horn Blowing Contact	3.401-7
SPRING, Accelerator Pedal To Bellcrank ...	4.040-7	SPRING, Horn Blowing Cover	3.401-4
SPRING, Accelerator Retracting	4.050-6	SPRING, Hydramatic Transmission Direct Clutch Piston Release.....	6.562-11
SPRING, Automatic Speed Control Vacuum Servo Compression	4.380-4	SPRING, Hydramatic Transmission Forward Clutch Piston Release.....	6.595-10
SPRING, Automatic Transmission Rod To Carburetor Bellcrank.....	16.508-1	SPRING, Hydramatic Transmission Front Accumulator Piston.....	6.533-2
SPRING, Backup Lamp Switch	3.319-6	SPRING, Hydramatic Transmission Front Servo Piston Spring.....	6.530-3a
SPRING, Brake Master Cylinder Secondary Piston Return	8.046-2a	SPRING, Hydramatic Transmission Intermediate Clutch Retainer.....	6.554-14
SPRING, Brake Pedal Return.....	8.140-3	SPRING, Hydramatic Transmission Parking Brake Pawl Return	6.552-8
SPRING, Brake Shoe Automatic Adjusting Lever.....	8.008-2	SPRING, Hydramatic Transmission Pressure Regulator	6.512-3
SPRING, Brake Shoe Return.....	8.008-1		
SPRING, Carburetor Pull Back.....	4.080-1		

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
S - Cont.			S - Cont.
SPRING, Hydramatic Transmission Rear Servo.....	6.548-3	SPRING, Throwout Lever To Push Rod	5.229-7
SPRING, Ignition Switch	3.135-5	SPRING, Transfer Case Shift Control Case Antirattle	18.167-1
SPRING, Ignition Switch Cylinder Tumblers	3.135-10	SPRING, Transfer Case Shift Control Rod Torsion	18.165-2
SPRING, Instrument Cluster Socket	3.525-4	SPRING, Transfer Case Shift Rod Poppet	18.100-7
SPRING, Left Turn Cancel	3.321-1a	SPRING, Transmission Speed Finder Interlock Poppet	6.215-4
SPRING, Lock Cylinder Tumbler	23.081-3	SPRING, Upper Hood Lock Safety Hook	12.060-9
SPRING, Lock Cylinder Tumbler	27.280-1c	SPRING, Vacuum Air Valve Actuator Return	13.020-12
SPRING, Master Cylinder Check Valve	8.042-1	SPRING, Valve	1.083-1
SPRING, Oil Filter Bypass Valve	1.217-1	SPRING ASSEMBLY, Front Leaf (Incl. Bushings)	11.070-1
SPRING, Parking Brake Lever Strut	8.008-6	SPRING ASSEMBLY, Front Leaf (Less Bushings)	11.070-1a
SPRING, Passenger Seat Support Latch Rod	29.132-11	SPRING ASSEMBLY, Rear Leaf (Incl. Bushings)	11.100-1
SPRING, Poppet	18.565-7	SPRING ASSEMBLY, Rear Leaf (Less Bushings)	11.100-1a
SPRING, Power Brake Master Cylinder Piston Return	8.515-3	SPRING KIT, Lower Pivot	23.119-1
SPRING, Power Brake Valve Body Diaphraam	8.485-6	SPROCKET, Camshaft	1.134-1
SPRING, Power Brake Valve Push Rod	8.480-5	SPROCKET, Crankshaft	1.132-1
SPRING, Power Steering Gear Pressure Check Valve Poppet	10.532-1	SPROCKET, Drive	18.520-1
SPRING, Power Steering Pump Flow Control Valve	10.445-2	STABILIZER, Battery Support	3.082-7
SPRING, Rear Brake Cable	8.220-4	STABILIZER, Front Suspension Sway	10.260-1
SPRING, Rear Brake Wheel Cylinder Piston Return	8.086-2	STABILIZER, Liftgate To Enclosure	28.600-5
SPRING, Rear License Plate Bracket	14.098-8	STANCHION, Luqqage Rack	15.250-2
SPRING, Rear Seat Back Lock	29.226-2	STEP, Body	20.176-2
SPRING, Rear Seat Cushion	29.192-1	STEP THREAD, Rear Fender	31.042-1
SPRING, Reduction Unit Cable To Power Brake Master Cylinder	18.650-8	STICKER, Air Cleaner	14.145-3
SPRING, Reduction Unit Shift Rail Poppet	18.620-7	STICKER, Exhaust Emission Maintenance Information	14.145-6
SPRING, Right Turn Cancel	3.321-1b	STICKER, Exhaust Emission Maintenance Instructions	14.145-6
SPRING, Seat Lock Latch Return	29.105-25	STICKER, Tire Pressure On Glove Box Door	14.145-10
SPRING, Shoe Hold Down Rear	8.008-4	STICKER, Vehicle Emission Information	14.145-7
SPRING, Shoe Support	8.815-2	STONE SHIELD, Roll Bar And Auxiliary Lamps Cover	3.246-6
SPRING, Steering Column Housing Rack Preload	10.335-2	STOP, Clutch Pedal	5.164-1
SPRING, Steering Column Lock Inhibitor	10.337-7	STOP, Front Seat Back	29.105-30
SPRING, Steering Column Locking Bolt	10.337-9	STORMSTRIP, Door	29.358-1
SPRING, Steering Gear Jacket Tube Upper Bearing	10.344-4	STRAINER, Body Side Panel To Rear Wheelhouse Panel	20.172-10
SPRING, Steering Gear Lower Shaft To Steering Gear Coupling	10.747	STRAINER, Hydramatic Transmission Oil	6.509-1
SPRING, Steering Gear Shaft Lower Bearing	10.770	STRAINER, Tailgate Rear Panel To Frame	23.006-1a
SPRING, Steering Gear Upper Shaft To Lower Or Intermediate Shaft Coupling	10.727-1	STRAP, Auxiliary Gasoline Tank Hold Down	4.131-24
SPRING, Steering Gear Upper Shaft To Lower Shaft Preload	10.837-1	STRAP, Canister Hose To Air Cleaner Hose Or Carburetor	4.144-11a
SPRING, Steering Wheel Actuator Lock Shoe	10.847-1	STRAP, Diverter Valve Hose	4.578-2
SPRING, Steering Wheel Actuator Shoe Release Lever	10.846	STRAP, Door Restraint	23.015-8
SPRING, Steering Wheel Tilt	10.855-1	STRAP, Engine Heater Cord	15.145-3
SPRING, Synchronizer Low And Second	6.100-5a	STRAP, Exhaust Emission Air Pump To Compressor	4.535-1
SPRING, Tailgate Latch Release Handle Return	31.126-6	STRAP, Gasoline Tank Mountina	4.152-1
SPRING, Threespeed Transmission Synchronizer Shaft Plate Retaining Low And Reverse	6.100-5	STRAP, Generator Adjusting	3.014-1
SPRING, Threespeed Transmission Synchronizer Shaft Plate Retaining Second And High	6.100-4	STRAP, Harness To Tailgate	3.774-1
		STRAP, Hose (Nylon)	4.144-15
		STRAP, Hose (Nylon Tie)	4.703-3
		STRAP, Jack Hold Down	14.138-4

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
S - Cont.			
STRAP, Longitudinal Seat Stowage.....	29.201-11	SUPPORT, Coolant Recovery Bottle.....	2.025-4
STRAP, Power Steering Pump Hoses To Air Pump Hoses.....	10.470-3a	SUPPORT, Cowl Top Inner.....	20.150-2
STRAP, Power Steering Pump Hoses To Brake Line.....	10.470-3	SUPPORT, Driver's Seat Cushion.....	29.132-3
STRAP, Rear Seat Back Hold Up Trim.....	29.220-4	SUPPORT, Exhaust Emission Air Pump Mounting Bracket.....	4.530-1
STRAP, Reduction Unit Cable To Instrument Panel Support Bracket.....	18.650-5	SUPPORT, Exhaust Emission Backfire.....	4.557-1
STRAP, Retainer Power Seat Switch.....	29.128-1	SUPPORT, Front Energy Absorber Bracket.....	12.323-1
STRAP, Skid Plate To Gasoline Tank.....	4.131-2a	SUPPORT, Front Seat Center Cushion.....	29.158-1
STRAP, Support.....	18.685-1	SUPPORT, Fuel Vapor Storage Canister Mounting Bracket.....	4.144-4
STRAP, Vacuum Hoses And Cable Retaining.....	13.020-4a	SUPPORT, Full Front Seat Cushion.....	29.132-1
STRAP, Vacuum Tube To Speedometer Cable.....	18.585-10	SUPPORT, Gasoline Tank Filler Neck Flange.....	4.141-19
STRAP, Windshield Hold Down.....	25.008-1	SUPPORT, Harness To Engine.....	3.053-6
STRAP, Wire Harness.....	23.320-7	SUPPORT, Left Side Bumper.....	11.068-9
STRIKER, Back Frame Lock.....	29.105-15	SUPPORT, Liftgate Window.....	28.709-1
STRIKER, Console Compartment Door Lock.....	27.282-1	SUPPORT, Passenger Seat Cushion.....	29.132-6
STRIKER, Cushion Frame Lock.....	29.105-13	SUPPORT, Power Brake Master Cylinder To Side Panel.....	8.400-5
STRIKER, Door Lock.....	23.087-1	SUPPORT, Rear Seat Cushion Frame.....	29.181-6
STRIKER, Glove Box Door Lock.....	22.075-1	SUPPORT, Roof Panel.....	20.420-2
STRIKER, Liftgate Latch.....	28.577-1	SUPPORT, Splash Apron To Side Panel Gusset.....	12.077-7
STRIKER, Tailgate.....	23.039-7	SUPPORT, Steering Wheel And Directional Signal Actuator.....	10.850-1
STRIKER, Tailgate Latch.....	31.133-1	SUPPORT, Transfer Case Shift Lever.....	18.180-6
STRIKER, Ventilating Windshield Opening Handle.....	25.011-1	SUPPORT, Wire Harness To Alternator Bracket.....	3.016-2
STRIP, Rear Auxiliary Floor Carpet Skid.....	29.421-1	SUPPORT AND BAFFLE ASSEMBLY, Radiator Grille.....	20.115-1
STRIP, Rear Quarter Window Weatherstrip Filler Insert.....	25.027-5	SUPPORT BRACKET, Front Stabilizer Bar.....	10.260-3a
STRIP, Tailgate Carpet Skid.....	29.465-3	SUPPORT BRACKET ASSEMBLY, Catalytic Converter To Heat Shield.....	4.212-7
STRIP, Windshield Glass Weatherstrip Filler.....	25.002-3	SUPPORT KEY AND SLIPPER KIT.....	8.810-2a
STRIPE, Instrument Panel.....	22.100-10c	SUPPORT KIT, Inside Rear View Mirror Mounting.....	27.084-2
STRIPE, Instrument Panel Glove Box Door.....	22.100-10d	SUPPORT STEP.....	20.177
STRIPE, Instrument Panel Lower Reinforcement.....	22.100-10e	SUPPRESSOR, Radio Noise.....	15.320-9
STRIPES, Exterior Decal Rally.....	26	SWAY BAR KIT (Stabilizer).....	10.260-1a
STRUT, Brake Shoe Parking Brake.....	8.024-2	SWITCH, Automatic Transmission Neutral Safety And Backup Lamp.....	3.022-1
STUD, Accelerator Pedal Pivot Ball.....	4.040-2	SWITCH, Backup Lamp.....	3.319-2
STUD, Carburetor Air Cleaner Retaining.....	4.088-10	SWITCH, Coolant Temperature Override.....	3.051-11b
STUD, Carburetor Control Shaft Ball.....	4.070-3	SWITCH, Courtesy Lamp.....	3.349-6
STUD, Clutch Housing.....	5.054-1a	SWITCH, Directional Lever And Automatic Speed Control.....	4.305-1
STUD, End Rail Adjusting.....	15.250-8a	SWITCH, Directional Signal.....	3.321-1
STUD, Front Wheel Disc Brake Disc Assembly.....	8.805-2	SWITCH, Distributor Thermostatic Vacuum.....	3.050-1
STUD, Power Steering Pump Mounting.....	10.430-2	SWITCH, Emission Maintenance.....	3.053-4
STUD, Power Steering Pump Pivot.....	10.432-1	SWITCH, Front Seat Power Adjusting Slide.....	29.127-1
STUD, Rear Quarter Handle Retaining.....	25.027-8	SWITCH, Hazard Warning.....	3.690-1
STUD, Steering Knuckle Ball (Lower).....	10.006-3	SWITCH, Headlamp Dimmer.....	3.158-1
STUD, Steering Knuckle Ball (Upper).....	10.006-2	SWITCH, Heated Rear Window Control.....	3.770-1
STUD, Tie Down.....	15.250-6a	SWITCH, Heater And Defroster Motor.....	13.078-1
STUD, Transfer Case To Transmission.....	18.001-6	SWITCH, Horn.....	3.400-4
STUD, Valve Rocker Arm Ball.....	1.100-1	SWITCH, Hydramatic Transmission Kickdown.....	6.665-1
STUD, Windshield Hold Down Strap.....	25.008-3	SWITCH, Ignition (Incl. Cylinder And 2 Keys).....	3.130-1
STUD AND NUT, End Rail Adjusting.....	15.250-8a	SWITCH, Ignition (Less Cylinder).....	3.130-2
STUD AND NUT, Tie Down.....	15.250-6a	SWITCH, Ignition Key Alarm.....	3.140-1
STUD KIT, Steering Knuckle Ball.....	10.006-1	SWITCH, Lighting.....	3.145-1
SUPPORT, Air Conditioning Compressor Mounting Bracket.....	13.410-6	SWITCH, Lockout Indicator.....	18.565-9
SUPPORT, Air Conditioning Condenser Core.....	13.450-2	SWITCH, Low Sound Horn.....	3.106-4
SUPPORT, Alternator Bracket Lower.....	3.018-10		
SUPPORT, Alternator Bracket Upper.....	3.018-8		
SUPPORT, Battery Tray.....	3.082-4		
SUPPORT, Bellows Mounting Bracket.....	4.385-2		
SUPPORT, Clutch Release Idler Pivot.....	5.168-11		

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.	
S - Cont.			T - Cont.	
SWITCH, Oil Pressure Sensing Electric Choke			6.518-4	
SWITCH, Parking, Brake Warning Lamp	3.650-1	TIE BAR, Interrail	1.004-8	
SWITCH, Pick-Up Box Cargo Lamp	3.671-12	TIE PLATE, Steering Gear	10.290-5	
SWITCH, Power Door Locks	23.067-2	TIMER, Carburetor Cooling Fan	3.170-4	
SWITCH, Power Windows And Power Door Locks	23.067-1	TIMER, Seat Belt Warning	3.789-1	
SWITCH, Rear Cargo	3.670-6	TIP, Passenger Seat Support Lea	29.105-9	
SWITCH, Roll Bar And Auxiliary Lamps	3.246-15	TIP, Rear Seat Cushion Frame Lea	29.181-13	
SWITCH, Speedometer Controlled Spark	3.052-1	TOP ENCLOSURE, Hardtop	28.500-1	
SWITCH, Stop Lamp	3.333-1	TRANSFER CASE AND PIN ASSEMBLY	18.510-2	
SWITCH, Tailgate Electric Operated Window Regulator (On Instrument Panel)	23.330-1	TRANSFER CASE ASSEMBLY (Complete) ...	18.001-1	
SWITCH, Tailgate Electric Operated Window Regulator (On Tailgate - Key Operated) ..	23.330-3	TRANSFER CASE ASSEMBLY (Quadra Trac)	18.500-1	
SWITCH, Tailgate Electric Operated Window Regulator Safety	23.330-5	TRANSMISSION, Fourspeed	6.001-1	
SWITCH, Thermal Vacuum	4.088-12	TRANSMISSION, Hydramatic	6.500-1	
SWITCH, Thermostatic Vacuum	3.050-2	TRANSMISSION, Threespeed	6.001-1	
SWITCH, Transmission Control Spark	3.051-1	TRAP, Liquid	4.144-18a	
SWITCH, Vacuum (ECM)	4.706-2	TRAY ASSEMBLY, Instrument Panel Ash Receiver	22.092-1	
SWITCH, Vacuum Ported	4.704-1	TRUNNION, Gear Shift Rod	7.125-6	
SWITCH ASSEMBLY, Radio Power Amplifier ..	15.320-27	TUBE, Air Cleaner Duct Or Elbow To Adapter Or Exhaust Manifold Shroud ..	4.015-1	
SWITCH BASE, Cigar Lighter	3.352-2	TUBE, Air Conditioning Evaporator Housing Drain	13.488-7	
SWIVEL, Lower Shift Rod	18.700-3	TUBE, Blower Motor Cooling	13.072-1a	
- T -			TUBE, Brake Master Cylinder Front To Valve	8.100-1
TACHOMETER	3.700-1	TUBE, Brake Master Cylinder Rear To Valve	8.100-2	
TAILGATE ASSEMBLY	23.006-1	TUBE, Brake Master Cylinder To Warning Tube	8.100-6	
TANK, Auxiliary Gasoline	4.131-10	TUBE, Brake Warning Valve To Front Tee ..	8.100-7	
TANK, Vacuum Storage	13.020-2	TUBE, Canister To Carburetor Vent	4.144-19	
TANK ASSEMBLY, Gasoline	4.130-1	TUBE, Carburetor Choke Heater (In Manifold)	4.020-4	
TAPPET, Valve	1.088-1	TUBE, Carburetor Choke Heater (To Carburetor)	4.020-1	
TEE, Air Pump Vacuum Hose	4.367-2	TUBE, Carburetor Clean Air	4.020-7	
TEE, Carburetor Vent Lower	4.144-18d	TUBE, Check Valve To Canister	4.144-12a	
TEE, Carburetor Vent Upper/Lower To Canister	4.144-18e	TUBE, Coolant Temperature Override Switch Hose To Transmission Controlled Spark Switch Hose	3.051-15	
TEE, Heater Vacuum Fitting To Crankcase Vent Hose	1.117-3	TUBE, Coolant Temperature Override Switch To Carburetor Spark Port	3.051-19	
TEE, Manifold Vacuum And Hydramatic Vacuum Fitting	1.067-23	TUBE, Coolant Temperature Override Switch To Check Valve	3.051-18	
TEE, Modulator Valve Hose	4.006-4	TUBE, Coolant Temperature Override Switch To Exhaust Gas Recirculating Valve	4.702-4	
TEE, Vacuum Connection At Engine	18.585-7	TUBE, Distributor Vacuum Control	3.048-1	
TEE, Vacuum Hose	4.701-2	TUBE, Distributor Vacuum Control To Coolant Temperature Override Switch ..	3.051-14	
TEE, Vacuum Ported Switch And Heater Hose Nipple To Manifold	4.704-2	TUBE, Diverter Valve Tee To Coolant Temperature Override Switch Hose	4.702-3	
TEE, Vacuum Ported Switch Hose To Carburetor Hose	4.703-1	TUBE, Engine Oil Pump Inlet	1.167-1	
TEMPATROL, Fan	2.004-2	TUBE, Exhaust Emission Air Injection Manifold	4.540-1	
TERMINAL, Connector (Female)	3.165-13	TUBE, Exhaust Emission Air Pump Exhaust	4.510-2	
TERMINAL, Connector (Male)	3.165-12	TUBE, Exhaust Gas Recirculating Valve Hose To Vacuum Ported Switch Hose	4.702-1	
TERMINAL, Jumper	3.165-12a	TUBE, Fitting Tube To Manifold Fitting	8.460-5b	
TERMINAL, Wire	3.246-10	TUBE, Front Fuel Line	4.160-2	
TERMINAL, Wire (Female)	3.165-7	TUBE, Front Fuel Line To Fuel Pump	4.160-5	
TERMINAL, Wire (Insulated)	3.165-8	TUBE, Front Seat Back Lock Release	29.105-39	
TERMINAL, Wire (Slip)	3.165-11	TUBE, Fuel Filter To Gas Tank	4.110-6	
TERMINAL, Wire (Spade)	3.165-10			
TERMINAL, Wire Assembly	3.400-10			
THERMOSTAT, Air Conditioning Temperature Control	13.477-1			
THERMOSTAT ASSEMBLY Engine Cooling...	2.100-1			