



J-5934

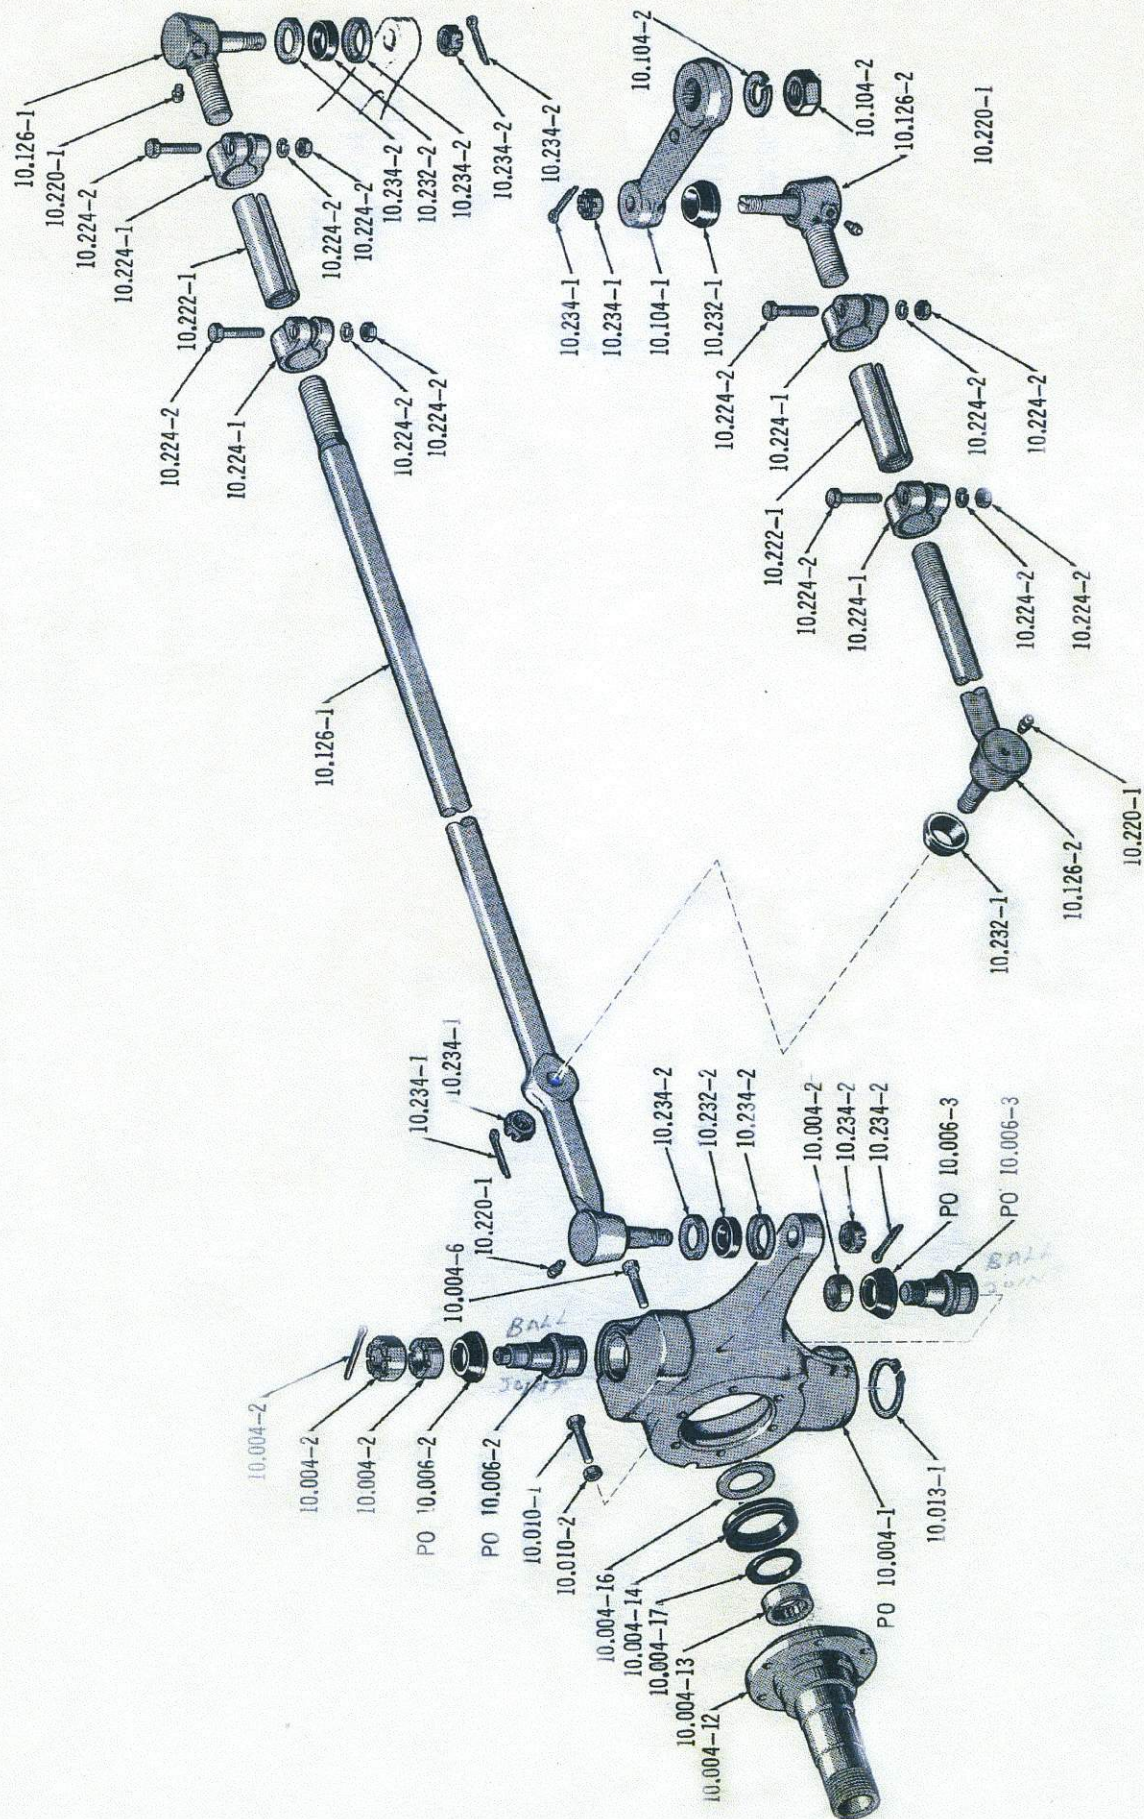


STEERING LINKAGE ... 10-20-40

J-4520

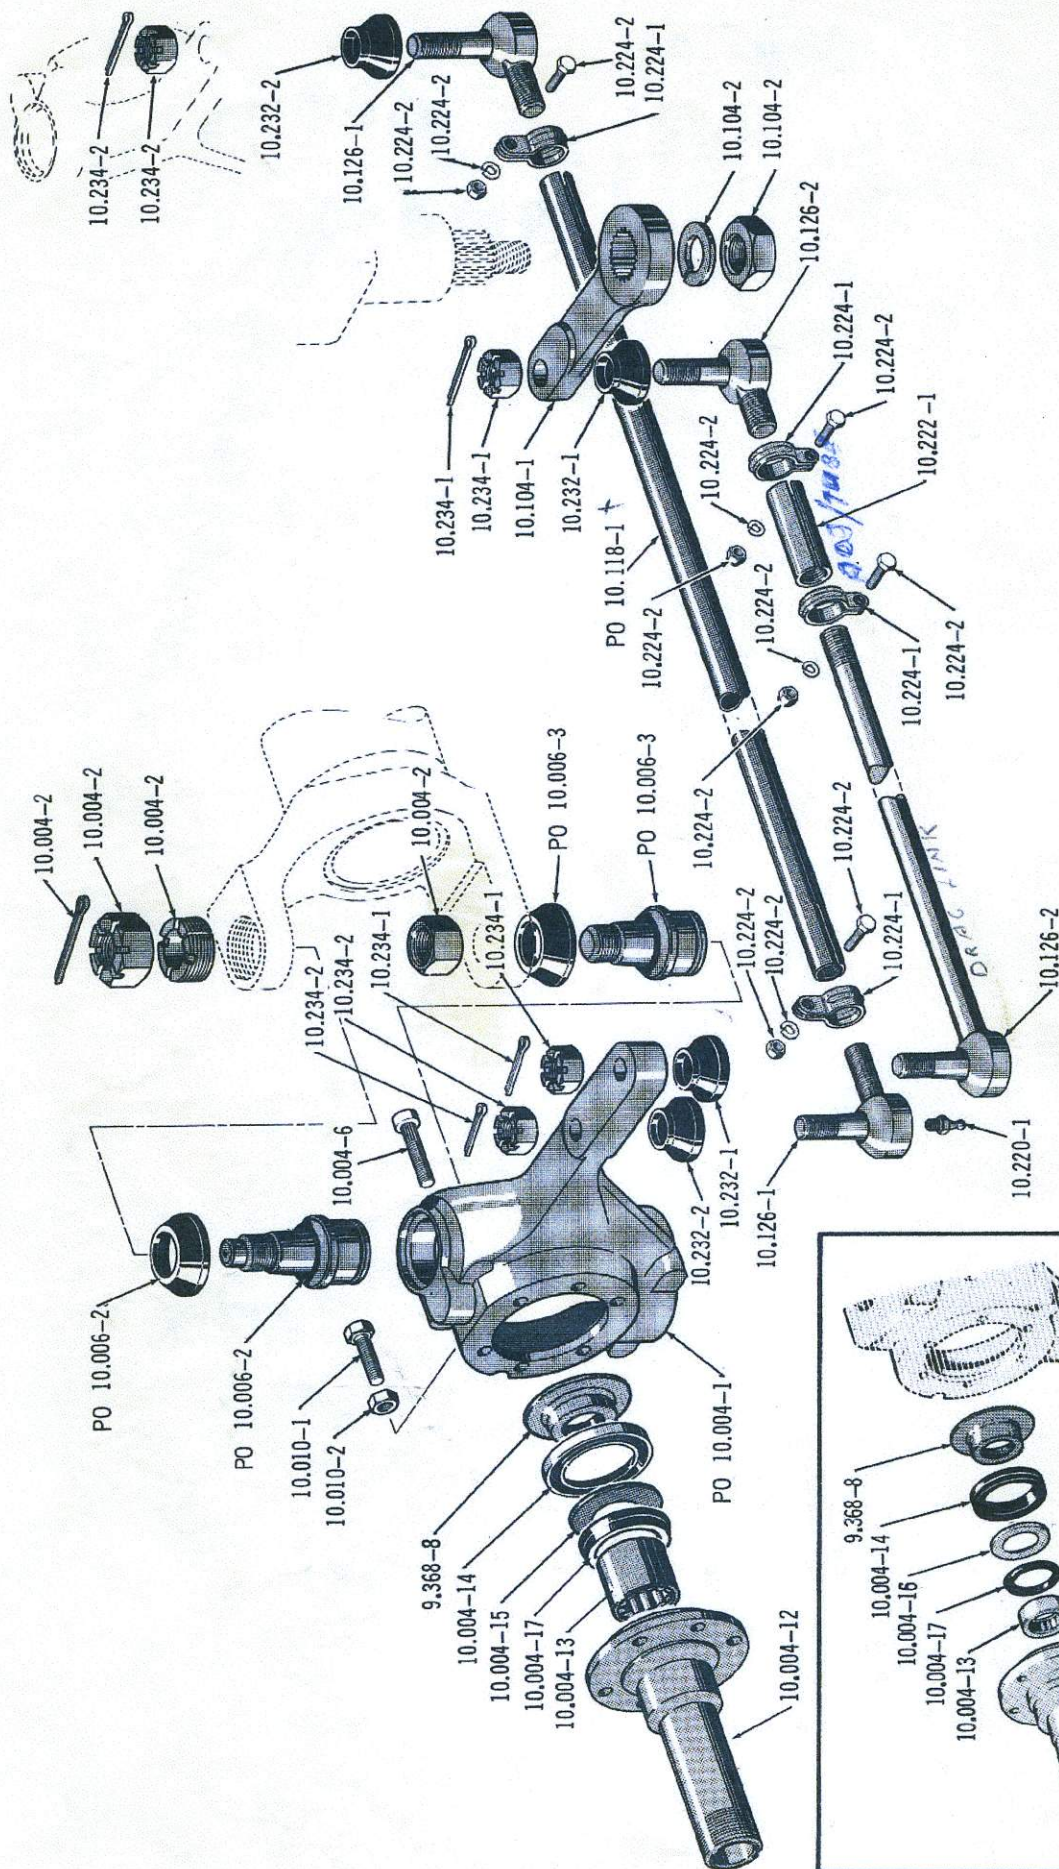


STEERING LINKAGE ... 80-90

1977/

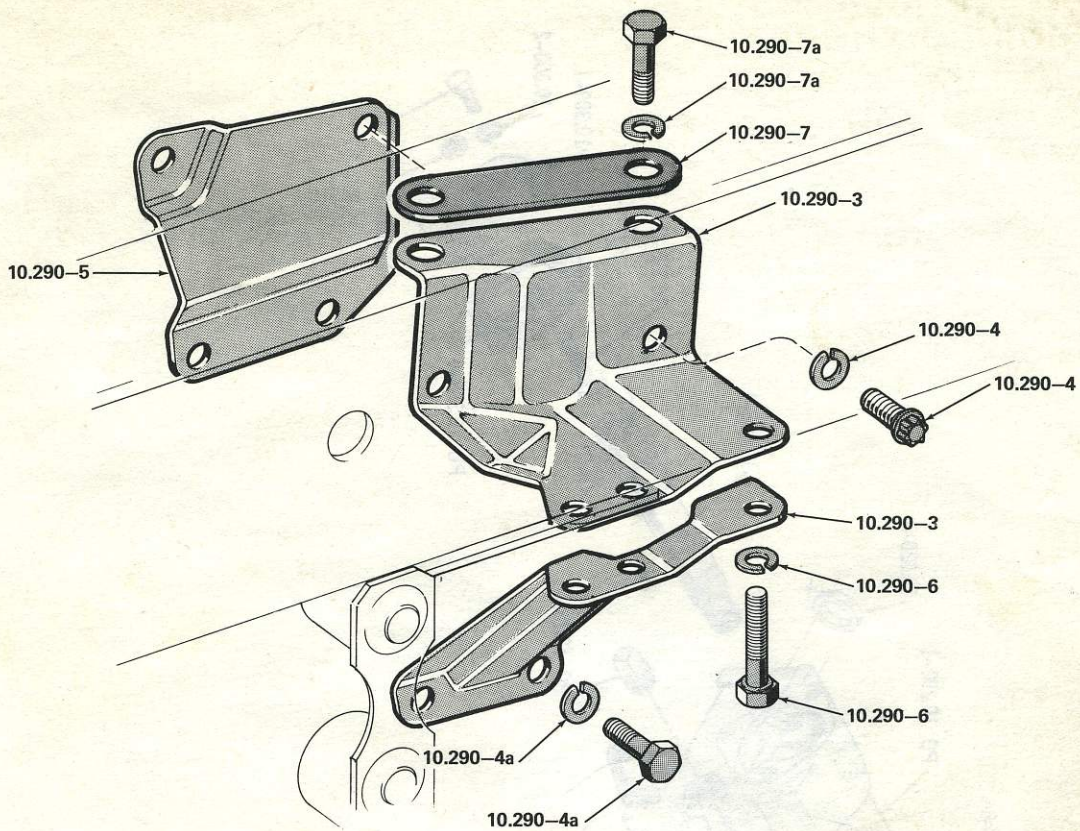


STEERING GEAR MOUNTING . . . 1976/ 80-90

J-6077

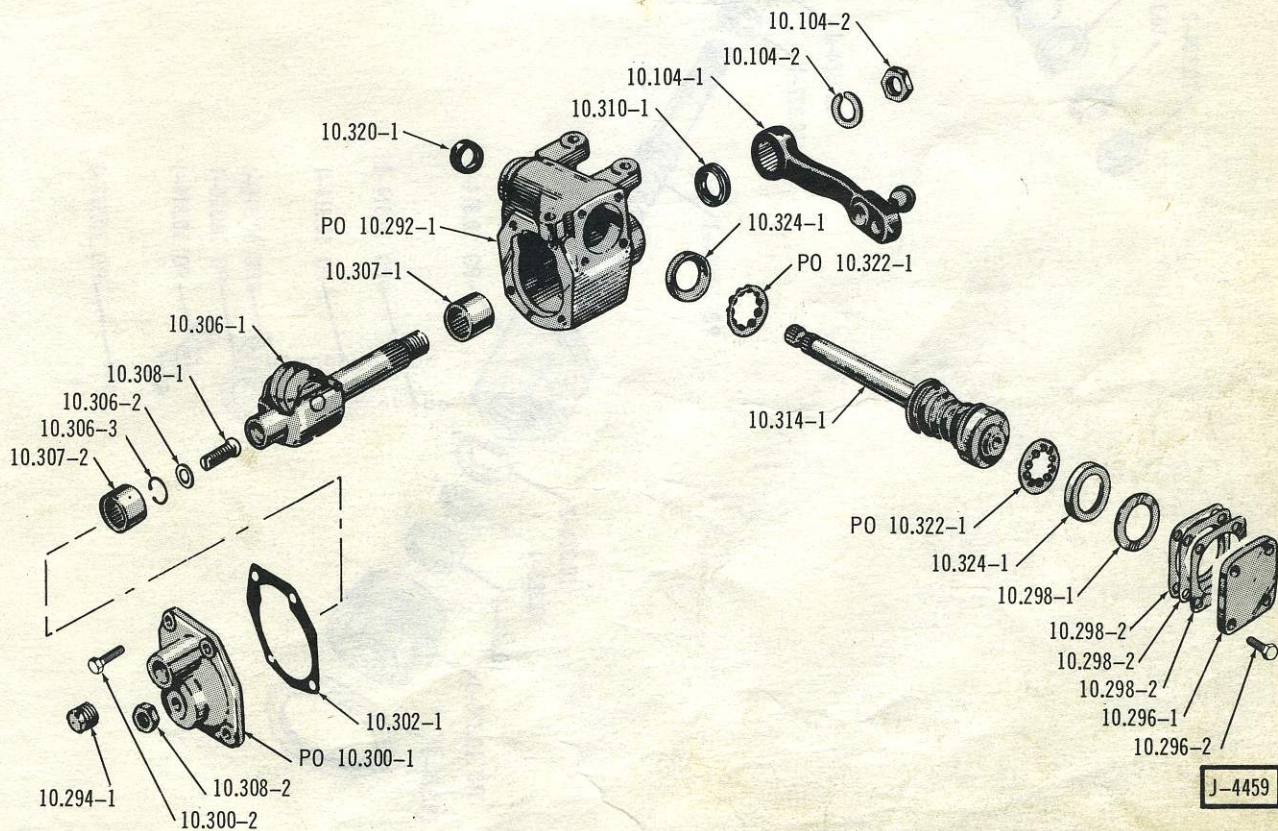


STEERING GEAR (ROSS - WORM AND GEAR) . . . (RHD-LPS) 10-20-40


J-4405

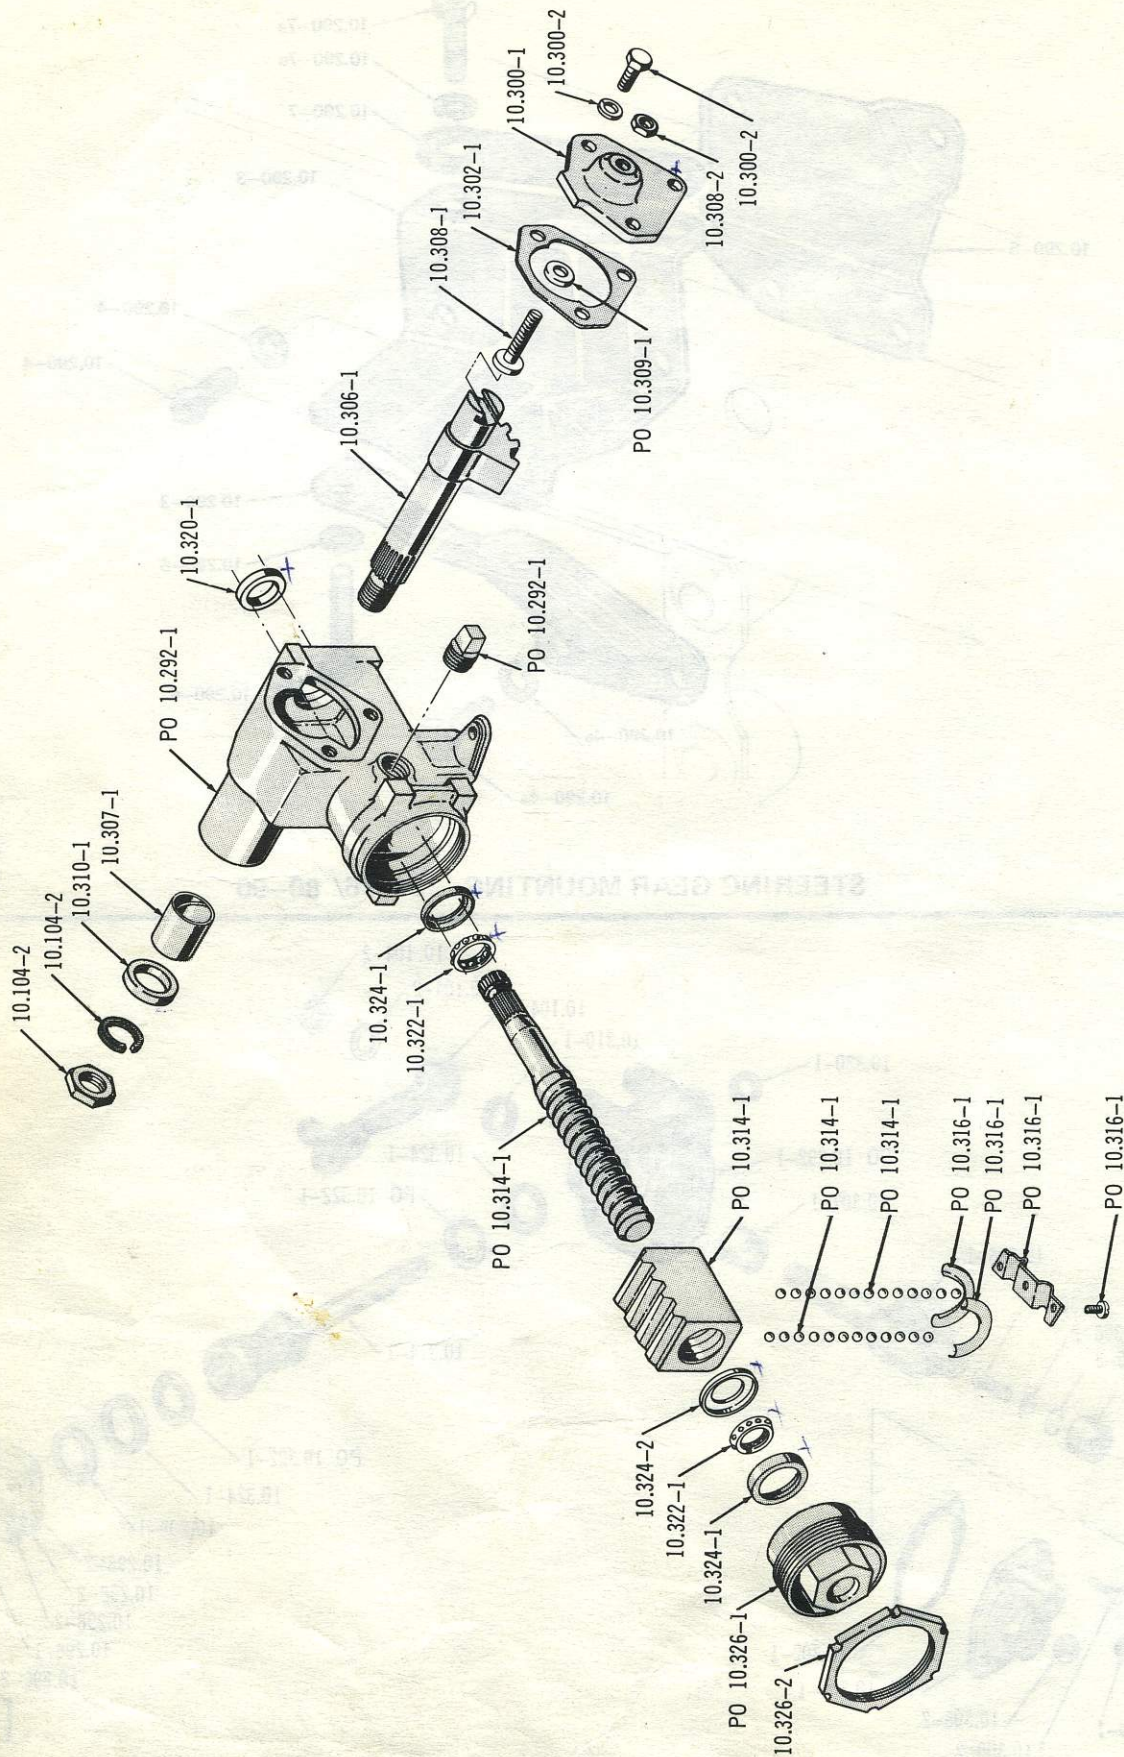


STEERING GEAR ASSEMBLY (SAGINAW) . . . LHD (LPS)

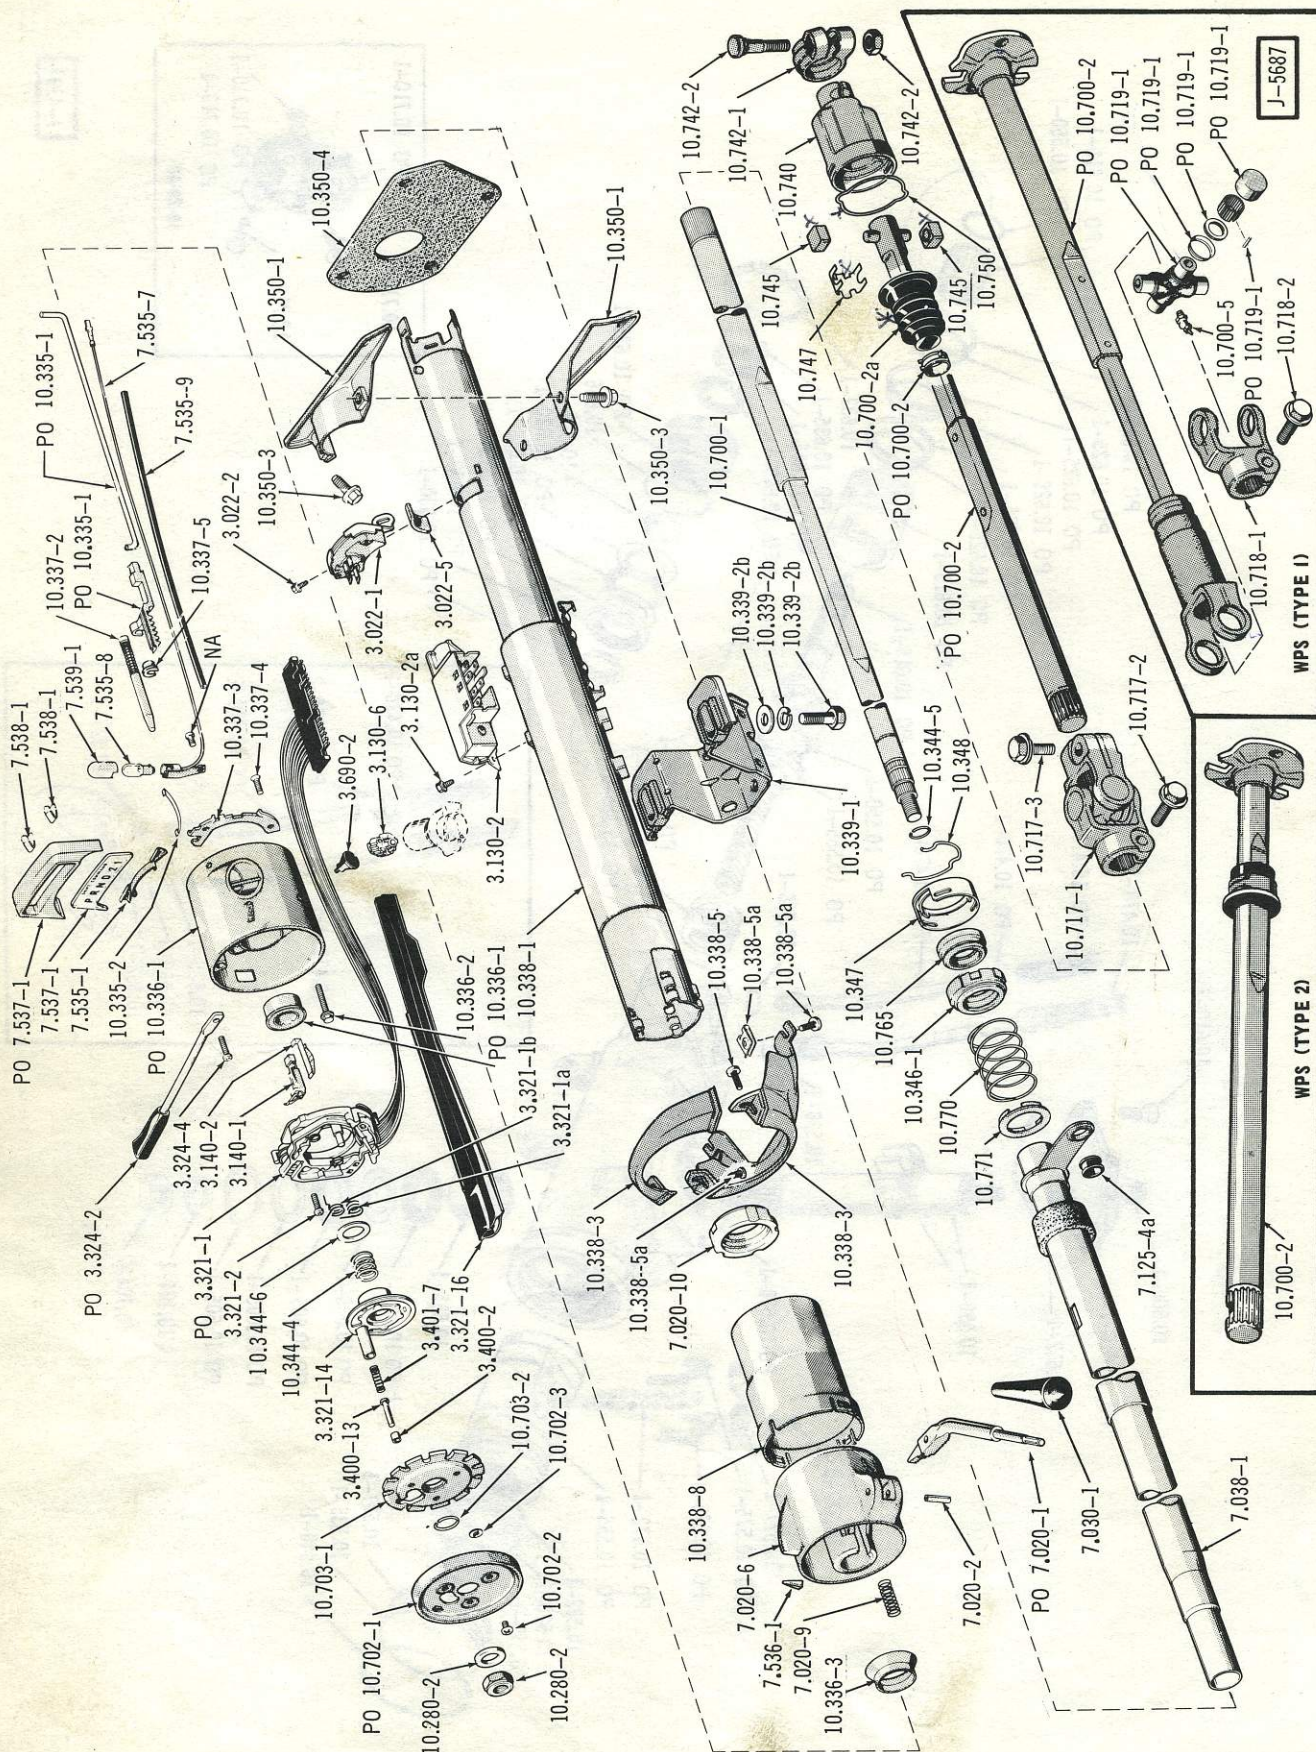

STEERING COLUMN . . . 10-20-40 (LHD-WCGS-LAW)

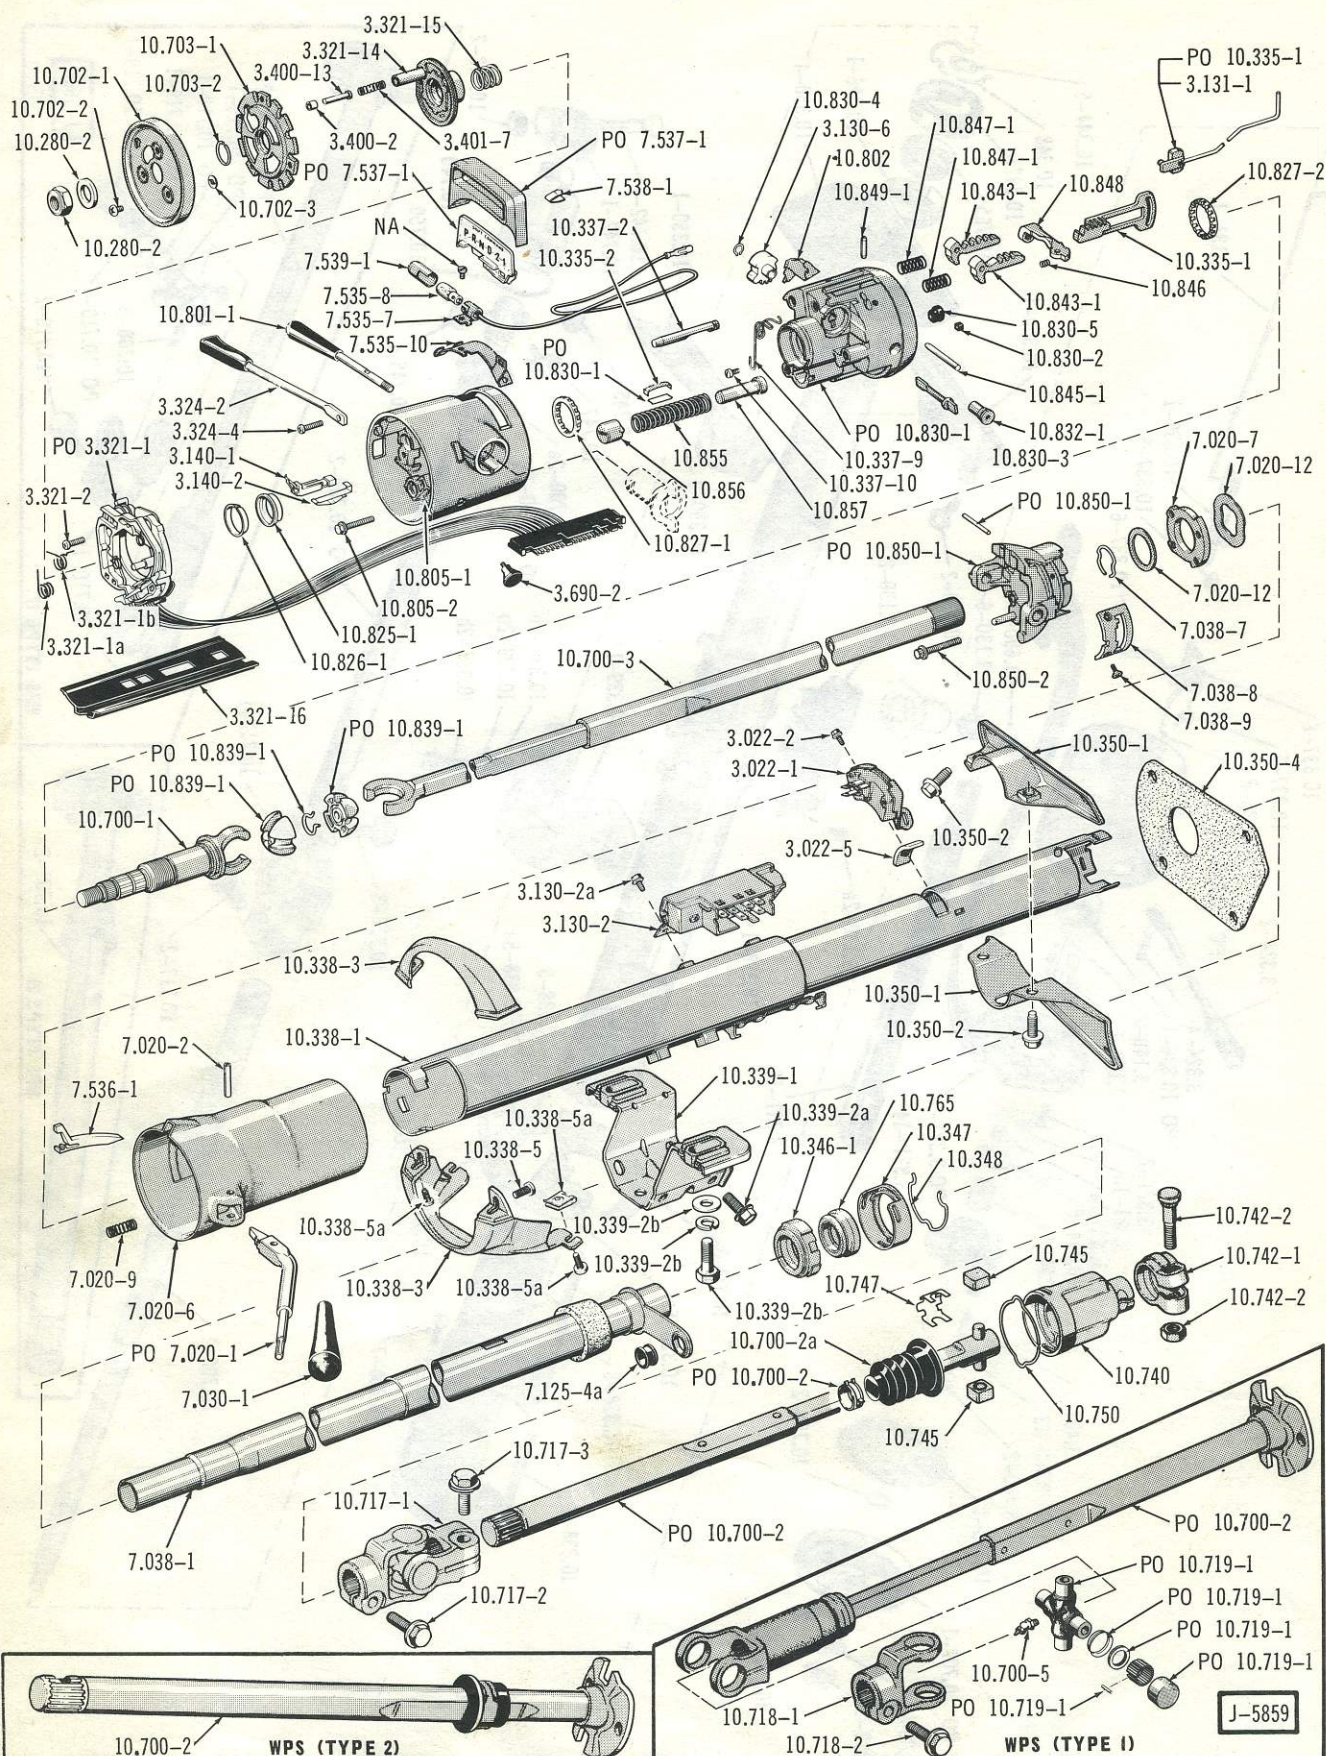


STEERING COLUMN . . . 10-20-40 (LHD-WCGS-WAW)

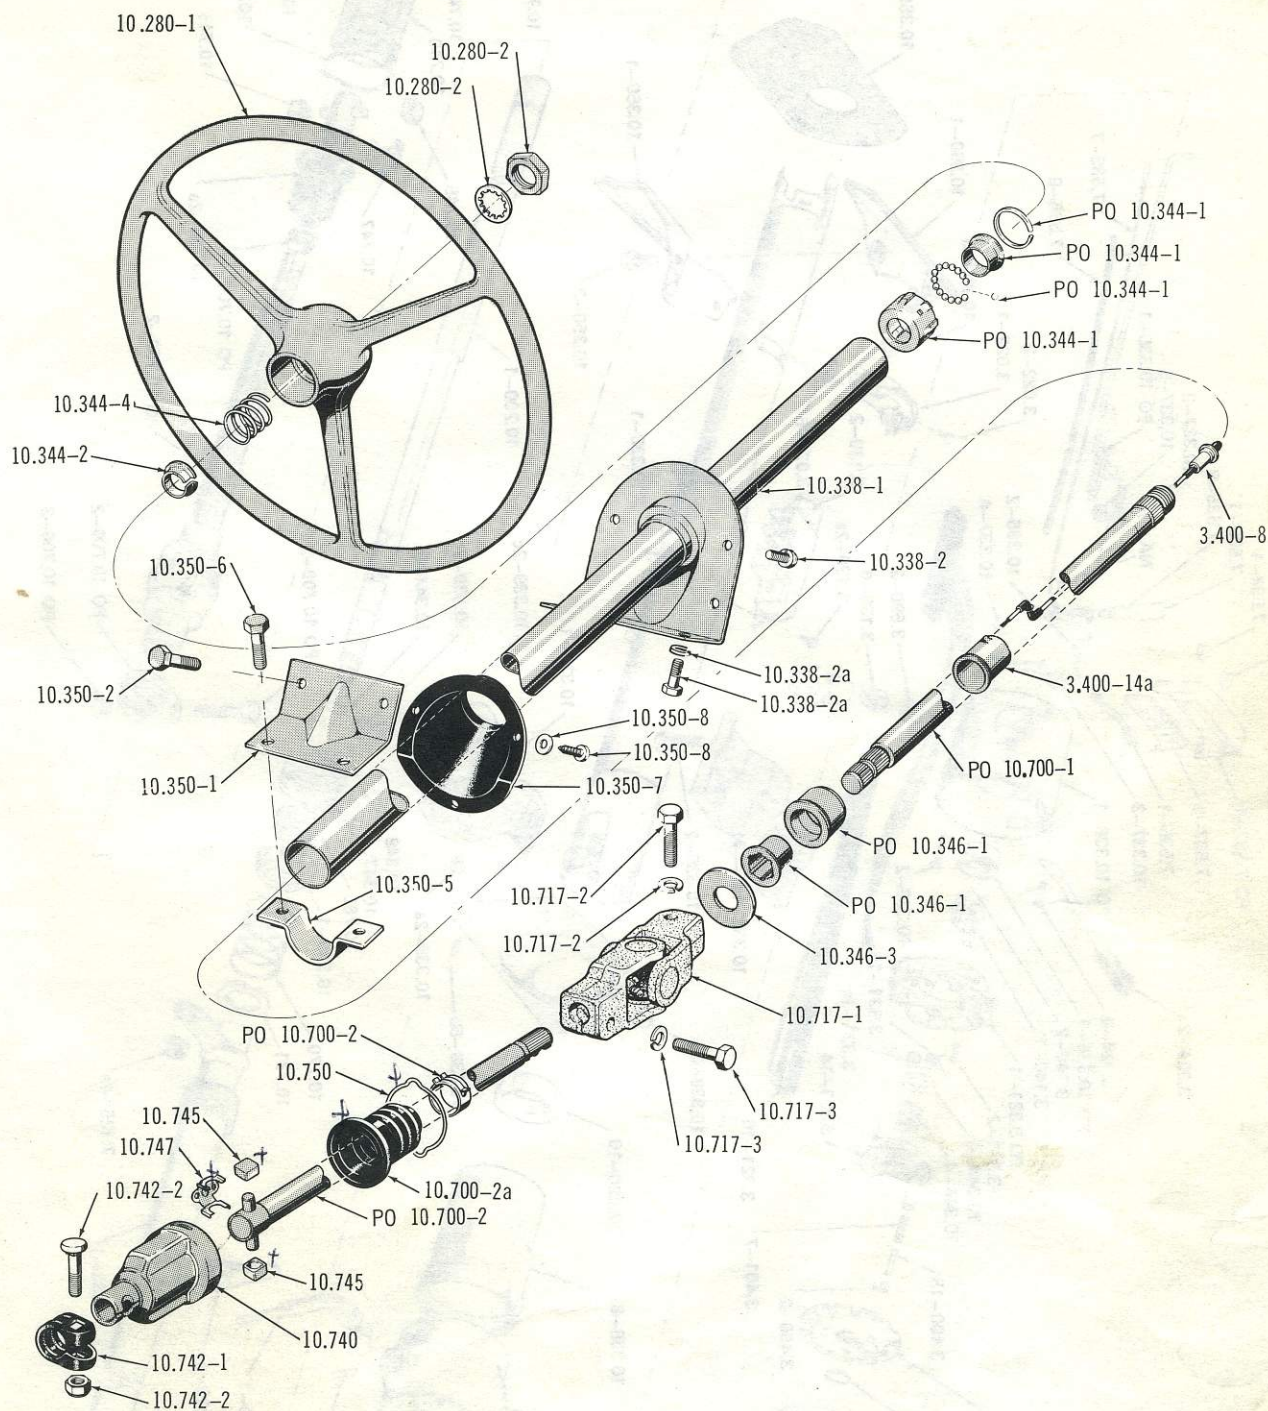


J-5672

STEERING COLUMN . . . 1974/1975 80

J-6131

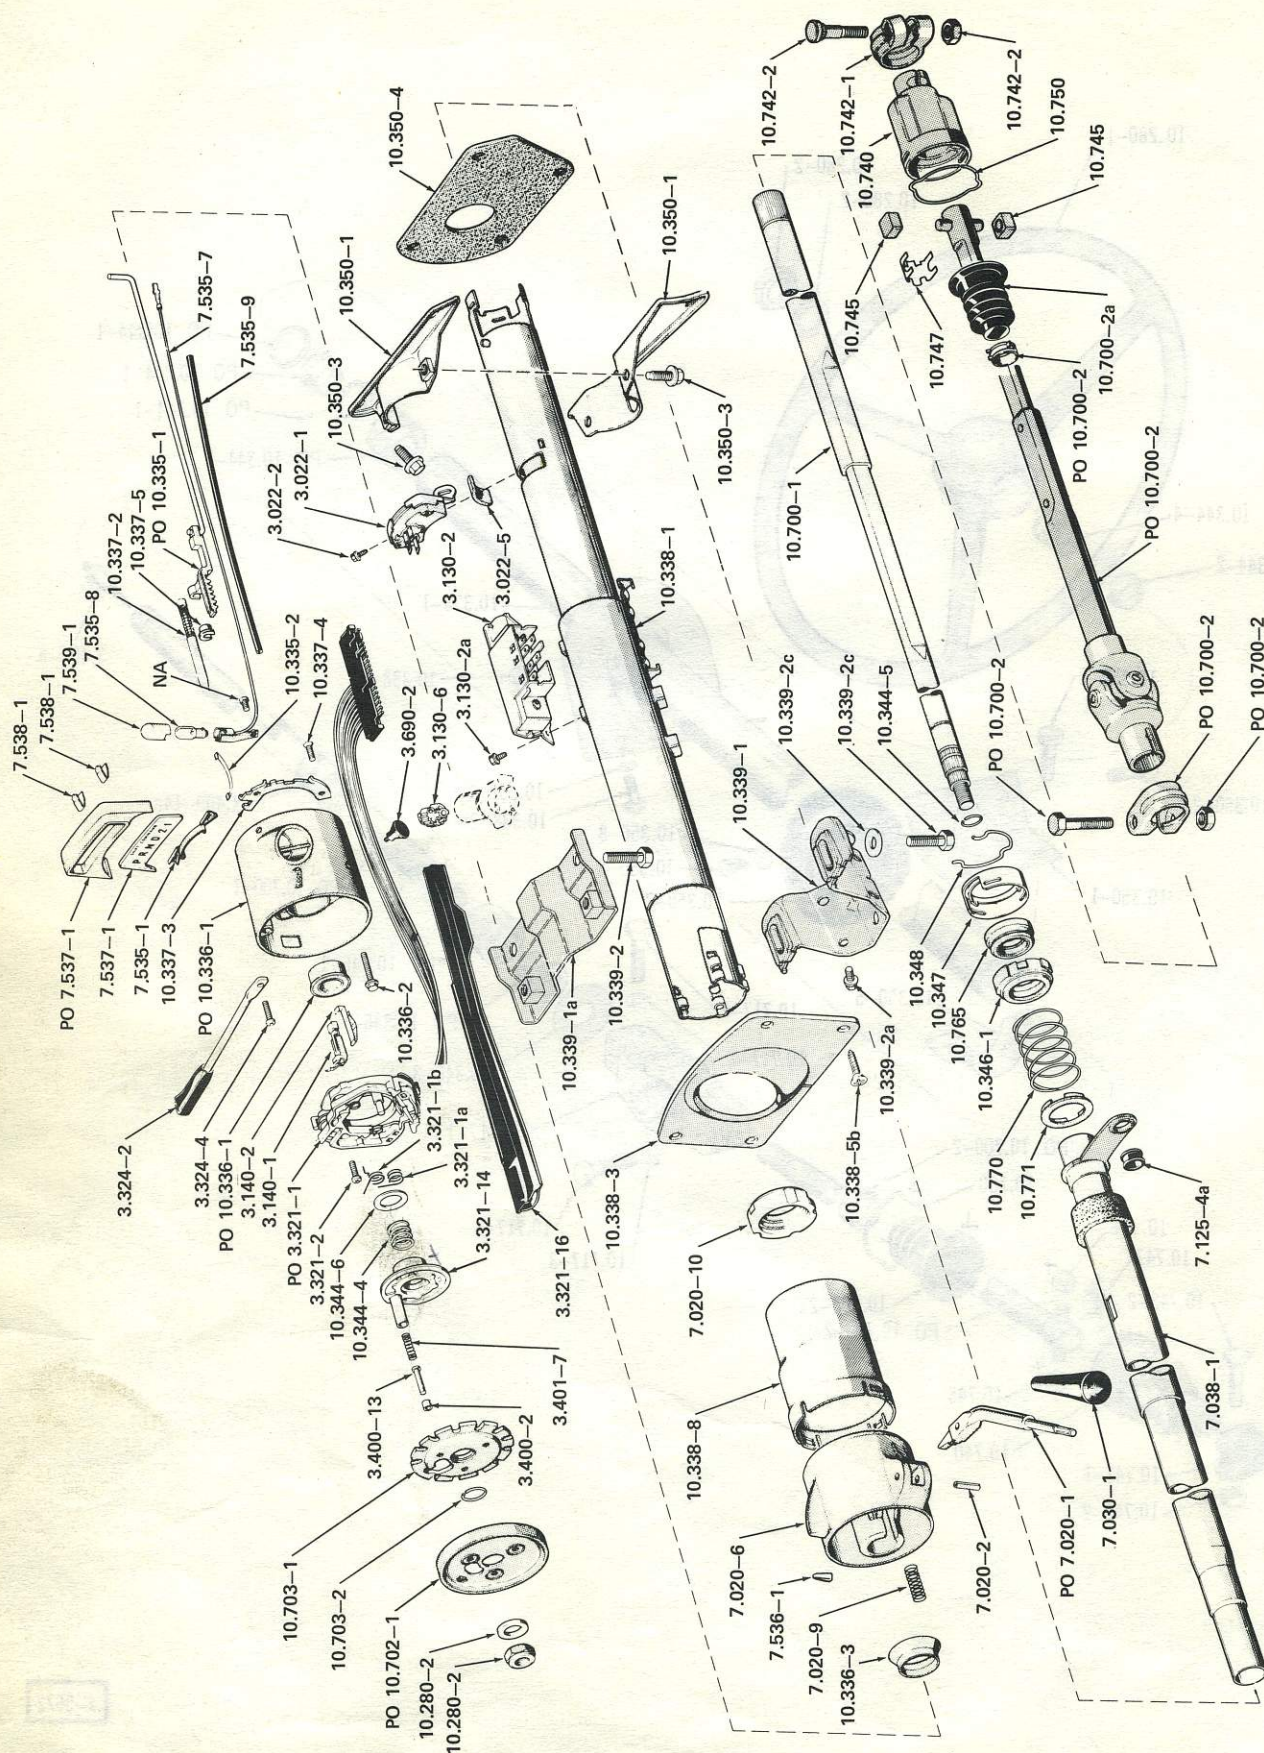


STEERING COLUMN . . . 1976/ 90 (LHD-WCGS-LAW)

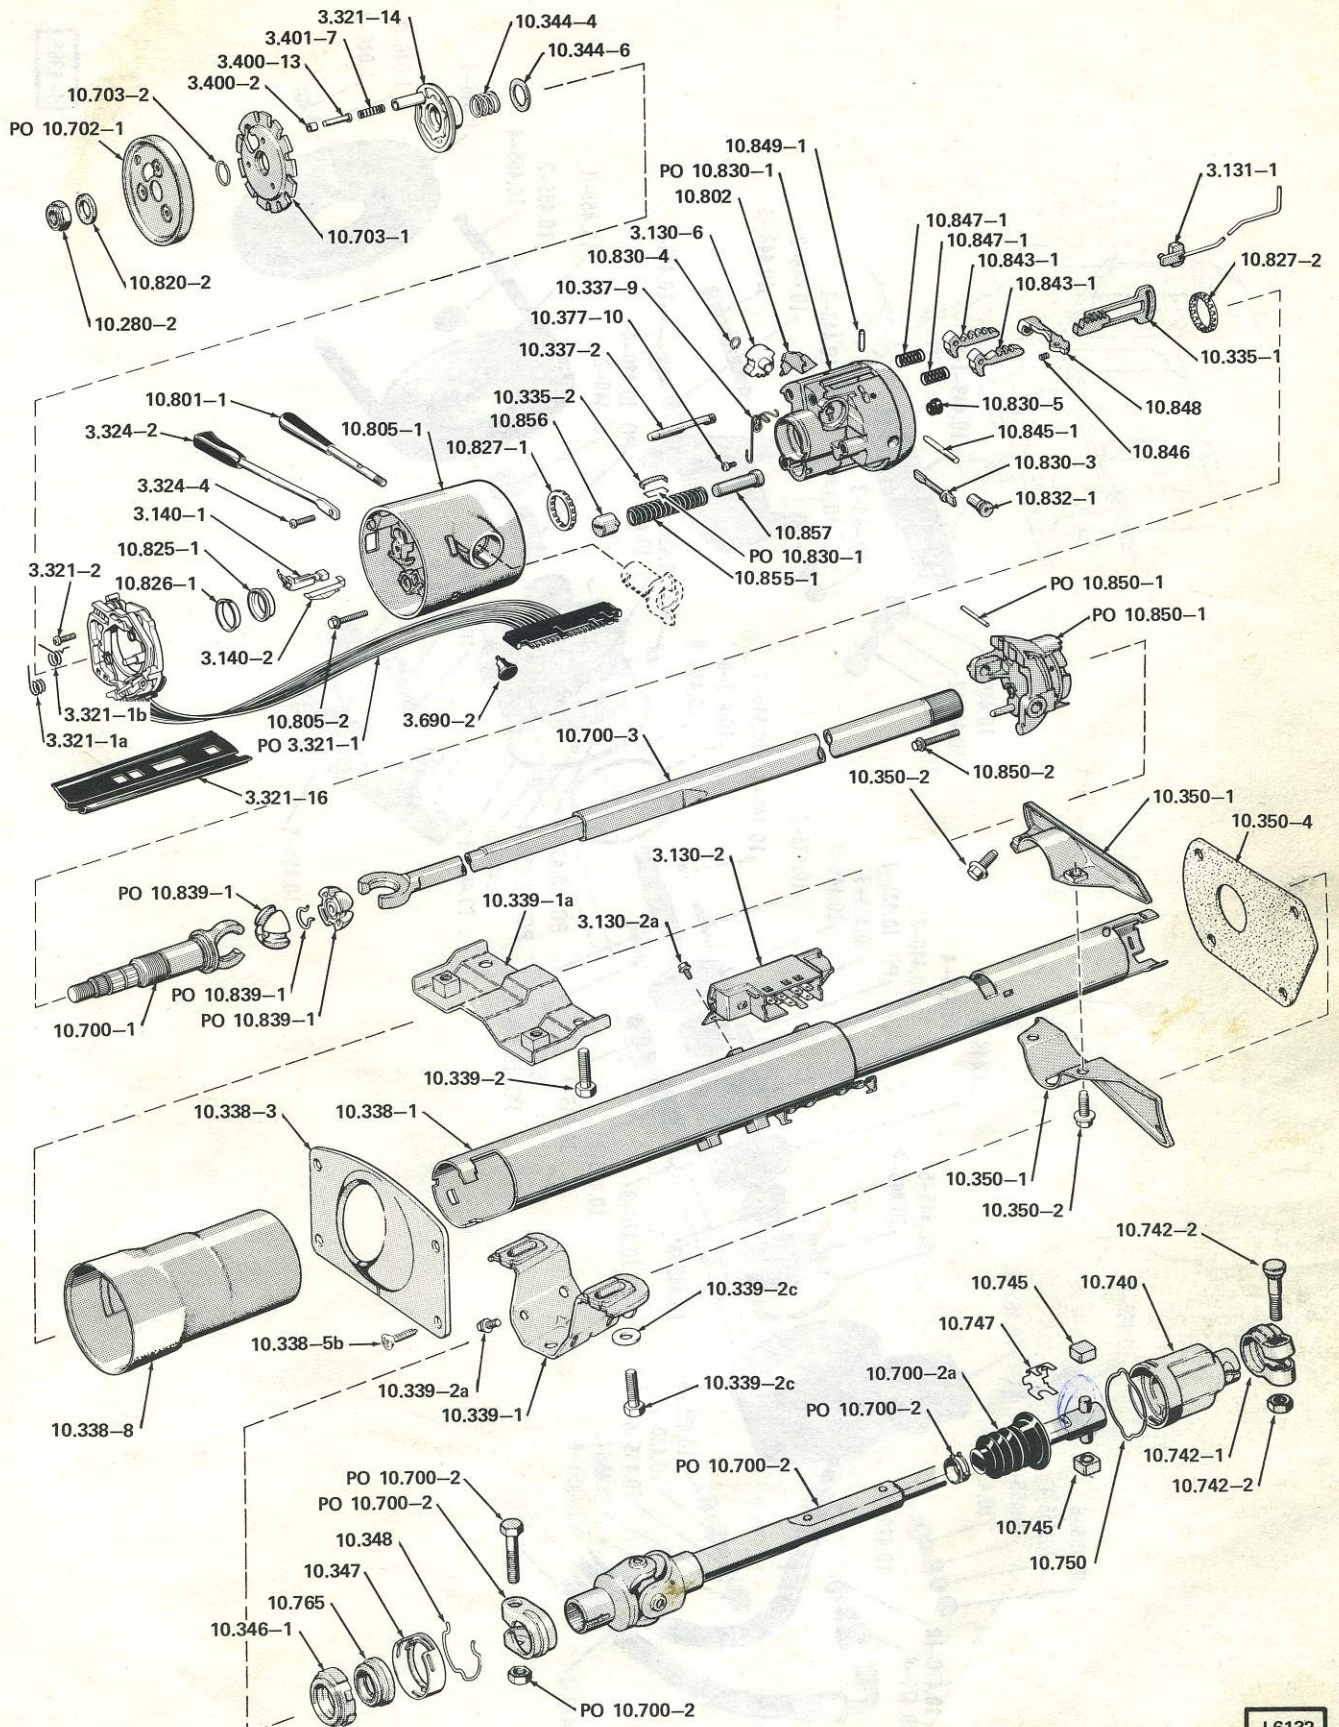


STEERING COLUMN . . . 1977 80-90 (LHD-WFGS-WAW)

J-6132


J-4365

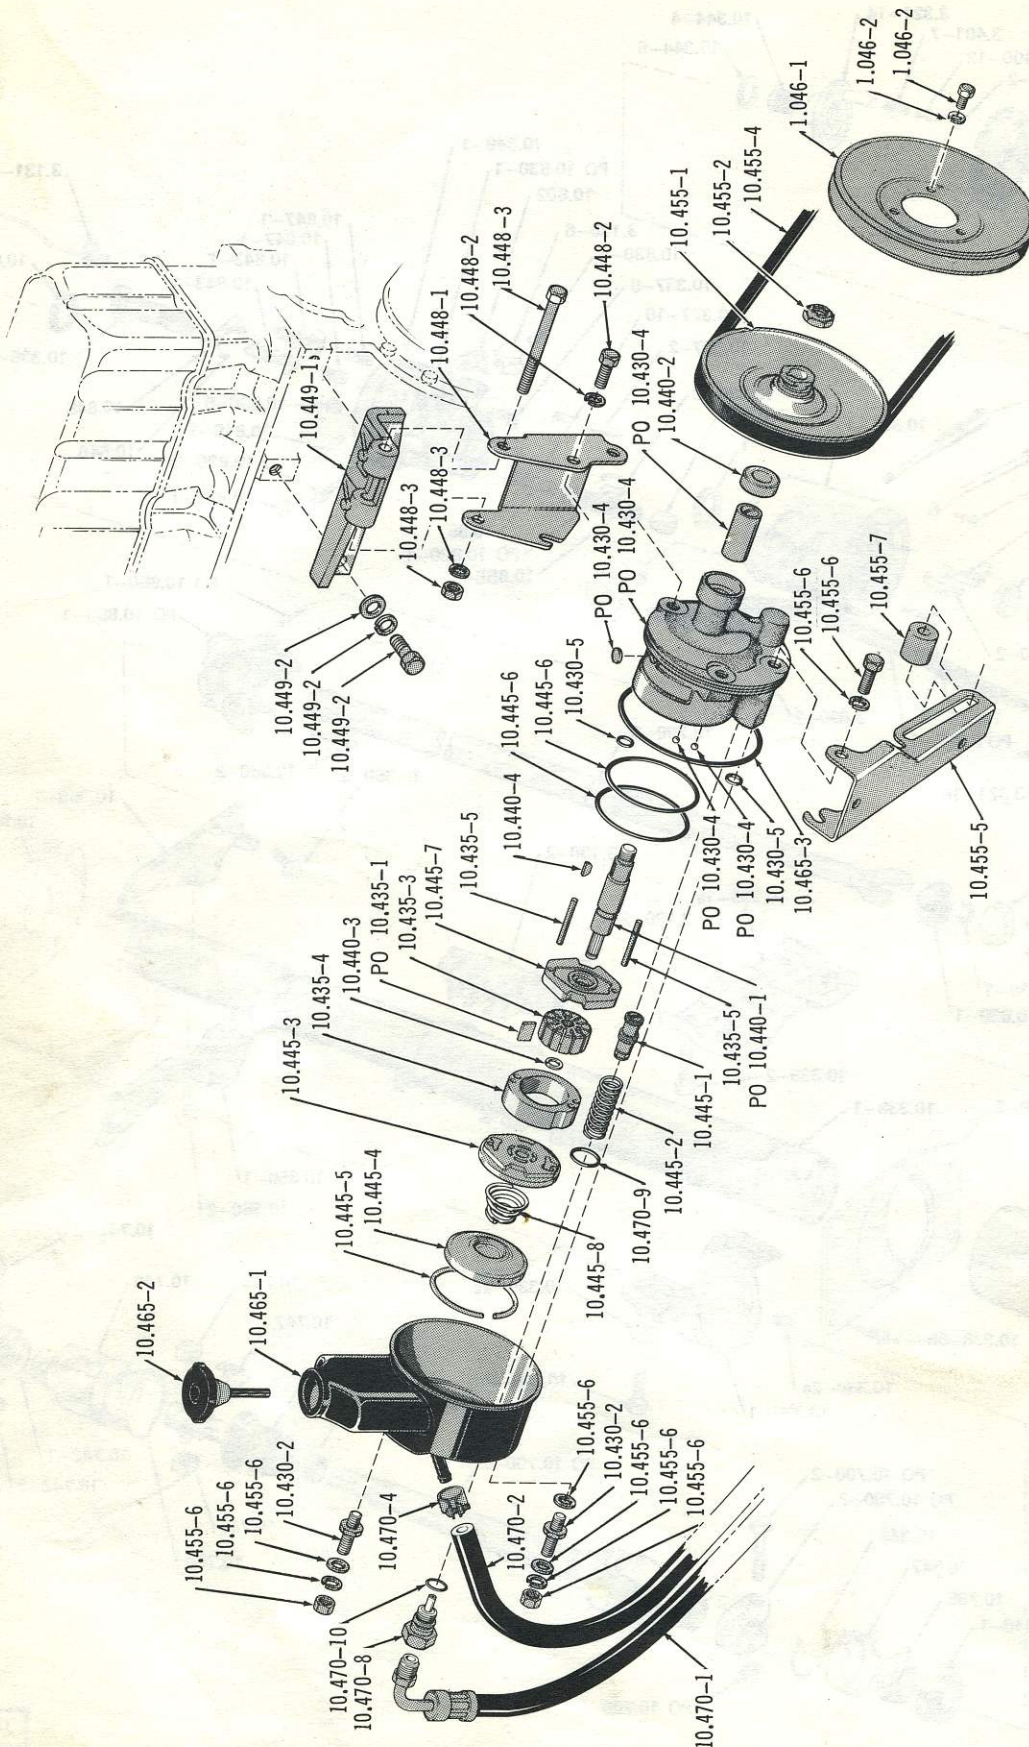

POWER STEERING PUMP, RESERVOIR AND HOSES... 1974 10-20-40 (SIX)

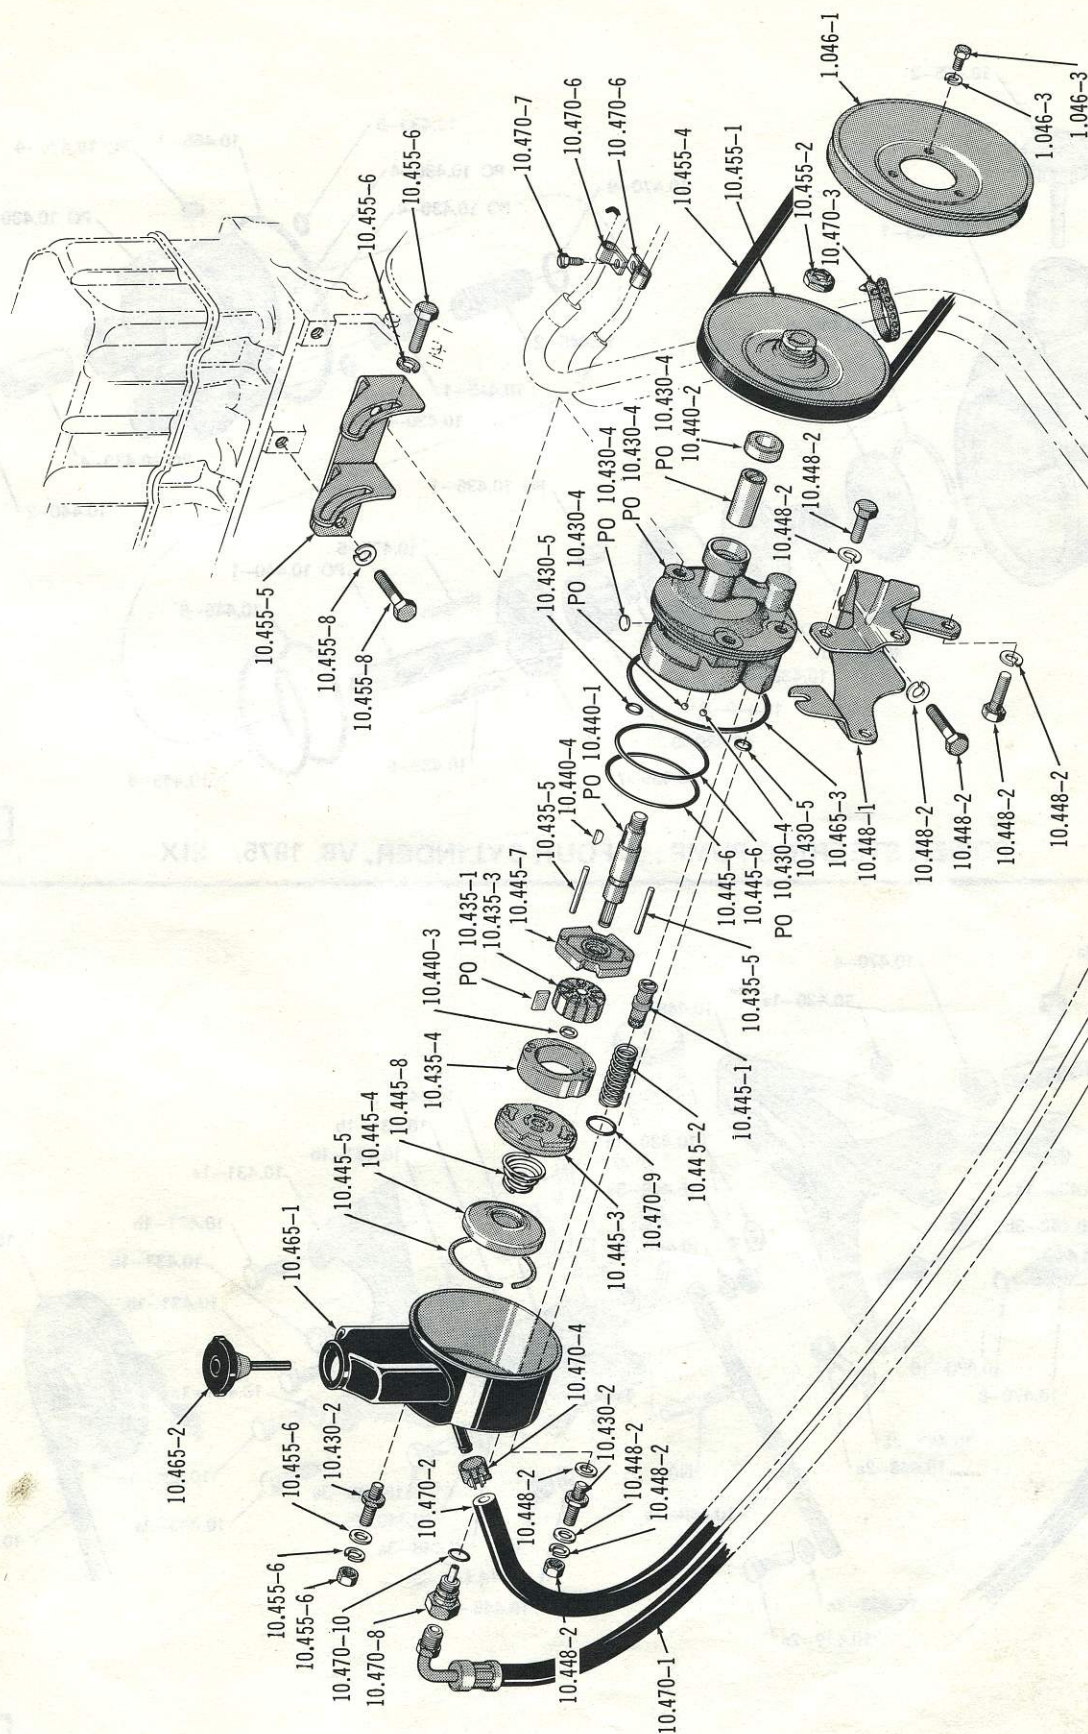


POWER STEERING PUMP, RESERVOIR AND HOSES . . . 1974 80 (SIX)

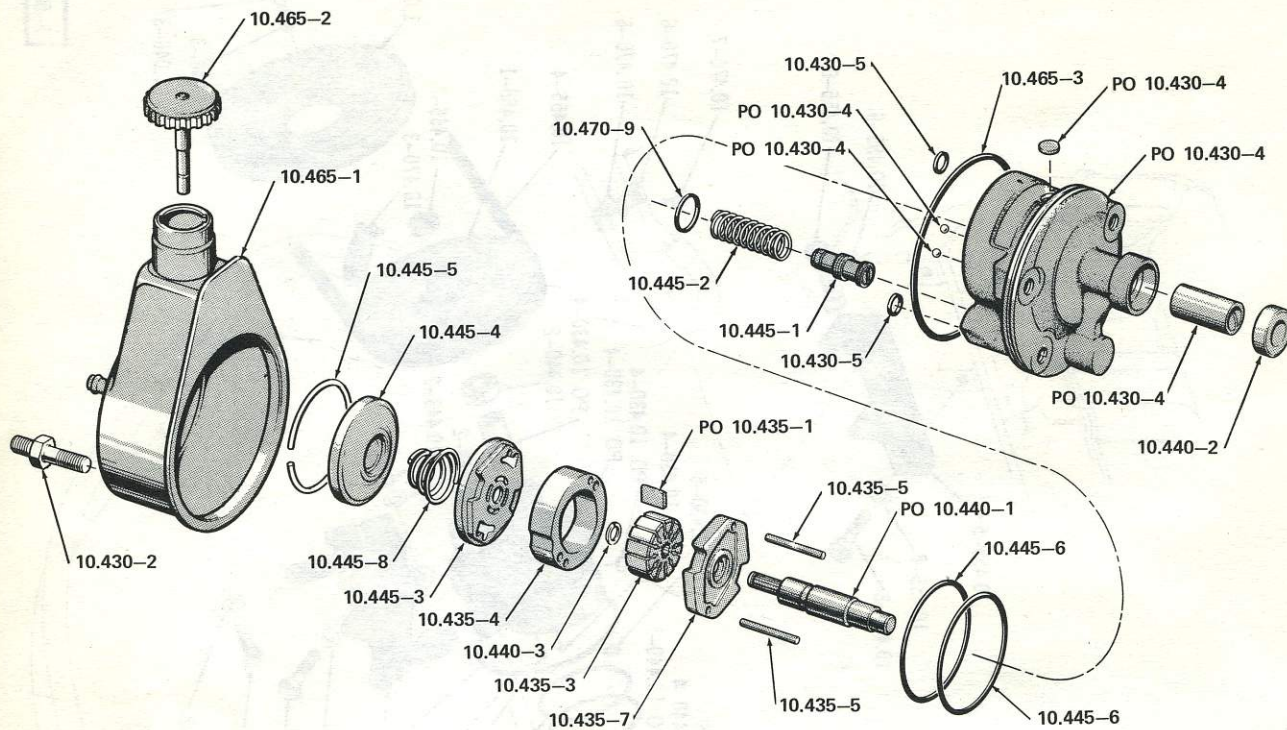


POWER STEERING PUMP . . . FOUR CYLINDER, V8, 1975/ SIX

J-6221

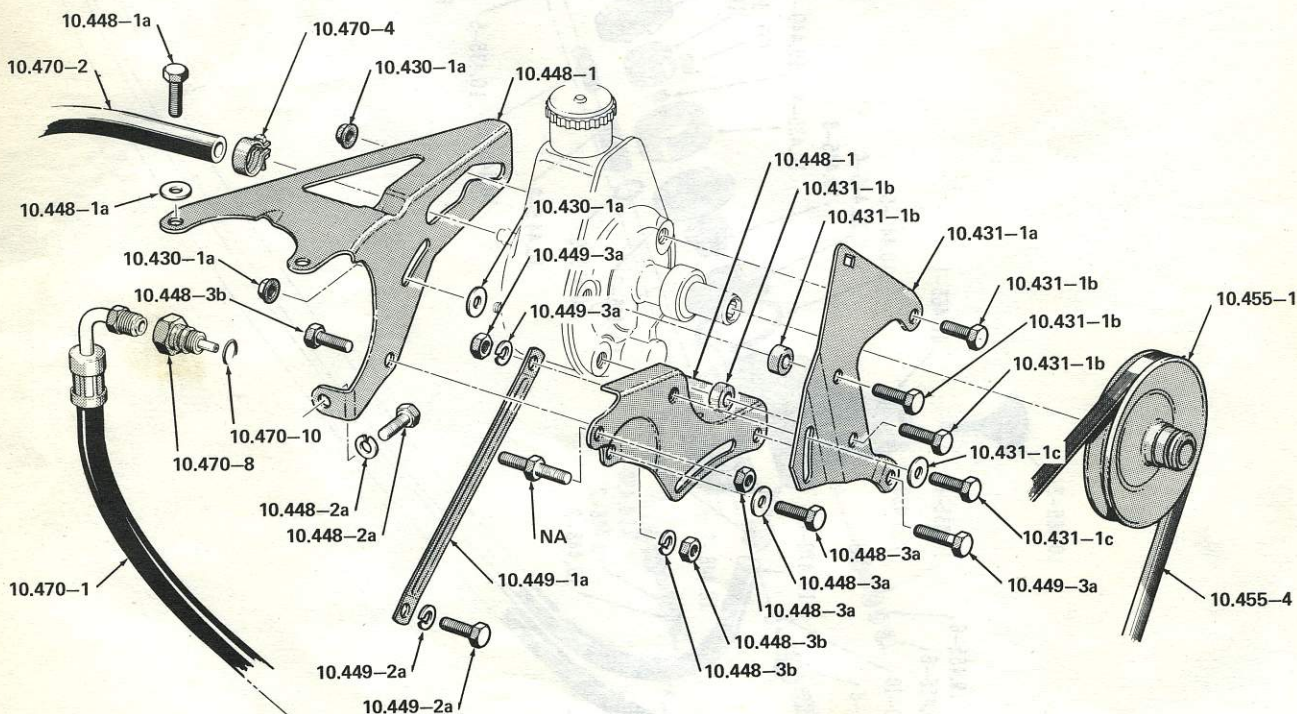


POWER STEERING PUMP MOUNTING . . . FOUR CYLINDER

J-6209

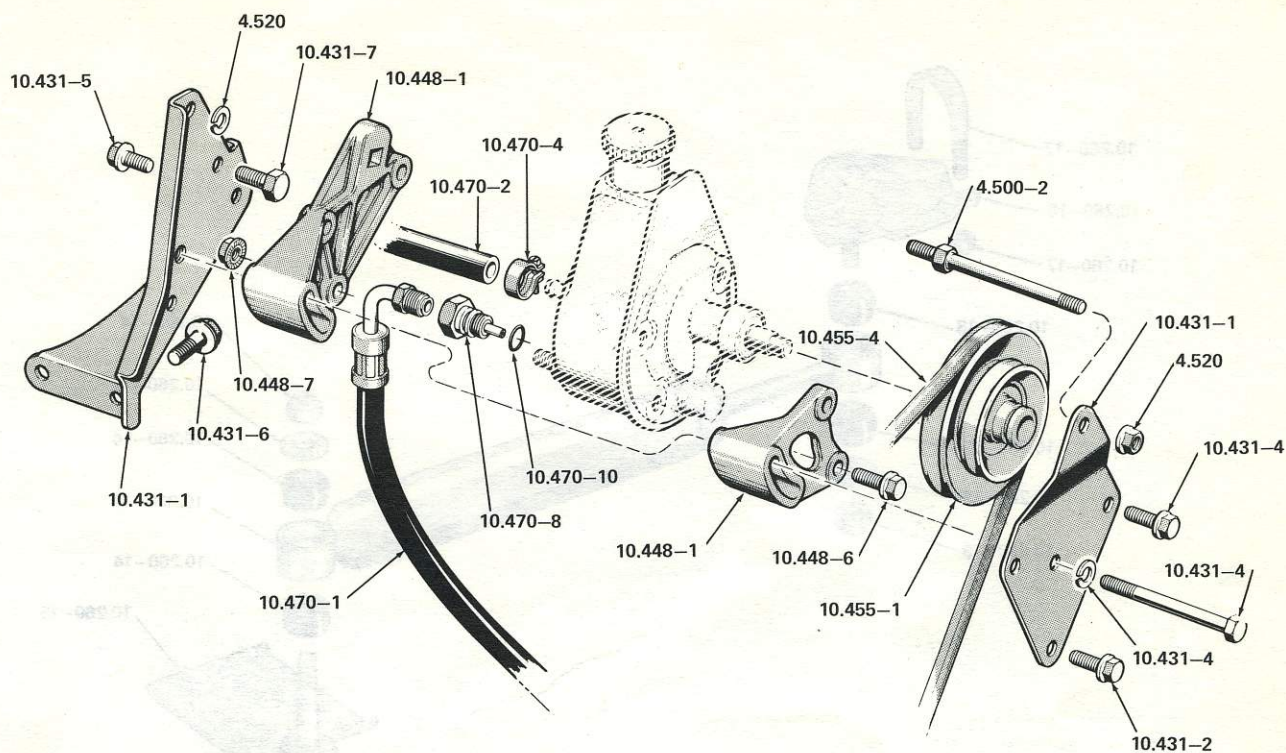


J-6222

POWER STEERING PUMP MOUNTING . . . 1975/ SIX

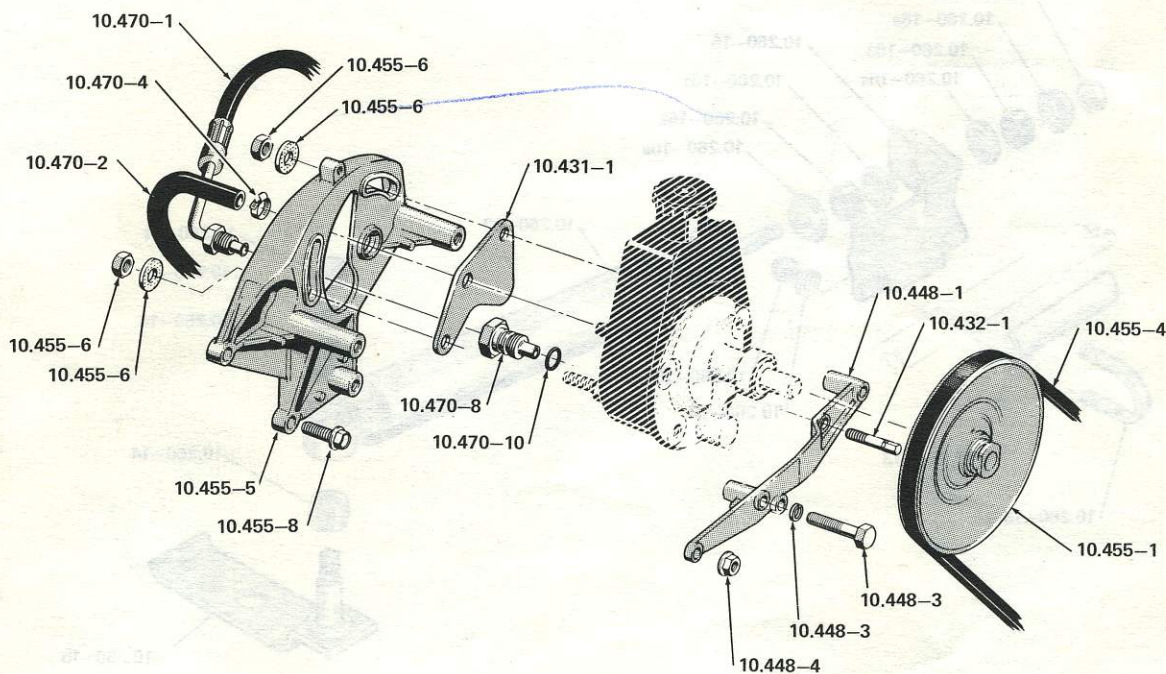


J-6223

POWER STEERING PUMP MOUNTING . . . V8

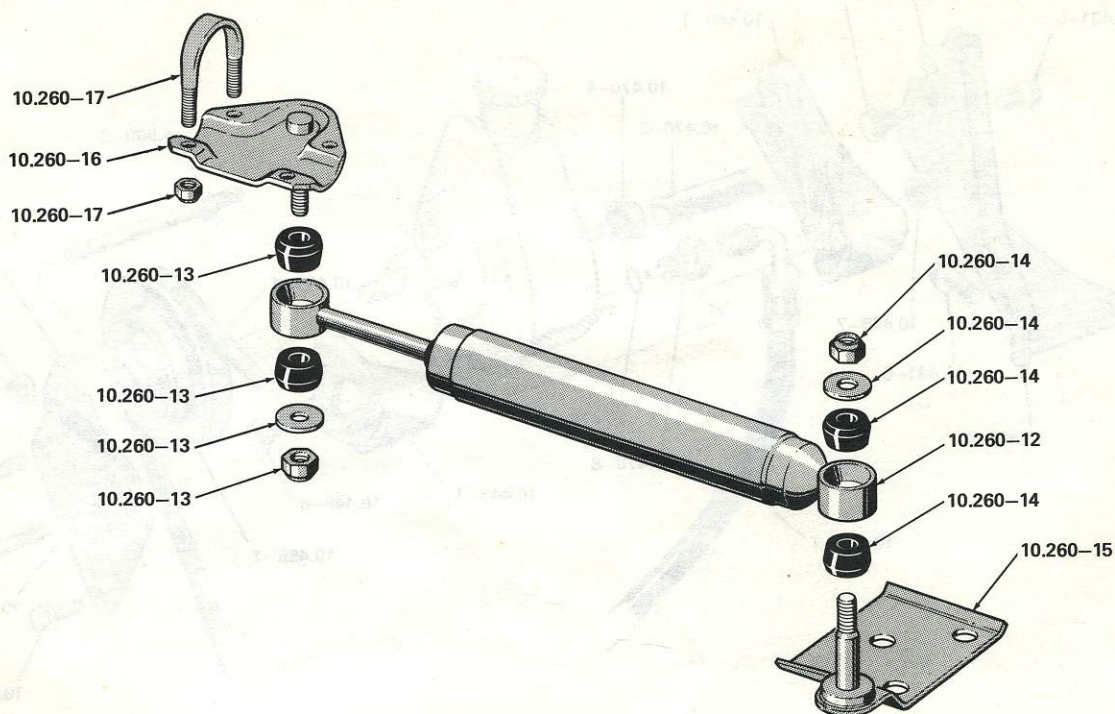


STEERING DAMPER (SHOCK TYPE) ... 10-20-40

J-5848

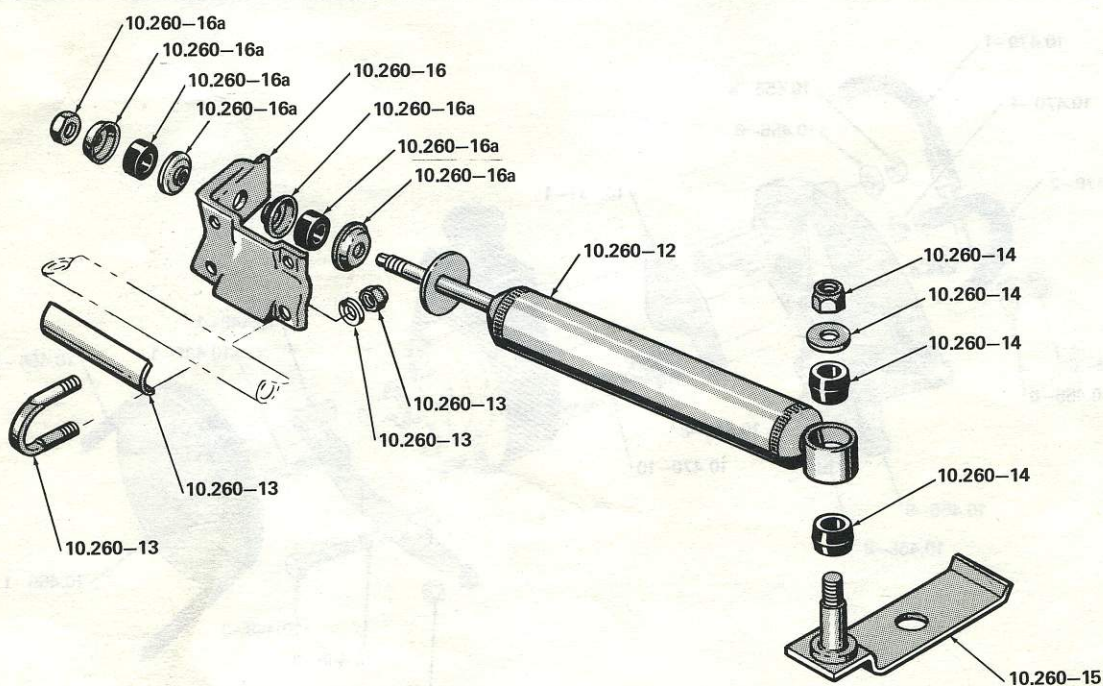


STEERING DAMPER (SHOCK TYPE) . . . 1976/ 80-90

J-6160

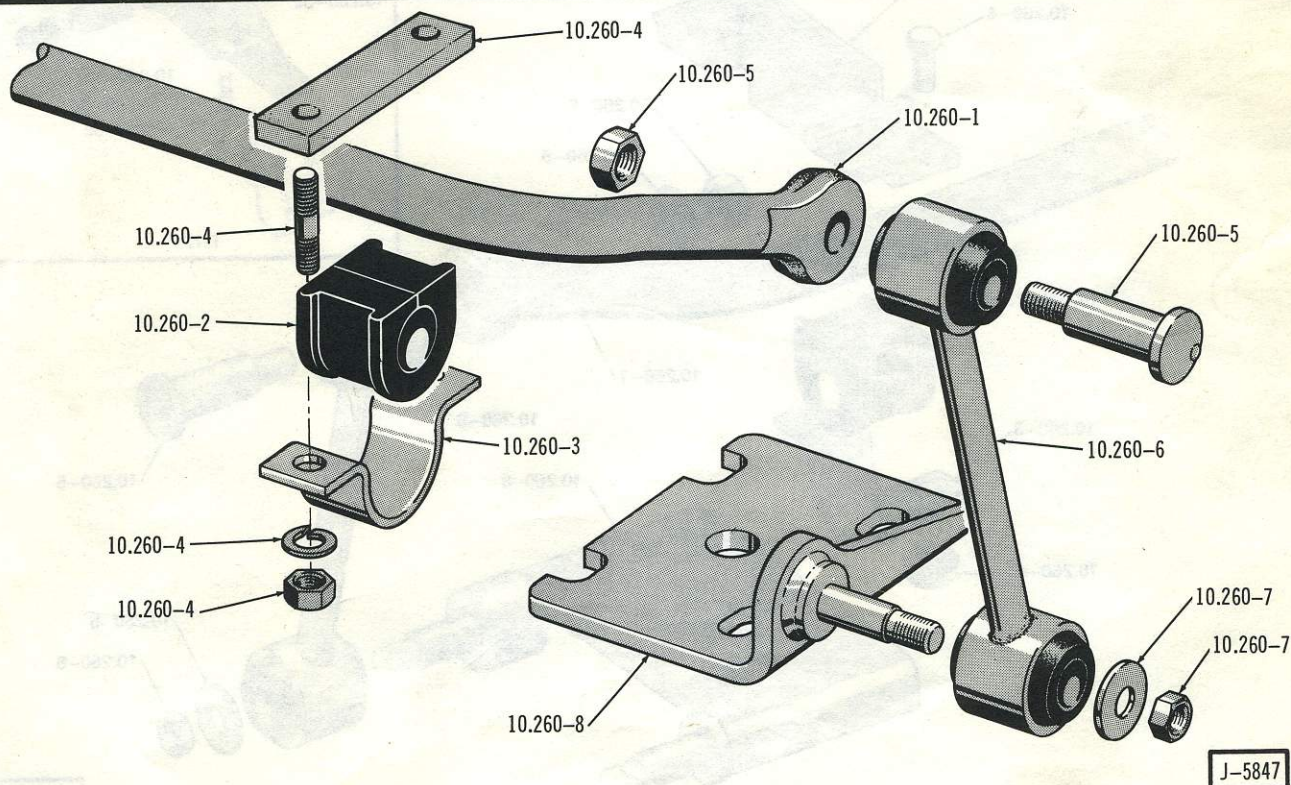


J-5847

FRONT STABILIZER BAR . . . 46

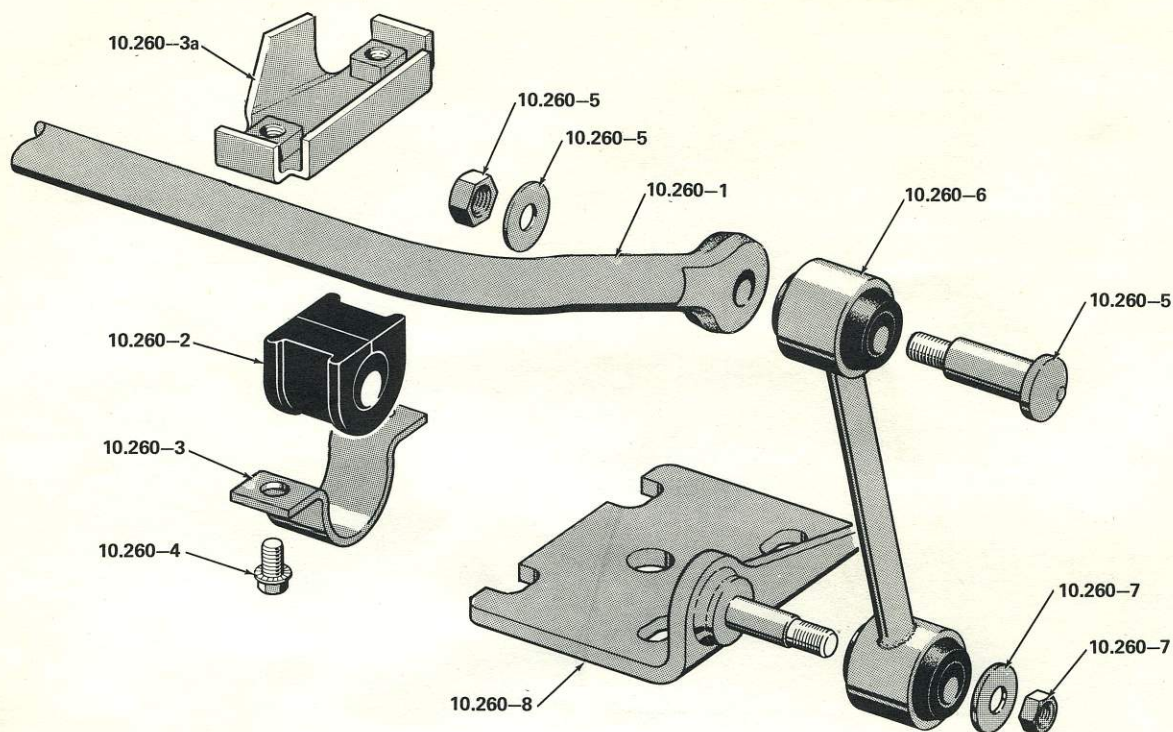

FRONT STABILIZER BAR ... 1976/10

J-6021

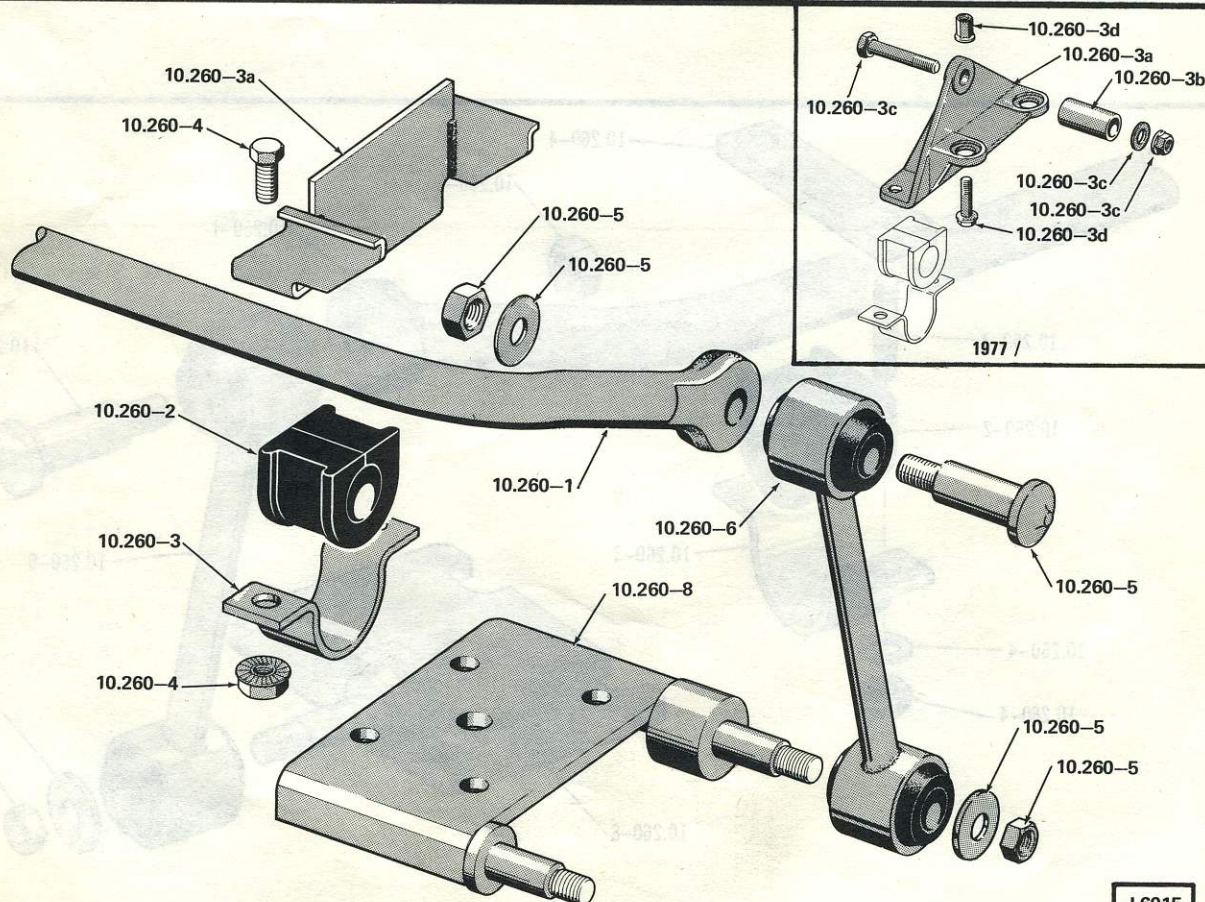

FRONT STABILIZER BAR ... 1976/80-90

J-6015

SPECIAL INFORMATION


The Engine Build Code Number, the Vehicle Identification Number and the information provided on the Trim Plate are often necessary when determining the proper replacement parts for your vehicle. For their location refer to the General Information Section found at the front of this catalog.

NOTES

10-1 When installed on 1974-1975 80, also order 999 635 Shaft.

10-2 For Type 1 Shaft see illustration below.

10-3 For Type 2 Shaft see illustration below.

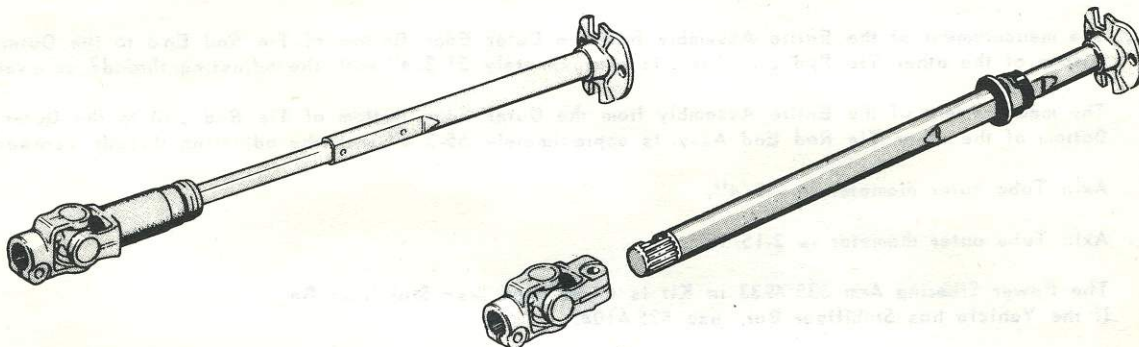

TYPE 1

TYPE 2


10-4 When installing Yoke it is recommended that 2 Spider Assemblies 812 3301 be installed.

10-5 The Splines on Shaft are 1-3/32" Long and the "U" Joint is 4-13/16" Long.


10-6 The Splines on Shaft are 1-21/32" Long and the "U" Joint is 4-5/8" Long.

10-7 Refer to Type 1 illustration below.

10-8 Refer to Type 2 illustration below.

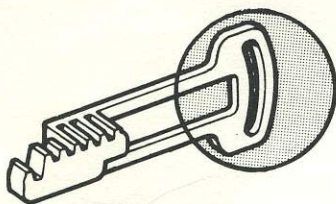

TYPE 1

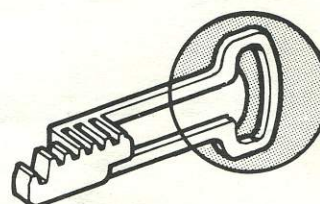

TYPE 2

10-9 When installed on 1976 or 1977 SIX (WEEP), also order Air Pump Parts Package 812 6542.

10-10 ... The Wheel is rubber and has 2 Spokes.

10-11 ... The Wheel is vinyl covered and has 3 Stainless Steel Spokes.

10-12 ... When ordering this Kit, also order correct Pitman Arm from Group 10.104-1.

10-13 ... Frame has partial inner Subrails.

10-14 ... Frame has complete inner Subrails extending to rear Crossmember.

- 10-15 ... This Column was used on some 1977 vehicles and must use the Directional Signal Adapter Harness Part No. 546 1508 (Group 3.321).
- 10-16 ... This Column does not use the Directional Signal Adapter Harness because of the new type Connector on end of Directional Signal Switch.
- 10-17 ... Refer to Gr 11 - 1, Special Information Page, the "A" dimension. The first type has a 3.40 dimension.
- 10-18 ... Refer to Gr 11 - 1, Special Information Page, the "A" dimension. The second type has a 3.60 dimension.
- 10-19 ... The measurement from the Outer Edge on the Threaded End to the first Main Shoulder is 4-1/2".
- 10-20 ... The measurement from the Outer Edge on the Threaded End to the first Main Shoulder is 4-1/4".
- 10-21 ... The measurement of the Entire Assembly from the Outer Edge Bottom of Tie Rod End to the Outer Edge Bottom of the other Tie Rod End Assy. is approximately 51-3/4" with the adjusting threads screwed tight.
- 10-22 ... The measurement of the Entire Assembly from the Outer Edge Bottom of Tie Rod End to the Outer Edge Bottom of the other Tie Rod End Assy. is approximately 55-3/4" with the adjusting threads screwed tight.
- 10-23 ... Axle Tube outer diameter is 2-3/4".
- 10-24 ... Axle Tube outer diameter is 2-15/16".
- 10-25 ... The Power Steering Arm 535 4933 in Kit is to be used less Stabilizer Bar. If the Vehicle has Stabilizer Bar, use 535 6104.
- 10-26 ... Used with Caliper Anchor Plate which is attached to Steering Knuckle with 6 Bolts.
- 10-27 ... Used with Caliper Anchor Plate which is attached to Steering Knuckle with 2 Bolts.
- 10-28 ... This Export Column meets with the European (E. C. E.) Column Lock Test.

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.004

GROUP NO. — DESCRIPTION — YEAR and MODEL	PAKS CODE	PRIMARY GROUP NO.	PER CAR	PART NO.	CODE
10.002-1 CROSSMEMBER, Front					
74 10-20-40..... (Use 535 3969)			1	535 2681	
75 10-20-40.....			1	535 3969	
76/78 10-20-40.....			1	812 6595	
79/ 10-20-40.....			1	812 9559	
74/75 80 (LEAB).....			1	998 060	
74/75 80 (WEAB).....			1	535 2651	
76 80-90 (* 10-13).....			1	812 6585	
76 80-90 (* 10-14).....			1	812 7708	
77/ 80-90.....			1	812 7708	
10.004-1 KNUCKLE, Steering					
LEFT					
74/76 10-25-45 (LDB).....			1	812 4331	
74/77 10-20-40 (WDB-* 10-23)..... 206			1	812 4371	
77/ 10-20-40 (* 10-24).....			1	812 8611	
74/75 80..... 213			1	812 1363	
76 80-90..... 213			1	812 6508	
77/78 80-90 (* 10-26).....			1	812 7597	
78/ 80-90 (* 10-27).....			1	812 9655	
RIGHT					
74/76 10-25-45 (LDB).....			1	812 4330	
74/77 10-20-40 (WDB-* 10-23)..... 206			1	812 4370	
77/ 10-20-40 (* 10-24).....			1	812 8610	
74/75 80..... 213			1	812 1387	
76 80-90..... 213			1	812 6507	
77/78 80-90 (* 10-26).....			1	812 7596	
78/ 80-90 (* 10-27).....			1	812 9654	
10.004-2 ATTACHING PARTS, Knuckle To Axle Housing					
RING, Split..... 74/			2	812 1365	
NUT, Jam..... 74/			2	812 1391	
NUT, Slotted..... 74/			2	812 1364	
PIN, Cotter..... 74/			2	812 1392	
10.004-6 BOLT, Steering Knuckle To Spindle					
74/ LDB...(1-11/32" Long).....			12	812 4792	
74/ WDB...(1-1/2" Long).....			12	812 4847	
77/ WDB...(1-5/8" Long).....			12	812 8490	
10.004-11 SPINDLE ASSEMBLY, Steering (Incl. Seal, Bearing And Spacer)					
77/79 10 (Cherokee Chief-* 10-20 And * 10-23)..... (Use 812 8768)			2	812 8489	
74/76 10-25-45 (LDB)..... (Use 812 7352) 205			2	812 4353	
74/77 10-25-45 (WDB-* 10-19)..... (Use 812 7361) 8.292			2	812 4404	
77/79 10-25-45 (WDB-* 10-20 And * 10-23).....			2	812 8489	
77/79 10-20-40 (* 10-24).....			2	812 8767	
80 10-20-40.....			2	812 8489	
74/75 26-46..... (Use 812 7360)			2	812 4374	
76/79 26-46.....			2	812 7360	
77/ 80-90.....			2	812 8147	
10.004-12 SPINDLE, Steering					
76 10 (Cherokee Chief)..... (Use 812 7361)			2	812 4407	
74/76 10-25-45 (LDB)..... (Use 812 4353)			2	812 4360	
74/77 10-25-45 (WDB-* 10-19)..... (Use 812 7361)			2	812 4407	
74/75 26-46..... (Use 812 4374)			2	812 4376	
74/76 80-90.....			2	812 1403	

10.004 FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.004-13 BEARING ASSEMBLY, Steering Spindle

74/79	10-20-40...(Incl. Seal).....	(Use 812 7356)		2	812 4354
75/79	16-17-25.....			2	812 7356
80	10-20-40.....			2	812 7356
74/75	80...(Less Seals And Spacer)		10.023	2	812 1402
76	80-90...(Incl. Seals And Spacer)			2	812 6510
77/	80-90...(Incl. Seal And Spacer)			2	812 7356

10.004-14 SEAL, Front Steering Spindle Oil

74/79	10-20-40...(2-1/2" O.D.).....	(Use 812 7350)		2	812 4359
75/79	16-17 (Cherokee Chief)....(2-3/4" O.D.)			2	812 7350
75/79	25...(2-3/4 O.D.)			2	812 7350
80	10-20-40.....			2	812 7350
74/76	80-90...(3" O.D.).....			2	812 1399
77/	80-90...(2-3/4" O.D.).....			2	812 7350

10.004-15 WASHER, Front Steering Spindle To Shaft Thrust

74/76	80.....			2	812 1398
-------	---------	--	-------	---	----------

10.004-16 SPACER, Front Steering Spindle

74/79	10-20-40...(2" O.D.).....	(Use 812 7348)		2	812 4358
75/79	16-17 (Cherokee Chief)....(3" O.D.)			2	812 7348
75/79	25...(3" O.D.).....			2	812 7348
80	10-20-40.....			2	812 7348
77/	80-90...(3" O.D.).....			2	812 7348

10.004-17 SEAL, Front Spindle Bearing ("V" Type)

74/77	10-20-40.....	(Use 812 1397)		2	812 7351
74/79	80-90.....			2	812 1397

10.006-1 STUD KIT, Steering Knuckle Ball

74/	10-20-40.....	207		2	812 4333
75	80.....	207		2	812 4333
76	80-90.....	(Use 812 4333) 203		2	812 6509
77/	80-90.....	207		2	812 4333

10.006-2 STUD, Steering Knuckle Ball (Upper)

74/		203		2	812 2495
-----	-------	-----	-------	---	----------

10.006-3 STUD, Steering Knuckle Ball (Lower)

74/		204		2	812 2496
-----	-------	-----	-------	---	----------

10.010-1 BOLT, Turning Radius Stop

74/	(1-1/16" Long)			2	A 821
74/	(1-5/8" Long)			2	813 0382

10.010-2 NUT, Turning Radius Stop Belt Adjusting

74/		17.410		2	G114494
-----	-------	--------	-------	---	---------

10.013-1 RING, Stud Steering Knuckle Ball Snap

74/		10.006		2	812 4362
-----	-------	--------	-------	---	----------

10.104-1 ARM, Steering Linkage Pitman

LHD

74/	10-20-40 (LPS)			1	535 2162
74/	10-20-40 (WPS)			1	535 2278
74/75	80 (LPS)			1	999 415
74/75	80 (WPS)			1	999 416
76/77	80-90 (LPS-Used Less Stabilizer Bar)	(Use 535 6106)		1	535 3275
76/77	80-90 (LPS-Used With Stabilizer Bar)			1	535 6106
76/77	80-90 (WPS-Used Less Stabilizer Bar)			1	535 4933
76/77	80-90 (WPS-Used With Stabilizer Bar)			1	535 6104
78/	80-90 (LPS)			1	535 6106
78/	80-90 (WPS)			1	535 6104

RHD

74/75	10-20-40 (LPS)			1	535 2760
74/75	80 (LPS)			1	940 956
76/79	80-90 (LPS)			1	535 5687

10.104-2 ATTACHING PARTS, Pitman Arm To Steering Gear

WASHER, Lock	74/	LHD.....	17.820	1	G103336
WASHER, Lock	74/79	RHD (LPS)		1	940 558
NUT, Hexagon	74/	LHD (LPS)	(Use 320 0501)	1	940 523
NUT, Hexagon	74/	LHD (WPS)		1	320 0501
NUT, Hexagon	74/79	RHD (LPS)		1	940 557

10.118-1 ROD ASSEMBLY, Steering Arm To Steering Arm Tie (Incl. Ends)**LHD**

74	10.....	(Use 535 2665)		1	812 4815
75/79	10 (Except 17-* 10-21)			1	535 2665
74	20-40.....	(Use 535 2680)		1	812 4822
75	20-40.....			1	535 2680
76/79	17-20-40 (* 10-22)			1	535 2680
80	10-20-40.....			1	535 2665
74/	80-90.....			1	535 0586

RHD

74/75	10.....			1	812 4824
74/75	20-40.....			1	812 4826
74/79	80.....			1	535 0569

10.118-2 ROD ASSEMBLY, Pitman Arm To Steering Arm Tie (Incl. Ends And Adjusting Tube)

74/75	10...(26-3/8")			1	535 2163
76	10 (Except Cherokee Chief)...(26-3/8")			1	535 2163
76	17 (Cherokee Chief)...(28-3/8")			1	535 2421
77/	10 (Except 17)...(26-3/8")			1	535 2163
74/76	20-40...(28-3/8")			1	535 2421
77/	17-20-40...(28-3/8")			1	535 2421
74/75	80 (LHD)...(28-1/8" Long)	(Use 535 6105)		1	991 748
76	80-90 (LHD-Used With Stabilizer Bar)...(27-3/4" Long)			1	535 6105
76	80-90 (LHD-Used Less Stabilizer Bar)...(28-1/2" Long)			1	812 7580
77/	80-90.....			1	535 6105
74/75	80 (RHD)			1	535 0571
76/79	80-90 (RHD)			1	535 5688

10.126-1 END ASSEMBLY, Steering Arm To Steering Arm Tie Rod**LHD**

74/	10 (Except 17)...(46-1/2" Long)			1	812 4816
74/	17-20-40...(50-1/2" Long)			1	812 4823
74/	10-20-40...(Short)	209		1	812 4817
74/	(Left) 80-90...(3-1/8" Long)			1	921 317
74/	(Right) 80-90...(3-1/8" Long)			1	920 535

RHD

74/79	10...(Long)			1	812 4825
74/79	20-40...(Long)			1	812 4827
74/79	10-20-40...(Short)			1	812 4828
74/79	(Left) 80...(6-1/4" Long)			1	918 257
74/79	(Right) 80...(3-1/8" Long)			1	921 317

10.126-2 END ASSEMBLY, Pitman Arm To Steering Arm Tie Rod

74/	(3.75" Long-Right Hand Thread)...10-20-40			1	812 3319
74/	(21.88" Long-Left Hand Thread)...10 (Except 17)			1	812 3315
74/	(23.88" Long-Left Hand Thread)...17-20-40			1	812 3316
74/75	(3-1/8" Long) ...80			1	921 317
76/	(3-1/8" Long) 80-90	USE 513 6600		1	921 317
74/75	(23.94" Long) ...80 (LHD)			1	991 744
76/	(23.94" Long) ...80-90 (LHD)			1	991 744
74/79	(20.83" Long) ...80 (RHD)			1	535 0570

10.220 FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.220-1 FITTING, Steering Linkage Tie Rod End Lubrication			
74/	(Straight)	17.290	2 G271287
10.222-1 TUBE, Steering Linkage Tie Rod Adjusting (Threaded On Both Ends)			
74/	(4.53" Long-Pitman Arm To Steering Arm)...10-20-40	1	812 3320
74/	(4.50" Long-Steering Arm To Steering Arm)...10-20-40 (LHD)	1	812 4819
74	(Steering Arm To Steering Arm)...10-20-40 (RHD)	1	812 4829
74/	(4.50" Long-Pitman Arm To Steering Arm)...80-90 (Use 320 0671)	1	928 833
74/	(40.12" Long-Steering Arm To Steering Arm)...80-90 (LHD)	1	535 0589
74	(36-1/2" Long-Steering Arm To Steering Arm)...80 (RHD)	1	944 308
10.224-1 CLAMP, Steering Linkage Tie Rod Adjusting Tube			
74/	10-20-40	2	806 746
74/	(For 7/8" Dia. Tube)...80-90	2	A 837
10.224-2 ATTACHING PARTS, Clamp To Adjusting Tube			
BOLT, Hexagon	74/ 10-20-40	17.038	2 G181404
BOLT, Hexagon	74/ 80	2	645 218
WASHER, Lock	74/ 10-20-40	17.	2 G103222
WASHER, Lock	74/ 80	17.820	2 G120638
NUT, Hexagon	74/ 10-20-40	17.406	2 G271505
NUT, Hexagon	74/ 80	17.406	2 G120368
10.232-1 COVER, Steering Linkage Pitman Arm To Steering Arm Tie Rod End Dust			
74/		2	812 3317
10.232-2 COVER, Steering Arm To Steering Tie Rod End Dust			
74/	10-20-40	2	812 4821
74/	80-90	2	812 3317
10.234-1 ATTACHING PARTS, Steering Linkage Pitman Arm To Steering Arm			
NUT, Slotted	74/ 10-20-40	2	812 3318
PIN, Cotter	74/ 10-20-40	14.760	2 G137190
PIN, Cotter	74/ (3-32" x 1")...80-90	3.200	AR G121224
10.234-2 ATTACHING PARTS, Steering Arm To Steering Arm Tie Rod End Dust Cover			
WASHER, Plain	74/ 10-20-40	10.232	2 812 4820
NUT, Hexagon	74/	2	812 4818
PIN, Cotter	74/ 10-20-40	17.460	2 G108635
PIN, Cotter	74/ 80	3.200	2 G121224
10.260-1 STABILIZER, Front Suspension Sway (Bar)			
76/	10	1	535 5593
77/	25-45	1	535 5593
74/	46	1	535 2705
76/79	80-90...(.875 Dia.)	1	535 5327
80	80-90...(.935 Dia.)	1	536 1651
10.260-1a SWAY BAR KIT (Stabilizer - Used With Radial Tires)			
76	10	1	812 9801
10.260-2 CUSHION, Front Suspension Sway Stabilizer To Frame			
76/	10	2	535 5315
77/	25-45	2	535 5315
74/	46	2	535 2702
76/	80-90...(13/16" Dia. Hole-Has Vertical Slit-Use With Bar 5355327)	2	535 5315
80	80-90...(7/8" Dia. Hole-Has Horizontal Slit-Use With Bar 5361654)	2	536 1674
10.260-2a REINFORCEMENT, Axle Bumper			
76/	80-90	2	535 5682
10.260-2b ATTACHING PARTS, Reinforcement Bumper To Frame			
SCREW	76/ 80-90	29.131	4 400 1933
10.260-3 BRACKET, Front Suspension Sway Stabilizer To Frame			
76/	10-80-90	2	535 2703
77/	25-45	2	535 2703
74/	46	2	535 2703

10.260-3a SUPPORT BRACKET, Front Stabilizer Bar

76	80-90.....	2	535 5326
76/	(Left) 10.....	1	535 5596
77/	(Left) 25-45.....	1	535 5596
77/	(Left) 80-90.....	1	535 6920
76/	(Right) 10.....	1	535 5597
77/	(Right) 25-45.....	1	535 5597
77/	(Right) 80-90.....	1	535 6921

10.260-3b SPACER, Front Stabilizer Bar Support Bracket

77/	80-90.....	2	535 6958
-----	------------	---	----------

10.260-3c ATTACHING PARTS, Support Bracket - Spacer Thru Siderail

BOLT, Hexagon.....	77/	80-90.....	17.038	2	G9419089
WASHER, Plain.....	77/	80-90.....		2	400 5702
NUT, Lock.....	77/	80-90.....		2	400 3956

10.260-3d ATTACHING PARTS, Support Bracket To Lower Flange Of Side Rail

BOLT, Hexagon.....	77/	80-90...(Incl. Epoxy Lock).....		4	400 5822
RIVNUT.....	77/	80-90.....		4	400 5823

10.260-4 ATTACHING PARTS, Bracket To Frame

BOLT, Hexagon.....	76/	80-90.....	17.038	4	G180145
BOLT, Hexagon.....	77/	46...(7/16"-14 x 2").....			
		...(Incl. Epoxy Lock).....	10.290	4	400 5824
SCREW, Tapping.....	76/	10...(7/16"-14 x 3/4").....	17.629	4	G274902
SCREW, Tapping.....	77/	25-45...(7/16"-14 x 3/4").....	17.629	4	G274902
SPACER.....	74/	46.....		2	994 880
STUD.....	74/	46.....	17.718	4	G109427
WASHER, Lock.....	74/	46.....	17.820	4	G120383
NUT, Hexagon.....	74/75	46.....	35.250	2	G9418370
NUT, Lock.....	76/	80-90.....		4	400 3956
PUSHNUT.....	76/	80-90 (Front Bolts On Mounting Bracket).....		2	400 4175

10.260-5 ATTACHING PARTS, Front Suspension Sway Stabilizer To Connecting Link

PIN.....	76/	10-80-90.....		2	535 2787
PIN.....	77/	25-45.....		2	535 2787
PIN.....	74/	46.....		2	535 2787
WASHER, Plain.....	74/	46.....	35.250	2	G120389
WASHER, Plain.....	76/	80-90.....	35.250	4	G9415543
WASHER, Lock.....	76/	80-90.....		4	535 0644
WASHER, Lock.....	78/	10-20-40.....		2	535 0644
NUT, Hexagon.....	78/	10-20-40.....	17.406	2	G9421085
NUT, Hexagon.....	74/75	46.....	35.300	2	G9418370
NUT, Hexagon.....	76	46...(Incl. Washer).....	17.406	4	G271501
NUT, Lock.....	76/77	10-46.....	18.190	2	400 4311
NUT, Lock.....	77	25-45.....	18.190	2	400 4311
NUT, Lock.....	76/	80-90.....		4	G9421085
NUT, Lock.....	77/	80-90.....	18.190	4	400 4311

10.260-6 LINK, Front Suspension Sway Stabilizer To Spring Tie Plate Connecting

76/	10.....	2	535 5594
77/	25-45.....	2	535 5594
74/	46.....	2	535 2788
76/	80-90 (Used With Light Springs).....	2	535 5604
76/	80-90 (Used With Heavy Springs).....	2	535 5317

10.260-7 ATTACHING PARTS, Link To Bracket At Spring Tie Plate

WASHER, Plain.....	76/	10.....	35.250	2	G120389
WASHER, Plain.....	77/	25-45.....	35.250	2	G120389
WASHER, Plain.....	74/	46.....	35.250	2	G120389
NUT, Hexagon.....	76/	10.....	35.250	2	G274655
NUT, Hexagon.....	77/	25-45.....	35.250	2	G274655
NUT, Hexagon.....	74/	46.....	35.250	2	G274655

10.260-8 BRACKET, Front Suspension Sway Stabilizer Connecting Link To Spring Tie Plate**LEFT**

76/77	10.....		1	535 2803
78	10-20-40.....		1	535 7941
79	10-20-40.....		1	535 9263
80	10-25-40.....		1	535 9584
77	25-45.....		1	535 2803
74/77	46.....		1	535 2803
76/78	80-90.....	11.088	1	535 5607
79/	80-90.....	11.088	1	535 9011

RIGHT

76/77	10.....		1	535 2804
78	10-20-40.....		1	535 7942
79	10-20-40.....		1	535 9264
80	10-25-40.....		1	535 9585
77	25-45.....		1	535 2804
74/77	46.....		1	535 2804
76/78	80-90.....	11.088	1	535 5608
79/	80-90.....	11.088	1	535 9012

10.260-12 DAMPER, Steering (Shock Type)

74/78	10-20-40.....	(Use 812 9434)		1	535 2687
79/	10-20-40.....			1	812 9434
76/	80-90.....			1	940 105

10.260-12a DAMPER KIT, Steering

76/	80-90.....	236		1	535 1717
-----	------------	-----	-------	---	----------

10.260-13 ATTACHING PARTS, Damper To Tie Rod

BUSHING.....	74/	10-20-40.....	35.300	2	637 936
REINFORCEMENT.....	76/	80-90.....		1	940 122
U-BOLT.....	76/	80-90.....		2	940 121
SPACER, Washer.....	76/	80-90.....	35.250	4	669 842
WASHER, Plain.....	74/	10-20-40.....	35.250	1	G120389
NUT, Lock.....	74/	10-20-40.....	17.416	1	G9413215
NUT, Lock.....	76/	80-90.....	17.416	4	G9416531

10.260-14 ATTACHING PARTS, Damper To Leaf Spring

BUSHING.....	74/	10-20-40.....	35.300	2	637 936
BUSHING.....	76/	80-90.....	35.300	2	637 936
WASHER, Plain.....	74/	10-20-40.....	35.250	1	G120389
WASHER, Plain.....	76/	80-90.....	35.250	1	120 389
NUT, Lock.....	74/	10-20-40.....	17.416	1	G9413215
NUT, Lockout.....	76/	80-90.....	17.416	1	G9413215

10.260-15 BRACKET, Steering Damper To Leaf Spring

74/77	10-20-40 (* 10-17).....		1	535 2450
77/79	10-20-40 (* 10-18).....		1	535 7948
80	10-20-40.....		1	535 9695
76/	80-90.....		1	535 1714

10.260-16 BRACKET, Steering Damper To Tie Rod

74/	10-20-40.....		1	535 3384
76/	80-90.....		1	992 045

10.260-16a ATTACHING PARTS, Damper To Tie Rod Bracket

CUSHION.....	76/	80-90.....		2	802 143
NUT, Hexagon.....	76/	80-90.....	17.406	1	G120369
RETAINER, Cushion...	76/	80-90.....		2	928 174
WASHER, Guide.....	76/	80-90.....		2	802 141

10.260-17 ATTACHING PARTS. Bracket To Tie Rod

U-BOLT	74/	10-20-40	2	940 121
NUT, Lock	74/	10-20-40	4	G9416531

10.280-1 WHEEL, Steering (Refer To Group 3 Illustrations)**BERRY**

76/78	10-20-40 (WSH)	1	322 4525
76/78	10-20-40 (WCHB-With Holes)	1	322 4441
78	WCHB (Export-Less Holes)	1	323 3678

BLACK - LESS SPORT WHEEL (WCHB)

74/78	10-20-40	1	321 7768
79/	10-20-40 (4 Spoke-Hand Grip)	1	325 1091
74/75	10-20-40 (RHD)	1	L00 980 359
74/75	80	1	927 417
76/79	80-90 (2 Spoke-Rubber)	1	535 4517
79/	80-90 (3 Spoke-Textured)	1	536 0131

BLACK - WITH SPORT WHEEL (WCHB)

74/76	(Leather Covered) 10-20-40	1	322 3865
76	(Leather Covered) 90	1	322 3865
79	(Leather Covered)	1	323 4395
80	(Leather Covered)	1	813 0987
74/78	(Vinyl Covered) 10-20-40	1	321 3906
79	(Vinyl Covered) 16-17-18	1	321 3906
76	80-90 (* 10-11)	1	321 3906
77/79	(Soft Feel-Simulated Stitch)	1	322 9146
80	(Soft Feel)	1	325 1327
78/79	EXPORT (Soft Feel-Simulated Stitch)	1	323 3672
78/79	EXPORT (Hard Feel)	1	323 3676

BLUE

74/78	10-20-40 (LHD-WSH)	1	322 4523
74/78	10-20-40 (LHD-WCHB-With Holes)	1	322 4412
79/	10-20-40 (4 Spoke-Hand Grip)	1	325 1092
79	10-20-40 (WCHB-Soft Feel)	1	323 4371
80	10-20-40 (WCHB-Soft Feel)	1	325 1328
79	(Vinyl Covered) 16-17-18 (WCHB)	1	323 3649
79	(Leather Covered) 10-20-40 (WCHB)	1	323 4396
80	(Leather Covered)	1	813 0988
78	WCHB (Export-Less Holes)	1	323 3677
79	10-20-40 (Export-WCHB-Less Holes)	1	323 4317

BUFF

74	10-20-40 (LHD)	1	535 1227
----	----------------------	---	----------

CINNAMON

74	10-20-40 (LHD-WSH)	1	321 7771
----	--------------------------	---	----------

GREEN

74	10-20-40 (LHD-WSH)	1	321 7770
74/76	10-20-40 (LHD-WCHB)	1	322 4413
75/76	10-20-40 (LHD-WSH)	1	535 4085

RUSSET

79	(Leather Covered) 10-20-40 (WCHB)	1	323 4397
80	(Leather Covered)	1	813 0989
79	(Vinyl Covered) 16-17-18 (WCHB)	1	323 3648
79	10-20-40 (WCHB-Soft Feel)	1	323 4372
80	10-20-40 (WCHB-Soft Feel)	1	325 1329
79/	10-20-40 (4 Spoke-Hand Grip)	1	325 1093
79	10-20-40 (Export-WCHB-Less Holes)	1	323 4316

TAN

74/76	(Leathered Covered) 10-20-40 (LHD-WCHB)	1	322 4421
79	(Leather Covered) 10-20-40 (WCHB)	1	323 3669
80	(Leather Covered)	1	813 1752
74/77	(Vinyl Covered) 10-20-40 (LHD-WCHB)	1	322 4414
79	(Vinyl Covered) 16-17-18 (WCHB)	1	323 1518
74/77	10-20-40 (LHD-WSH)	1	322 4524
77/78	10-20-40 (WCHB-With Holes)	1	323 1518
77/78	10-20-40 (WSH-Except Luxury Limited)	1	323 1532
78	15 (Luxury Limited)	1	535 8596
79/	10-20-40 (4 Spoke-Hand Grip)	1	325 1094
80	10-20-40 (WCHB-Soft Feel)	1	325 1330
78/79	WCHB (Export-Less Holes)	1	323 3679

10.280-2 ATTACHING PARTS, Steering Wheel To Steering Gear Shaft

WASHER, Plain	74/79	10-20-40	1	400 3976
WASHER, Plain	76/79	80-90	1	400 3976
NUT, Hexagon	74/75	80	1	639 101
NUT, Lock	74/77	10-20-40	1	400 3977
NUT, Lock	74	10-20-40 (RHD)	1	991 876
NUT, Lock	75	10-20-40 (RHD)	10.066	1 400 5338
NUT, Lock	76/77	80-90	1	400 3977
NUT, Lock	78/79	(M14 x 1.5)	1	420 0300
NUT, Lock	80		1	420 0414

10.280-2a ATTACHING PARTS, Steering Wheel To Skirt

SCREW, Tapping	74/	10-20-40 (LHD)	17.660	3 812 2359
SCREW, Tapping	76/	80-90	17.660	3 812 2359

10.280-3 COVER, Steering Wheel**SPOKE HORN COVER (Incl. Logo Insert, Retainer, Bezel And Horn Blowing Insert)**

76/77	(Berry) 10-20-40	(Ref. Pr. List)	1	535 6623
74/77	(Black) 10-20-40		1	535 2999
74/77	(Blue) 10-20-40		1	535 4087
74	(Buff) 10-20-40		1	535 2997
74	(Cinnamon) 10-20-40	(Use 535 4088)	1	535 4029
74	(Green) 10-20-40		1	535 2998
75/76	(Green) 14-15-16-20-40		1	535 4086
74/77	(Tan) 10-20-40		1	535 4088

SPOKE HORN COVER (Less Retainer, Bezel And Horn Blowing Insert)

78	(Black) 10-20-40		1	812 8658
79/	(Black) 10-20-40 (WSH)		1	812 9565
79/	(Black) 15 (WSH)		1	812 9576
78	(Blue) 10-20-40		1	812 8659
79/	(Blue) 10-20-40 (WSH)		1	812 9566
79/	(Blue) 15 (WSH)		1	812 9577
78	(Berry) 10-20-40		1	812 8660
79/	(Russet) 10-20-40		1	812 9567
79/	(Russet) 15 (WSH)		1	812 9578
77/78	(Tan) 10-20-40 (Except Luxury Limited)		1	812 8657
78	(Tan) 15 (Luxury Limited)	(Use 812 8665)	1	812 9413
79/	(Tan) 10-20-40 (WSH)		1	812 9568
79/	(Tan) 15 (WSH)		1	812 9579

10.280-3a RETAINER ASSEMBLY, Horn Blowing Mechanism

78	10-20-40	3.401	1	323 0672
79/	10-20-40		1	325 1076

10.280-3b INSERT - CENTER LOGO, Cover Assembly

79/	10-20-40		1	325 1071
-----	----------	--	---	----------

10.280-3c ACCENT STRIP, Cover Assembly (Woodgrain)

79/	15		1	325 1073
-----	----	--	---	----------

10.280-4 ATTACHING PARTS, Cover To Wheel

SCREW, Tapping	74/	10-20-40 (LHD)	2	400 3949
WASHER, Plain	74/	10-20-40 (LHD)	2	319 7015

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.290

10.280-5	INSERT, Steering Wheel Cover				
	74/77	LHD... (Incl. Horn Wire)	3.401	1	321 9721
10.280-6	BUSHING, Steering Wheel Cover Snap In				
	74/77	LHD.....	3.401	4	322 1284
10.280-7	BEZEL, Steering Wheel Cover				
	74/77	LHD.....	10.290	1	321 7793
10.280-8	ATTACHING PARTS, Bezel To Insert				
	SCREW, Tapping.....	74/77 LHD.....	10.290	4	400 4643
10.283	SKIRT, Steering Wheel				
	74/	10-20-40 (LHD).....		1	321 8276 NC
	76/	80-90.....		1	321 8276 NC
10.290-1	GEAR ASSEMBLY, Steering				
	74/	LHD (LPS)		1	994 509
	74/	RHD (LPS)		1	940 922
	74	10-20-40 (LHD-WPS)		1	321 9114
	75	10-20-40 (LHD-WPS)		1	535 5000
	76	10-20-45 (WPS)		1	535 5000
	77/78	10-20-45 (WPS)		1	535 6066
	79	10-25-45 (WPS)		1	535 9078
	80	10-20-45 (WPS)		1	536 0093
	76	46 (WPS)		1	535 4970
	77/78	46 (WPS)		1	535 6067
	79	46 (WPS)		1	535 9079
	80	46 (WPS)		1	536 0094
	74/75	80 (LHD-WPS)		1	994 508
	76/79	80-90 (LHD-WPS)		1	994 508
	80	80-90 (WPS)		1	536 0092
10.290-2	ATTACHING PARTS, Steering Gear To Spacer				
	BOLT, Hexagon	74/75 10-20-40	17.038	3	G9425080
	BOLT, Hexagon	74/75 80		3	812 1433
	WASHER, Quad Rib	74/75	11.170	3	400 4809
10.290-2a	ATTACHING PARTS, Steering Gear To Bracket				
	WASHER, Lock	76/ 10-20-40.....		2	400 4809
	BOLT, Hexagon	76/ 10-20-40...(7/16"-14 x 1-1/2")	17.038	2	812 4729
	BOLT, Hexagon	76/ 10-20-40...(7/16"-14 x 1-1/4")	17.038	2	G9424069
10.290-2b	ATTACHING PARTS, Steering Gear Bracket To Frame				
	BOLT, Special	76/ 10-20-40...(7/16"-14 x 4-1/2")		1	400 5612
	BOLT, Special	76/ 10-20-40...(7/16"-14 x 5-1/2")		1	400 5613
	WASHER, Conical.....	76/ 10-20-40.....		2	400 4943
10.290-3	BRACKET, Steering Gear				
	76	10-20-40.....		1	812 7810
	76/	(Upper) 80-90 (LHD).....		1	535 5446
	76	(Lower) 80-90 (LHD)		1	535 4513
	76/	(Upper) 80-90 (RHD)		1	535 5447
	76	(Lower) 80-90 (RHD)		1	535 4946
	77/	(Lower) 80-90 (LHD)		1	812 7536
	77/	80-90 (RHD)		1	812 7535
10.290-3a	GUSSET, Steering Gear Mounting Bracket (Left Hand)				
	76/78	10-20-40.....		1	812 7811
10.290-4	ATTACHING PARTS, Upper Steering Gear Bracket To Gear				
	BOLT, Special	76/ 80-90.....		2	400 4968
	WASHER, Lock	76/ 80-90.....		2	400 5633

10.290

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.290-4a ATTACHING PARTS, Lower Steering Gear Bracket To Gear					
BOLT, Hexagon	76/77	80-90...(7/16"-14 x 1-1/4")	17.038	2	G9424069
		...(Less Epoxy Lock)			
BOLT, Hexagon	77/	80-90...(7/16"-14 x 1-1/4")		2	400 5826
		...(Incl. Epoxy Lock)			
WASHER, Plain	76/	80-90		2	400 5633
10.290-5 TIE PLATE, Steering Gear					
76/		80-90 (LHD-LPS)		1	535 5962
76/79		80-90 (RHD)		1	535 5963
10.290-6 ATTACHING PARTS, Support Bracket To Frame					
BOLT, Hexagon	76/77	80-90...(7/16"-16 x 2")		3	400 5660
		...(Less Epoxy Lock)			
BOLT, Hexagon	77/	80-90...(7/16"-14 x 2")		3	400 5824
		...(Incl. Epoxy Lock)			
WASHER, Plain	76/	80-90		3	400 5633
10.290-7 SPACER, Steering Gear Bracket To Front Crossmember					
76		80-90		1	535 6702
10.290-7a ATTACHING PARTS, Support Bracket And Spacer To Front Crossmember					
BOLT, Hexagon	76/77	80-90...(7/16"-14 x 1-1/8")		2	400 4992
		...(Less Epoxy Lock)			
BOLT, Hexagon	77/	80-90...(7/16"-14 x 1-1/8")		2	400 5825
		...(Incl. Epoxy Lock)			
WASHER, Conical	76/	80-90		2	400 4943
10.292-1 HOUSING, Steering Gear					
74/79		LHD (LPS)	118	1	940 512
80		LPS		1	813 0319
74/79		RHD (LPS)	10.212	1	812 1448
10.294-1 PLUG, Steering Housing Oil Filler					
74/79		RHD (LPS)		1	943 338
10.296-1 COVER, Steering Housing Worm					
74/79		RHD (LPS)		1	940 548
10.296-2 ATTACHING PARTS, Cover To Housing					
BOLT, Hexagon	74/79	RHD (LPS)	17.038	4	G120228
10.298-1 SPACER, Steering Gear Housing Worm Cover					
74/79		RHD (LPS)	10.325	1	940 559
10.298-2 SHIM, Steering Gear Housing Worm Cover					
RHD (LPS)					
74/79		(.002)		2	940 549
74/79		(.003)		1	812 1651
74/79		(.005)		1	940 550
74/79		(.0075)		2	812 1652
74/79		(.010)		5	941 534
10.300-1 COVER, Steering Gear Housing Cross Shaft (Side)					
74/		LHD (LPS)	(Use 448 6846)	1	992 294
74/79		RHD (LPS)		1	940 540
10.300-2 ATTACHING PARTS, Cross Shaft Cover To Housing					
BOLT, Hexagon	74/	LHD (LPS)		3	992 295
BOLT, Hexagon	74/79	RHD (LPS)	17.038	4	G120229

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.326

10.302-1	GASKET, Steering Gear Housing Cross Shaft Cover (Side)			
74/	LHD (LPS)		1	940 522
74/79	RHD (LPS)		1	940 554
10.306-1	SHAFT, Steering Gear Cross			
74/	LHD (LPS)		1	812 0221
74/79	RHD (LPS)		1	941 405
10.306-2	WASHER, Steering Gear Cross Shaft Adjusting Screw Thrust			
74/79	RHD (LPS)		1	940 543
10.306-3	RING, Steering Gear Cross Shaft Adjusting Screw Snap			
74/79	RHD (LPS)		1	940 544
10.307-1	BUSHING, Steering Gear Cross Shaft (In Housing)			
74/	LHD (LPS)	 (Use 320 0496)	1	940 513
74/79	RHD (LPS)		1	940 538
10.307-2	BUSHING, Steering Gear Cross Shaft (In Cover)			
74/79	RHD (LPS)		1	931 710
10.308-1	SCREW, Steering Gear Cross Shaft Adjusting			
74/	LHD (LPS)	 (Use 448 6135)	1	992 296
74/79	RHD (LPS)		1	940 545
10.308-2	NUT, Steering Gear Cross Shaft Adjusting Screw			
74/	LHD (LPS)	 17.410	1	G272123
74/79	RHD (LPS)		1	940 546
10.309-1	SHIM KIT, Steering Gear Cross Shaft Adjusting Screw			
74/	LHD (LPS)		1	940 521
10.310-1	SEAL, Steering Gear Cross Shaft			
74/	LHD (LPS)	 (Use 448 6140)	1	992 293
74/79	RHD (LPS)		1	940 555
10.314-1	SHAFT, Steering Gear (Incl. Worm)			
74/	LHD (LPS)	 163	1	998 504
74/79	RHD (LPS)		1	941 406
10.316-1	GUIDE AND CLAMP KIT, Steering Gear Worm Ball Bearing Return (Incl. Guide, Clamp And Bolts)			
74/	LHD (LPS)	 46	1	320 5677
10.320-1	SEAL, Steering Gear Shaft Oil			
74/	LHD (LPS)	 (Use 448 6141)	1	992 292
74/79	RHD (LPS)	 (Use 320 2618)	1	940 556
10.322-1	BEARING, Steering Gear Worm			
74/	LHD (LPS)	 (Use 320 0491)	2	940 529
74/79	RHD (LPS)	 (Use 812 3258)	2	932 643
10.324-1	CUP, Steering Gear Worm Bearing			
74/	LHD (LPS)	 (Use 320 0492)	2	940 515
74/79	(Upper) RHD (LPS)		1	940 552
74/79	(Lower) RHD (LPS)		1	940 551
10.324-2	RETAINER, Steering Gear Worm Bearing			
74/	LHD (LPS)	 (Use 320 0493)	1	940 532
10.326-1	ADJUSTER, Steering Gear Worm Ball Bearing			
74/	LHD (LPS) ... (Incl. Cup And Bearing)	 (Use 320 6119) 161	1	940 530
10.326-2	NUT, Steering Gear Worm Ball Bearing Adjuster Lock			
74/	LHD (LPS)		1	940 533

10.335 FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.335-1 RACK, Steering Column Housing

10-20-40 - LHD

74/	WFGS (LAW) ... (Less Actuator Rod)	1	812 1437
74/	WHT (WCGS-LAW) ... (Incl. Actuator Rod)	1	448 7755
74/76	WHT (WAW-* 10-7) ... (Less Actuator Rod)	3.131	1 448 7823
74/76	WHT (WAW-* 10-8) ... (Incl. Actuator Rod)	1	812 6162
77/	WAT (WCGS-WAW) ... (Less Actuator Rod)	3.130	1 812 7870

80-90 - LHD

76/	WMT (WFGS-LAW) ... (Less Actuator Rod)	1	812 1437
76/	WHT (WCGS-LAW) ... (Incl. Actuator Rod)	1	448 7755
77/	WAW ... (Less Actuator Rod)	3.130	1 812 7870

10.335-2 SPRING, Steering Column Housing Rack Preload

74/	10-20-40 (LHD-LAW)	1	448 7774
74/76	10-20-40 (LHD-WHT-WAW)	1	448 7831
76/	80-90 (LAW)	1	448 7774
77/	WAW	1	448 7831

10.336-1 HOUSING, Steering Column

74/76	10-20-40 (LHD-WFGS-LAW)	86	1 812 0188
74/	10-20-40 (LHD-WHT-WCGS-LAW)(WAT-LAW)	86	1 448 9046
76	80-90 (WMT)	86	1 812 0188
76/	90 (WHT)(WAT)	86	1 448 9046
77/	WFGS (LAW) ... (Less Retainer And Bearing)	1	812 7845

10.336-1a BEARING ASSEMBLY, Housing Steering Column

77/	WMT (WFGS-LAW)	1	812 7850
-----	----------------------	---	----------

10.336-1b RETAINER, Upper Bearing Housing

77/	WMT (WFGS-LAW)	1	812 7851
-----	----------------------	---	----------

10.336-2 ATTACHING PARTS, Housing To Jacket Tube

SCREW, Machine..... 74/	10-20-40 (LHD-LAW)	4	448 7761
SCREW, Machine..... 76/	80-90	4	448 7761

10.336-3 CUP, Steering Column Housing Thrust

74/	10-20-40 (LHD-WHT-WCGS-LAW)	1	448 7714
76/	90 (WHT-LAW)	1	448 7714

10.337-1 COLUMN ASSEMBLY, Steering (NC)(* 10-28)

10-20-40 - WMT-LAW

74/76	 (Use 535 1193)	1	535 1194
77	(* 10-15)	1	535 1193
77	(* 10-16)	1	535 6758
78	Except Export	1	535 7480
78	Export (* 10-28)	1	535 8853
79/	Except Export	1	535 8673
79	Export (* 10-28)	1	535 9107

80-90 - WMT-LAW

76		1	535 5712
77		1	535 6757
78	Except Export	1	535 7482
78	Export (* 10-28)	1	535 8856
79/	Except Export	1	535 8675
79	Export (* 10-28)	1	535 9108

80-90 - WMT-WAW

77		1	535 7014
78	Except Export	1	535 7483
78	Export (* 10-28)	1	535 8853
79	Except Export	1	535 8676
79	Export (* 10-28)	1	535 9105
80	80-90 (WAW)	1	535 9888

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.337

10-20-40-93 - WHT-LAW

74/75	RHD.....	1	994 650
74/76	 (Use 535 1201)	1	535 1202
77	(* 10-15).....	1	535 1201
77	(* 10-16).....	1	535 6760
78	Except Export.....	1	535 7479
78	Export (* 10-28).....	1	535 8854
79	Except Export.....	1	535 8672
79	Export (* 10-28).....	1	535 9106

10-20-40-93 - WHT-WAW

74/76	 (Use 535 2706)	1	535 2719
77	(* 10-15).....	1	535 2706
77	(* 10-16).....	1	535 6762
78	Except Export.....	1	535 7481
78	Export (* 10-28).....	1	535 8852
79	Except Export.....	1	535 8674
79	Export (* 10-28).....	1	535 9104

10-20-40-93 (WAT-LAW)

80		1	535 9884
----	-------	---	----------

10-20-40-93 (WAT-WAW)

80		1	535 9886
----	-------	---	----------

10.337-2 BOLT, Steering Column Locking

74/	10-20-40-90 (LHD-WHT-WCGS-LAW).....	1	448 7897
74/	LHD (WAW).....	1	448 7819

10.337-2a LOCK SHAFT, Steering Column

78/79	WAW (Export).....	1	325 1125
-------	-------------------	---	----------

10.337-2b LOCK BOLT, Steering Column

78/79	LAW (Export).....	1	813 0676
78/79	WAW (Export).....	1	325 1124

10.337-3 GATE, Steering Column Locking

74/79	10-20-40 (LHD-WHT-WCGS-LAW).....	1	812 2434
76/79	90 (WHT-LAW).....	1	812 2434

10.337-4 ATTACHING PARTS, Gate To Housing

SCREW, Machine..... 74/	10-20-40 (LHD-WHT-WCGS-LAW).....	2	448 7801
SCREW, Machine..... 76/	90 (WHT-LAW).....	2	448 7801

10.337-5 WASHER, Steering Column Locking Bolt Spring Thrust

74/	10-20-40 (LHD-LAW).....	1	448 7777
76/	80-90 (LAW).....	1	448 7777

10.337-6 INHIBITOR, Steering Column Lock

74/	10-20-40 (LHD-WFGS-LAW).....	1	812 0182
76/	80-90 (WMT-LAW).....	1	812 0182
77/	80-93 (WMT-WAW).....	1	812 8154

10.337-7 SPRING, Steering Column Lock Inhibitor

74/	10-20-40 (LHD-WFGS-LAW).....	1	812 0185
76/	80-90 (WMT-LAW).....	1	812 0185
77/	80-93 (WMT-WAW).....	1	812 8156

10.337-8 WASHER, Steering Column Lock Inhibitor Wave

74/	10-20-40 (LHD-WFGS-LAW).....	1	812 0186
76/	80-90 (WMT-LAW).....	1	812 0186

10.337-9 SPRING, Steering Column Locking Bolt

74/	LHD (WAW).....	1	448 7830
-----	----------------	---	----------

10.337

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.337-10 SCREW, Steering Column Locking Bolt Spring To Actuator

74/ LHD (WAW)..... 1 448 7827

10.338-1 TUBE, Steering Gear Jacket

74/76 10-20-40 (LHD-WMT-WFGS-LAW)..... 1 812 0187
 77 10-20-40 (WMT-LAW)..... 1 812 7848
 78 10-20-40 (WMT-LAW)..... 1 812 8891
 79/ 10-20-40 (WMT-LAW)..... 1 813 0176
 74/75 10-20-40 (RHD)..... 1 947 044
 74/76 10-20-40 (LHD-WHT-WCGS-LAW)..... 1 448 7715
 74/76 10-20-40 (LHD-WHT-WAW)..... 1 448 7837
 77 10-20-40-93 (WHT-WCGS-LAW)..... 1 812 7832
 77 10-20-40-93 (WHT-WCGS-WAW)..... 1 812 7861
 78 10-20-40-93 (WHT-WCGS-LAW)..... 1 812 8893
 78 10-20-40-93 (WHT-WCGS-WAW)..... 1 812 8895
 79/ 10-20-40-93 (WHT-LAW)(WAT-LAW)..... 1 813 0175
 79/ 10-20-40-93 (WHT-WAW)(WAT-WAW)..... 1 813 0178
 74/75 80...(Incl. Bracket)..... 1 999 720
 76 80-90 (WMT)..... 1 812 5285
 77 80-90 (WMT-LAW)..... 1 812 7843
 77 80-93 (WMT-WAW)..... 1 812 8150
 78 80-90 (WMT-LAW)..... (Use 813 0177) 1 812 8883
 78 80-90 (WMT-WAW)..... (Use 813 0179) 1 812 8886
 79/ 80-90 (WMT-LAW)..... 1 813 0177
 79/ 80-90 (WMT-WAW)..... 1 813 0179
 76 90 (WHT)..... 1 448 7715

10.338-2 ATTACHING PARTS, Tube To Instrument Panel

SCREW, Machine 74/75 80..... 23.006 4 400 3794

10.338-2a ATTACHING PARTS, Tube To Instrument Panel And Brake Pedal Support

BOLT, Hexagon 74/75 80..... 17.038 2 G180073
 WASHER, Lock 74/75 80..... 17.820 2 G120214

10.338-3 BEZEL, Steering Gear Jacket Tube To Instrument Panel

10-20-40 - LHD

74 (Upper-Black)..... 1 989 688 NC
 74 (Lower-Black)..... 1 989 691 NC
 74 (Upper-Buff)..... 1 989 687
 74 (Lower-Buff)..... (Ord. 989 691) 1 989 690
 74 (Upper-Green)..... 1 989 689
 74 (Lower-Green)..... 1 989 692
 75/ (Upper)..... 1 989 688 NC
 75/ (Lower)..... 1 989 691 NC

10-20-40 - RHD

74/75 (Chrome)..... 22.056 1 971 358

80-90

76/..... 1 535 4777

10.338-5 ATTACHING PARTS, Upper Bezel To Lower Bezel

SCREW, Tapping..... 74/75 10-20-40 (LHD)..... 4.131 2 973 467
 SCREW, Tapping..... 76/ 10-20-40..... 2 812 0055

10.338-5a ATTACHING PARTS, Lower Bezel To Instrument Panel

SCREW, Tapping..... 74/75 10-20-40 (LHD)..... 4.131 4 973 467
 SCREW, Tapping..... 76/ 10-20-40..... 2 812 0055
 NUT, Spring..... 74/ 10-20-40 (LHD)..... 17.426 2 G445446

10.338-5b ATTACHING PARTS, Bezel To Instrument Panel

SCREW, Tapping..... 76/ 80-90..... 17.654 4 G163622

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.340

10.338-6 JACKET, Steering Gear Jacket Tube					
74/	10-20-40 (LHD-WFGS-LAW)		1	812	0181
74/79	10-20-40 (RHD)		1	933	883
76/	80-90 (WMT-LAW)		1	812	0181
10.338-7 ATTACHING PARTS, Steering Gear Jacket Tube Jacket To Housing					
SCREW, Tapping.....	74/ 10-20-40 (LHD-WFGS-LAW)	3.321	3	448	7763
SCREW, Tapping.....	76 80-90 (WMT)		3	448	7763
SCREW, Tapping.....	76/ WFGS (LAW)		3	448	8301
10.338-8 SHROUD, Steering Column Bowl					
74/	10-20-40 (LHD-WFGS-LAW)		1	812	0184
74/	10-20-40-93 (LHD-WHT-WCGS-LAW)	11.339	1	321	1169
76/	80-90 (WMT-LAW)		1	812	0184
77/	80-90 (WMT-WAW)		1	812	8155
10.339-1 BRACKET, Steering Gear Jacket Tube To Instrument Panel					
74/	10-20-40 (LHD)		1	535	1229
74/75	10-20-40 (RHD)		1	931	882
76/	80-90 (WMT)		1	319	5280
76/	90 (WHT)		1	535	1229
10.339-1a ADAPTER, Instrument Panel Bracket To Steering Column					
76/	80-90 (WMT)		1	535	5544
10.339-2 ATTACHING PARTS, Adapter To Instrument Panel					
BOLT, Hexagon	76/ 80-90... (3/8"-16 x 3/4")	17.029	2	G273773	
SCREW, Machine	74/75 10-20-40 (RHD)	17.629	2	G423564	
10.339-2a ATTACHING PARTS, Bracket To Steering Gear Jacket Tube					
SCREW, Machine	74/77 10-20-40 (LHD)		4	400	3915
SCREW, Machine.....	76/77 80-90		4	400	3915
SCREW, Hexagon	78/ (M8-1.25 x 12)	10.339	4	G11502764	
10.339-2b ATTACHING PARTS, Bracket To Brake Pedal Support					
BOLT, Hexagon	74/ 10-20-40 (LHD)	17.038	2	G9418778	
WASHER, Plain.....	74/ 10-20-40 (LHD)	17.814	2	G120388	
WASHER, Conical.....	74 10-20-40 (LHD-Six)	10.455	1	400	4711
10.339-2c ATTACHING PARTS, Bracket To Adapter Or Instrument Panel					
BOLT, Hexagon	76/ 80-90... (3/8"-16 x 1-1/2")	17.038	4	G9418778	
WASHER, Plain.....	76/ 80-90	17.814	4	G120388	NA
10.339-3 INSULATOR, Steering Gear Jacket Tube To Instrument Panel Bracket					
74/75	10-20-40 (RHD)		2	931	843
10.339-5 SEAL, Steering Gear Jacket Tube To Instrument Panel					
74/75	20-40 (RHD)		1	986	544
10.339-6 BRACKET, Steering Gear Jacket Tube To Instrument Panel Seat					
74/75	14-20-40 (RHD)	10.338	2	961	109
10.339-7 ATTACHING PARTS, Bracket And Seal To Instrument Panel					
SCREW, Tapping.....	74/75 14-20-40 (RHD)	17.654	2	G162406	
10.340-1 ROD, Steering Gear Jacket Tube Support					
74/	10-20-40 (LHD)		1	545	0270
74/75	14-20-40 (RHD)		1	959	662
10.340-2 ATTACHING PARTS, Rod To Cowl Top Inner Panel And/Or Instrument Panel					
SCREW, Machine.....	74 10-20-40 (LHD)	17.629	2	G273573	
SCREW, Taptite	75/ 10-20-40 (LHD)	10.350	2	400	5063
BOLT, Hexagon	74/75 14-20-40 (RHD)	17.038	1	G180016	
WASHER, Lock	74/75 (1/4" I.D.)... 14-20-40 (RHD)	15.270	1	961	067
WASHER, Lock	74/75 (5/16" I.D.)... 14-20-40 (RHD)	12.035	1	961	127
NUT, Hexagon.....	74/75 14-20-40 (RHD)	3.082	2	961	128

10.344 FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.344-1 BEARING, Steering Gear Jacket Tube Upper				
74/75	10-20-40 (RHD)	1	933	847
74/75	80	1	801	422
10.344-2 SEAT, Steering Gear Jacket Tube Upper Bearing Spring				
74/75	80	1	639	192
10.344-3 SLEEVE, Steering Gear Jacket Tube Upper Bearing				
74/75	10-20-40 (RHD)	1	924	569
10.344-4 SPRING, Steering Gear Jacket Tube Upper Bearing				
74/	10-20-40 (LHD-LAW)	1	448	7765
74/75	10-20-40 (RHD)	1	935	514
74/75	80	1	639	191
76/	80-90	1	448	7765
10.344-5 RING, Steering Gear Jacket Tube Upper Bearing Retaining				
74/	10-20-40 (LHD-LAW)	1	320	8377
76/	80-90 (LAW)	1	320	8377
10.344-6 WASHER, Steering Gear Jacket Tube Upper Bearing Thrust				
74/76	10-20-40 (LHD-LAW)	1	320	8008
76	90 (WHT)	1	320	8008
77/	LAW	1	320	8008
10.346-1 BUSHING, Steering Gear Jacket Tube Lower				
74/	10-20-40 (LHD)	1	448	7696
74/75	10-20-40 (RHD)	1	936	361
74/75	80	1	999	769
76/	80-90	1	448	7696
10.346-2 ATTACHING PARTS, Bushing To Tube				
BOLT, Hexagon				
74/75	10-20-40 (RHD)	2	933	853
10.346-3 WASHER, Steering Gear Jacket Tube Lower Bushing To U-Joint				
74/75	80	10.717	1	946 452
10.347 RETAINER, Steering Gear Jacket Tube Lower Bearing				
74/	10-20-40 (LHD)	1	448	7743
76/	80-90	1	448	7743
10.348 CLIP, Steering Gear Jacket Tube Lower Bushing To Jacket Tube				
74/	10-20-40	1	448	7739
76/	80-90	1	448	7739
10.350-1 PLATE, Steering Gear Jacket Tube To Toeboard Support				
74/	(Upper) 10-20-40 (LHD)	1	319	6870
76/	(Upper) 80-90	1	319	6870
74/	(Lower) 10-20-40 (LHD)	1	319	6897
76/	(Lower) 80-90	1	319	6897
74/75	80	1	999	559
10.350-2 ATTACHING PARTS, Support Plate To Toeboard				
SCREW, Tapping				
74/	10-20-40 (LHD)	23.073	4	400 4520
74/75	80	17.660	2	G167065
76/	80-90	23.073	4	400 4520
SCREW, Machine				
74/75	10-20-40 (RHD)	17.626	2	G423563
SPACER				
74/75	10-20-40 (RHD)	10.350	2	948 042
10.350-3 ATTACHING PARTS, Lower Toeboard Support Plate To Upper Plate				
SCREW, Machine				
74/	10-20-40 (LHD)	17.629	2	G273573
76/	80-90	17.629	2	G273573

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.360

10.350-4 SEAL, Steering Gear Jacket Tube To Toeboard			
74/	10-20-40 (LHD)		1 319 6896
74/75	10-20-40 (RHD)		1 948 216
76/	80-90		1 319 6896
10.350-5 CLAMP, Steering Gear Jacket Tube To Toeboard Plate			
74/75	80		1 535 1247
10.350-6 ATTACHING PARTS, Clamp To Plate			
SCREW, Machine	74 80	17.626	2 G446906
SCREW, Machine	75 80	17.646	2 G9409104
10.350-7 GROMMET, Steering Gear Jacket Tube To Toeboard (Rubber)			
74/75	80		1 545 0034
10.350-8 ATTACHING PARTS, Grommet To Toeboard			
SCREW, Tapping	74/75 80	17.660	3 G161895
SCREW, Tapping	76 ..(Incl. Washer)	12.351	3 400 4644
WASHER, Plain	74/75 80	17.814	3 G446161
10.354-1 SPACER, Steering Gear To Frame			
LHD			
74	10-20-40		1 998 859
75	10-20-40		1 812 5070
74/75	80		1 998 238
RHD			
74	10-20-40		1 998 860
75	10-20-40		1 812 5071
74/75	80		1 535 0572
10.354-2 ATTACHING PARTS, Steering Gear Spacer To Frame			
BOLT, Hexagon	74 10-20-40...(7/16"-20 x 3-3/4")		4 812 1245
BOLT, Hexagon	74 10-20-40...(7/16"-14 x 3-1/4")	17.038	4 G9430756
BOLT, Hexagon	75 10-20-40...(7/16"-14 x 3-1/2")	17.038	4 G9421590
BOLT, Hexagon	74/75 80...(3/8"-16 x 7/8")	17.038	2 G9420942
BOLT, Hexagon	74 80...(7/16"-20 x 4-1/2")	17.038	2 G9430787
WASHER, Conical	75/ 10-20-40		4 400 4943
WASHER, Plain	74 10-20-40 (Between Bolt Head And Spacer)	18.190	4 944 842
WASHER, Quad Rib	74/75 80...(7/16")	11.170	AR 400 4809
WASHER, Quad Rib	74/75 80...(3/8")	9.369	2 400 4807
NUT, Hexagon	74 10-20-40...(7/16"-20)	17.406	AR G9417028
NUT, Hexagon	74/75 80	17.406	2 G456859
NUT, Lock	74 20-40	17.416	1 G9413215
10.354-2a SHIM, Steering Gear Spacer To Frame			
74/75	80		AR 535 0805
10.360-1 POWER STEERING KIT (For 1978 Thru 1980, Refer To Accessories Catalog And Price List F-95080)			
SIX - LHD (LPS)			
74	10-20-40		1 812 4387
75	10-20-40 (Ord. Comp. Parts)		1 812 5950
76	10-20-40		1 812 6910
77	10-20-45	15.290	1 812 7954
74	80 (* 10-1) (Ord. Comp. Parts)		1 812 2768
75	80 (* 10-1)		1 812 5739
76	80-90 (* 10-9)	15.290	1 812 6907
77	80-90 (* 10-9 And * 10-25)	15.290	1 812 8172

V8 - LHD (LPS)

74	10-20-40.....	1	812 4408
75	10-20-40 (* 10-12).....	1	812 5953
76	10-20-45..... (Ord. Comp. Parts)	1	812 6915
77	10-20-45.....	15.290	1 812 7955
76	46..... (Ord. Comp. Parts)	1	812 6916
77	46.....	15.290	1 812 7956
74	80 (* 10-1).....	1	812 1800
75	80 (* 10-1).....	1	812 5731
76	80-90.....	15.290	1 812 6913
77	80-90 (* 10-25).....	15.290	1 812 8173

10.430-1 PUMP ASSEMBLY, Power Steering

74	SIX (LHD).....	52	1 321 6094
74	V8 (LHD).....	52	1 321 3992
75/79	10-20-40 (LHD).....	1	535 4550
80	10-20-40.....	1	323 7193
75	80 (LHD).....	1	322 4469
76	80-90 (LHD).....	1	322 4469
77/79	80-90.....	1	535 7090
80	80-90.....	1	325 1017

10.430-1a ATTACHING PARTS, Pump To Rear Bracket

WASHER.....	80	(Inboard) 80-90 (Four).....	1.067	1	400 1829
NUT AND WASHER.....	80	(Inboard) 80-90 (Four).....		1	420 0081
NUT AND WASHER.....	80	(Outboard) 80-90 (Four).....		1	420 0081

10.430-2 STUD, Power Steering Pump Mounting

74	SIX (LHD).....	2	320 9675
74	V8 (LHD)....(1-15/16" Long).....	1	812 0528
74	V8 (LHD)....(2-7/32" Long).....	1	812 0529
75/79	LHD....(1-15/16" Long).....	1	812 0528
80	(Short).....	1	813 2474
75/79	LHD....(2-7/32" Long).....	1	812 0529
80	(Long).....	1	813 2475

10.430-3 SEAL KIT, Power Steering Pump

74/	LHD.....	57	1 320 9678
-----	----------	----	------------

10.430-4 BODY, Power Steering Pump

74	SIX (LHD).....	53	1 448 7899
74	V8 (LHD).....	1	812 0527
75/79	LHD.....	1	812 0527
80		1	813 2473

10.430-5 SEAL, Power Steering Pump Mounting Stud

74/77	LHD.....	2	320 9672
-------	----------	---	----------

10.431-1 BRACKET, Power Steering Pump Pivot

75	(Front) SIX (LHD).....	1	322 6240
75	(Rear) SIX (LHD).....	1	322 4699
76/78	(Front) SIX (LEEP).....	1	322 6240
76/	(Rear) SIX.....	1	322 7416
76/78	(Front) 80-90 (Six-WEEP).....	1	322 7414
79	(Front) 80-90 (Export-Six).....	1	322 6240
79	(Front) SIX (WEEP).....	1	322 7414
80	(Front) SIX.....	1	323 7233
74/79	V8 (LHD).....	1	321 5106
80	80-90 (V8).....	1	323 0990

10.431-1a BRACKET, Power Steering Pump Adjusting

80	80-90 (Four).....	1	325 0724
----	-------------------	---	----------

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.440

10.431-1b ATTACHING PARTS, Adjusting Bracket To Pump					
BOLT, Hexagon	80	80-90 (Four)	1.004	2	G11500829
BOLT, Hexagon	80	80-90 (Four)	1.067	1	G11501940
SPACER, Bolt	80	80-90 (Four)		1	325 1283
10.431-1c ATTACHING PARTS, Adjusting Bracket To Front Bracket					
BOLT, Hexagon	80	80-90 (Four)	1.004	1	G11500829
WASHER, Plain	80	80-90 (Four)	4.557	1	420 0093
10.431-2 ATTACHING PARTS, Front Pivot Bracket To Water Pump					
SCREW, Machine	75/	SIX (LHD)...(3/8"-16 x 1")	17.629	AR	G274195
10.431-3 ATTACHING PARTS, Front Pivot Bracket To Pump					
SCREW, Machine	75/	SIX (LHD)...(3/8"-16 x 1")	17.629	1	G274195
10.431-4 ATTACHING PARTS, Front Pivot Bracket To Rear Pivot Bracket					
BOLT, Hexagon	75/	SIX (LHD)	17.038	1	G189295
SPACER	75	SIX (LHD)		1	322 4461
WASHER, Lock	75/	SIX (LHD)	10.260	1	400 3803
10.431-5 ATTACHING PARTS, Rear Pivot Bracket To Pump					
SCREW, Machine	75/	SIX (LHD)...(3/8"-16 x 3/4")	17.629	1	G273773 NA
10.431-6 ATTACHING PARTS, Rear Pivot Bracket To Cylinder Block					
SCREW, Machine	75/	SIX (LHD)...(3/8"-16 x 3/4")	17.629	2	G273773 NA
10.431-7 ATTACHING PARTS, Rear Pivot Bracket To Intake Manifold					
SCREW, Machine	75/	SIX (LHD)	17.629	AR	G273773 NA
STUD, Bolt	75	SIX (LHD)		1	322 4461
WASHER, Lock	75	SIX (LHD)	10.260	1	400 3803
10.431-8 ATTACHING PARTS, Stud Power Steering Pump To Rear Mounting Bracket					
NUT AND WASHER	80	80-90 (Six)		2	420 0081
10.432-1 STUD, Power Steering Pump Pivot					
74/79	V8 (LHD)			1	321 5103
80	V8			1	420 0080
10.435-1 VANE KIT, Power Steering Pump Rotor					
74/75	LHD	(Use 812 7366)	56	1	320 9680
10.435-2 ROTOR - VANE - RING KIT, Power Steering Pump					
74/75	LHD	55		1	320 9677
76/	LHD			1	812 7366
10.435-3 ROTOR, Power Steering Pump					
74/77	LHD	(Use 812 7366)		1	320 9667
10.435-4 RING, Power Steering Pump					
74/75	LHD			1	320 9665
76/	LHD			1	812 7365
10.435-5 PIN, Power Steering Pump Ring To Body Dowel					
74/	LHD			2	320 9660
10.440-1 SHAFT KIT, Power Steering Pump Drive (Incl. Ring)					
74	LHD	54		1	448 8423
75/	LHD			1	812 5241
10.440-2 SEAL, Power Steering Pump Drive Shaft Oil					
74/	LHD			1	448 8330
10.440-3 RING, Power Steering Pump Drive Shaft Retainer Snap					
74/	LHD			1	448 6725

10.440

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.440-4 KEY, Power Steering Pump Drive Shaft (For Pump Pulley)					
74	LHD		1	320	9659
10.445-1 VALVE, Power Steering Pump Control					
74	SIX (LHD)		1	448	8026
74	V8 (LHD)		1	812	0531
75/	10-20-40 (LHD)		1	812	5923
75/76	80-90 (LHD)		1	812	0531
77/79	80-90		1	448	8026
80	80-90		1	812	0531
10.445-2 SPRING, Power Steering Pump Flow Control Valve					
74/	LHD		1	320	9673
10.445-3 PLATE, Power Steering Pump Pressure					
74/	LHD		1	320	9662
10.445-4 PLATE, Power Steering Pump End					
74/	LHD		1	320	9661
10.445-5 RING, Power Steering Pump End Plate Retaining					
74/	LHD		1	320	9664
10.445-6 SEAL, Power Steering Pump End And Pressure Plate ("O" Ring)					
74/	LHD	 (Ord. 320 9678)	2	320	9668
10.445-7 PLATE, Power Steering Pump Thrust					
74/	LHD		1	812	1412
10.445-8 SPRING, Power Steering Pump Pressure Plate					
74/	LHD		1	320	9674
10.448-1 BRACKET, Power Steering Pump Mounting					
80	(Front) 80-90 (Four)		1	325	0723
80	(Rear) 80-90 (Four)		1	325	0725
74	10-20-40 (LHD-Six)		1	321	6089
74	80 (LHD-Six)		1	999	768
75/79	(Front) SIX (LHD)		1	322	4700
75/79	(Rear) SIX (LHD)		1	322	4701
80	(Front) SIX		1	323	4993
80	(Rear) SIX		1	323	4994
74/75	V8 (LHD)		1	321	4732
76/79	(Front) V8		1	322	7679
80	(Front) V8		1	323	4995
80	(Front) 80-90 (V8)		1	323	4995
80	(Rear) 80-90 (V8)		1	323	4992
10.448-1a ATTACHING PARTS, Rear Bracket To Cylinder Head					
BOLT, Hexagon	80	80-90 (Four)	1.004	2	G11500829
WASHER, Plain	80	80-90 (Four)	4.557	2	420 0093
10.448-2 ATTACHING PARTS, Power Steering Pump Bracket To Pump					
BOLT, Hexagon	74	10-20-40 (LHD-Six)	17.038	2	G9428638
BOLT, Hexagon	74	80 (LHD-Six)	17.038	1	G180120
WASHER, Plain	74	80 (LHD-Six)	17.814	2	G120394
WASHER, Lock	74	10-20-40 (LHD-Six)	10.260	2	400 3803
WASHER, Lock	74	80 (LHD-Six)	17.820	2	G120382
NUT, Hexagon	74	80 (LHD-Six)	17.406	1	G120377
10.448-2a ATTACHING PARTS, Rear Bracket To Block					
BOLT, Hexagon	80	80-90 (Four)	1.004	1	G11500829
WASHER, Lock	80	80-90 (Four)	1.067	1	G11500207

10.448-3 ATTACHING PARTS, Power Steering Pump Bracket To Adjusting Plate					
BOLT, Hexagon	74	10-20-40 (LHD-Six)	17.038	1	G109443
BOLT, Hexagon	74/	V8 (LHD)	17.038	2	G180137
SCREW, Machine	76/	SIX	17.629	2	G274195
WASHER, Plain	76/	80-90...(13/32" x 7/8")	17.814	2	400 1104
WASHER, Lock	74	10-20-40 (LHD-Six)	10.260	2	400 3803
WASHER, Lock	74/	V8 (LHD)	10.260	2	400 3803
NUT, Hexagon	74	10-20-40 (LHD-Six)	17.406	1	G120377
10.448-3a ATTACHING PARTS, Front Bracket To Front Of Head					
NUT, Hexagon	80	80-90 (Four)	7.130	1	G11500824
BOLT, Hexagon	80	80-90 (Four)	1.004	1	G11500829
WASHER, Plain	80	80-90 (Four)	4.557	1	420 0093
10.448-3b ATTACHING PARTS, Front Bracket To Rear Bracket					
BOLT, Hexagon	80	80-90 (Four)	1.004	1	G11500829
WASHER, Lock	80	80-90 (Four)	1.067	1	G11500207
NUT, Hexagon	80	80-90 (Four)	7.130	1	G11500424
10.448-4 ATTACHING PARTS, Power Steering Pump Bracket To Water Pump Stud					
WASHER, Lock	74	10-20-40 (LHD-Six)	10.260	2	400 3803
NUT, Lock	74/	V8 (LHD)	1.010	1	400 3869
10.448-5 ATTACHING PARTS, Bracket To Cylinder Block					
BOLT, Hexagon	74	80 (LHD-Six)	17.038	3	G180123
WASHER, Plain	74	80 (LHD-Six)	17.814	1	400 1161
WASHER, Lock	74	80 (LHD-Six)	17.820	3	G120382
10.448-6 ATTACHING PARTS, Front Mounting Bracket To Pump					
BOLT, Hexagon	75/79	SIX (LHD)	17.038	1	G274195
BOLT, Hexagon	80	SIX		2	G11502606
10.448-7 ATTACHING PARTS, Rear Mounting Bracket To Pump					
NUT, Lock	75/	SIX (LHD)	10.260	2	400 3909
10.448-8 ATTACHING PARTS, Front Bracket Mounting To Cylinder Head					
BOLT, Hexagon	77/	V8...(3/8"-16 x 1-1/8")		2	400 4010
BOLT, Hexagon	77/	V8...(3/8"-16 x 1-3/8")	17.038	1	G180125
WASHER, Lock	77/	V8	10.260	1	400 3803
10.449-1 BRACKET, Power Steering Pump Bracket To Cylinder Head Support					
74	10-20-40 (LHD-Six)			1	319 1003
10.449-2 ATTACHING PARTS, Power Steering Pump Support Bracket To Cylinder Head					
BOLT, Hexagon	74	10-20-40 (LHD-LAC)		2	G180123
		...(3/8"-16 x 1-1/8")	17.038	2	G180129
BOLT, Hexagon	74	10-20-40 (LHD-LAC)		2	319 0790
		...(3/8"-16 x 1-7/8")	10.114	2	400 3808
SPACER	74	10-20-40 (LHD-Six-WAC)	10.260	2	400 3803
WASHER, Plain	74	10-20-40 (LHD-Six)	10.260	2	400 3803
WASHER, Lock	74	10-20-40 (LHD-Six)	10.260	2	400 3803
10.449-1a BRACE, Power Steering Pump Mounting Bracket To Block					
80	FOUR			1	325 0729
10.449-2a ATTACHING PARTS, Brace To Front Of Bracket					
BOLT, Hexagon	80	80-90 (Four)	1.004	1	G11500829
WASHER, Lock	80	80-90 (Four)	1.067	1	G11500207
10.449-3a ATTACHING PARTS, Brace To Front And Adjusting Brackets					
BOLT, Hexagon	80	80-90 (Four)		1	G11500830
NUT, Hexagon	80	80-90 (Four)		1	G11500424
WASHER, Lock	80	80-90 (Four)		1	G11500207

10.455

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.455-1 PULLEY, Power Steering Pump

FOUR

80	80-90 (LAC).....	1	323 7473
----	------------------	---	----------

SIX - LHD

74	10-20-40 (LAC) ... (5-7/8" Dia.)	1	322 4319
74	10-20-40 (WAC-Cast Iron) ... (Incl. Air Pump Pulley)	1	322 6704
74	10-20-40 (LAC) ... (4-47/64" Dia.)	1	321 8655
74	10-20-40 (WAC-Spun Steel) ... (Incl. Air Pump Pulley)	1	321 8653
74	80	1	999 835
75	(4-11/16" Dia.)	1	322 4467
75/78	LEEP	1	322 6937
76/	WEEP	1	322 6940
79	(Export)(Canada)	1	322 6937

V8 - LHD

74		1	321 5101
75		1	322 5448
76		1	322 7674
77/79	(One 6-1/4" And One 5-5/8" Groove)	1	322 9861
77/	(Two 5-5/8" Grooves)	1	322 7674

10.455-2 ATTACHING PARTS, Power Steering Pump Pulley To Pump

NUT, Hexagon.....	74	LHD.....	1	400 0221
-------------------	----	----------	---	----------

10.455-3 KEY, Power Steering Pump Pulley

74	LHD.....	10.440	1	320 9659
----	----------	--------	---	----------

10.455-4 BELT, Power Steering Pump

FOUR

80	80-90.....	1	G9433652
----	------------	---	----------

SIX - LHD

74	10-20-40 (LAC) ... (43" Circumference)	2.016	1	322 3006
74	10-20-40 (LAC) ... (46-1/2" Circumference)	2.016	1	318 5860
74	10-20-40 (WAC)		1	319 1030
74	80	2.016	1	999 032
75	(45-1/2" Circumference)		1	322 4452
75/78	LEEP ... (46-1/2" Circumference)		1	322 6936
76/	WEEP	4.615	1	322 6936

V8 - LHD

74/75	LAC-LHDC	4.623	1	943 251
74/75	LAC-WHDC		1	999 950
74	10-20-40 (WAC)	13.425	1	535 1639
75	10-20-40 (WAC) ... (49-3/4" Circumference)	13.425	1	321 6615
75	10-20-40 (WAC) ... (52-3/4" Circumference)		1	999 950
76/	(54" Circumference)	4.612	1	322 7692
77/	(53-1/4" Circumference)	4.615	1	322 9862

10.455-5 PLATE, Power Steering Pump Pulley Belt Adjusting

74	10-20-40 (LHD-Six)		1	321 6093
74	80 (LHD-Six)		1	999 823
74/75	V8 (LHD)		1	321 4710
76/79	V8 (LHD)		1	322 7680

10.455-6 ATTACHING PARTS, Power Steering Pump Adjusting Plate To Pump

BOLT, Hexagon	74	10-20-40 (LHD-Six)	17.038	1	G9428638
BOLT, Hexagon	74	80 (LHD-Six)	17.460	1	G120123
BOLT, Hexagon	76/	80-90 (Six)	17.038	1	G189295
BOLT, Hexagon	76/	V8	17.038	1	G180125
WASHER, Plain	74	10-20-40 (LHD-Six)	10.260	2	400 3808
WASHER, Plain	74	80 (LHD-Six) ... (3/64" Thick)	17.814	1	400 1104
WASHER, Plain	74	80 (LHD-Six) ... (1/16" Thick)	17.814	2	G120394
WASHER, Lock	74	10-20-40 (LHD-Six)	10.260	2	400 3803
WASHER, Lock	74	80 (LHD-Six)	17.820	2	G120382
WASHER, Lock	76/		10.260	1	400 3803
WASHER, Conical	74/	V8 (LHD)		2	400 4711
NUT, Hexagon	74	10-20-40 (LHD-Six)	17.406	2	G120377
NUT, Hexagon	74	80 (LHD-Six)	17.406	1	G120377
NUT, Hexagon	74/	V8 (LHD) ... (3/8"-16)	17.406	2	G120377

10.455-7 ATTACHING PARTS, Power Steering Pump Adjusting Plate To Cylinder Block

STUD	74	10-20-40 (LHD-Six)		1	321 9182
SPACER	74	10-20-40 (LHD-Six)		1	317 4400
WASHER, Bite	74	10-20-40 (LHD-Six)	10.003	1	310 8995
WASHER, Lock	74	10-20-40 (LHD-Six)	10.260	1	400 3803

10.455-8 ATTACHING PARTS, Power Steering Pump Adjusting Plate To Cylinder Head

BOLT, Hexagon	74	80 (LHD-Six)	17.820	2	G180122
BOLT, Hexagon	74/79	V8 (LHD)	10.260	3	400 4010
WASHER, Lock	74	80 (LHD-Six)	17.820	2	G120382

10.465-1 RESERVOIR, Power Steering Pump Oil

74	SIX (LHD)		1	812 1207
74	V8 (LHD)		1	812 0530
75	LHD		1	812 0530
76/			1	812 7369

10.465-2 CAP, Power Steering Pump Oil Reservoir Filler

74/	LHD	(Use 812 8467)	1	448 8304
-----	-----------	----------------------	---	----------

10.465-3 SEAL, Power Steering Pump Oil Reservoir To Pump ("O" Ring)

74/	LHD		1	320 9669
-----	-----------	-------	---	----------

10.470-1 HOSE, Power Steering Pump To Steering Gear Pressure**FOUR**

80	80-90		1	537 0020
----	-------------	-------	---	----------

SIX - LHD

74	10-20-40		1	535 1641
75	10-20-40	(Use 535 5526)	1	535 0853
76/78	10-20-40		1	535 5891
79	10-20-40		1	535 9283
80	10-20-40		1	537 0024
74	80		1	535 0862
75	80		1	535 4381
76	80-90	(Use 535 7191)	1	535 5854
77/79	80-90		1	535 7191
80	80-90		1	537 0018

V8 - LHD

74/75	10-20-40	(Use 535 5526)	1	535 0853
76/79	10-20-40		1	535 5718
80	10-20-40		1	537 0022
74	80		1	535 1955
75	80		1	535 4381
76	80-90		1	535 5530
77/79	80-90		1	535 7188
80	80-90		1	537 0016

10.470

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.470-2 HOSE, Power Steering Pump Reservoir To Steering Gear Return

FOUR

80	80-90.....	1	537 0021
----	------------	---	----------

SIX - LHD

74	10-20-40.....	1	535 1642
75	10-20-40.....	1	999 081
76/79	10-20-40.....	1	535 5893
80	10-20-40.....	1	537 0025
74	80.....	1	535 0832
75	80.....	1	535 1954
76	80-90.....	1	535 5846
77/79	80-90.....	1	535 7190
80	80-90.....	1	537 0019

V8 - LHD

74/75	10-20-40.....	1	999 081
76/79	10-20-40.....	1	535 5767
80	10-20-40.....	1	537 0023
74/75	80.....	1	535 1954
76	80-90..... (Use 535 7189)	1	535 5531
77/79	80-90.....	1	535 7189
80	80-90.....	1	537 0017

10.470-3 STRAP, Power Steering Pump Hoses To Brake Line (Polyethelene)

74	10-20-40 (LHD-Six).....	3.196	1	318 1008
74	80 (LHD-Six).....	3.165	2	926 878
75/	SIX (LHD).....	3.165	2	322 3227

10.470-3a STRAP, Power Steering Pump Hoses To Air Pump Hoses (Polyethelene)

75/		3.165	AR	322 3227
74	80 (LHD-V8).....	3.196	1	318 1008

10.470-4 CLAMP, Power Steering Return Hose To Reservoir

74/	LHD.....	10.460	1	315 5600
-----	----------	--------	---	----------

10.470-5 CLIP, Power Steering Pump Hoses

74/75	80 (LHD-V8).....	4.142	1	998 604
76	80-90 (Six).....	4.142	1	998 604

10.470-6 CLIP, Power Steering Pump Hoses To Frame

74/79	80-90 (LHD)....(3/8").....	17.134	2	G127879
80	80-90....(1/4").....		1	G120528
76/	V8.....		1	400 4892

10.470-7 ATTACHING PARTS, Power Steering Pump Hoses Clip To Frame

SCREW, Tapping.....	74/75	80 (LHD).....	17.672	1	G172455
SCREW, Tapping.....	76/	80-90.....		1	400 4081
BOLT, Hexagon.....	76/	V8.....		1	812 2378
BOLT, Hexagon.....	80	80-90.....		1	G11503877
SPACER.....	76/77	80-90.....		1	941 011

10.470-8 FITTING, Power Steering Pump Pressure Hose (In Pump)

74/79	LHD.....		1	448 8897
80			1	813 2472

10.470-9 SEAL, Power Steering Pump Pressure Hose Union Inner ("O" Ring)

74/	LHD.....		1	320 9671
-----	----------	-------	---	----------

10.470-10 SEAL, Power Steering Pump Pressure Hose Union Outer ("O" Ring)

74/79	LHD..... (Ord. 320 9678)		1	320 9670
-------	--------------------------	-------	---	----------

10.470-11 GROMMET, Power Steering Pump Pressure And Return Hose (To Prevent Rubbing Against Splash Apron)

75/	80-90 (LHD).....		1	535 4540
-----	------------------	-------	---	----------

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.555

10.520-1	HOUSING ASSEMBLY, Power Steering Gear			
74	LHD.....	115	1	448 7153
75	LHD.....	115	1	812 5034
76/79	LHD (Except 46).....	115	1	812 5034
76	46 (LHD).....	115	1	812 7055
77/79	46.....		1	812 8161
80	Except 46.....		1	813 2537
80	46.....		1	813 2539
10.524-1	CHECK VALVE KIT, Power Steering Gear Pressure (Incl. Seat, Poppet And Spring)			
74/79	LHD.....		1	320 4825
80			1	813 2538
10.525-1	SEAT, Power Steering Gear Pressure Hose Connector (In Housing)			
74/79	LHD.....		1	320 4808
10.527-1	SEAT, Power Steering Gear Return Hose Connector (In Housing)			
74/76	LHD.....		1	320 4807
77/79	10-20-40.....		1	812 7964
77/79	80-90.....		1	320 4807
10.528-1	"O" RING SEAL, Hoses To Gear Pump			
80			AR	325 1183
10.530-1	POPPET, Power Steering Gear Pressure Check Valve (In Housing)			
74/79	LHD.....		1	320 4809
10.532-1	SPRING, Power Steering Gear Pressure Check Valve Poppet (In Housing)			
74/79	LHD.....		1	320 4810
10.535-1	PLUG, Power Steering Gear Housing End			
74/75	LHD.....		1	320 4820
76/	LHD (Except 46).....		1	320 4820
76/	46 (LHD).....		1	812 7058
10.537-1	"O" RING, Power Steering Gear Housing End Plug Seal			
74/75	LHD..... (Use 812 5037)		1	812 0011
76/	LHD (Except 46)..... (Use 812 5037)		1	812 0011
76/	46 (LHD).....		1	812 7060
10.537-2	SEAL KIT, Power Steering Gear Housing End Plug			
75/	10-20-40 (LHD).....		1	812 5037
75	80 (LHD).....	10.550	1	448 9073
76/	80-90.....		1	812 5037
10.540-1	RING, Power Steering Gear Housing End Plug Retaining			
74/	LHD.....	10.550	1	940 703
10.545-1	SEAL AND RING KIT, Power Steering Gear			
74/78	LHD.....	175	1	448 9074
10.550-1	"O" RING KIT, Power Steering Gear			
74	LHD.....		1	448 9073
10.555-1	RACK - PISTON - NUT ASSEMBLY, Power Steering Gear (Incl. Worm, Balls, Guide, Clamp, Piston Ring And "O" Ring)			
74	10-20-40 (LHD)..... (Use 812 5036)		1	448 7886
75	10-20-40 (LHD).....		1	812 5036
76/	10-20-45 (LHD).....		1	812 5036
76/	46 (LHD).....		1	812 7056
74/75	80 (LHD).....		1	940 706
76/79	80-90 (LHD).....		1	940 706
80	80-90.....		1	812 5471

10.565 FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.565-1 BEARING KIT, Power Steering Gear Lower Thrust (Incl. Races)			
74	LHD	141	1 320 4826
75/77	LHD...(Incl. Upper Thrust Bearing) (Ord. 812 7644, 812 7645)	102	1 812 4148
78/			1 812 7645
10.572-1 BALL KIT, Power Steering Gear-Piston (Incl. Black And Silver Balls)			
74/	LHD	144	1 320 4836
10.575-1 GUIDE, Power Steering Gear Worm Ball Bearing Return			
74/	10-20-40 (LHD)		2 448 7887
74/	80-90 (LHD)		2 940 707
10.577-1 CLAMP, Power Steering Gear Worm Ball Bearing Return Guide			
74/	LHD		1 320 4812
10.577-2 ATTACHING PARTS, Power Steering Return Guide Clamp To Rack-Piston			
SCREW, Machine	74/ LHD		2 320 7057
10.580-1 RING, Power Steering Gear Rack-Piston (Teflon)			
74/79	LHD		1 320 4814
10.582-1 "O" RING, Power Steering Gear Rack-Piston Backup Seal			
74/79	LHD		1 320 4815
10.582-2 SEAL KIT, Power Steering Gear Rack - Piston			
75/	LHD		1 812 5039
10.585-1 PLUG, Power Steering Gear Rack-Piston End			
74/76	LHD		1 320 4821
77/			1 812 7965
10.590-1 SHAFT ASSEMBLY, Power Steering Gear Pitman			
74	10-20-40 (LHD)	(Use 812 2958)	1 812 2487
75/	10-20-40 (LHD)		1 812 2958
74/75	80 (LHD)		1 812 2819
76/	80-90 (LHD)		1 812 2819
10.595-1 BEARING, Power Steering Gear Pitman Shaft Needle			
74/	LHD		1 448 7154
10.600-1 NUT, Power Steering Gear Pitman Shaft Adjusting Screw			
74/	LHD		1 320 4818
10.605-1 SEAL KIT, Power Steering Gear Pitman Shaft			
74/	LHD	123	1 320 4830
10.610-1 COVER, Power Steering Gear Pitman Shaft (Side)(Incl. Bushing)			
74	LHD		1 812 2965
75/	10-20-40 (LHD)	62	1 812 5033
75	80 (LHD)		1 812 2965
76/79	80-90		1 812 2965
80	80-90		1 812 5033
10.610-2 ATTACHING PARTS, Power Steering Gear Pitman Shaft Cover To Housing			
BOLT, Hexagon	74/ LHD		4 812 4191
10.612-1 GASKET, Power Steering Gear Pitman Shaft Cover (Side)			
74	("O" Ring) LHD		1 812 2966
74/	(Rubber With Steel Insert) LHD (Use 812 5038)		1 812 4147
10.612-2 SEAL KIT, Power Steering Gear Pitman Shaft Cover (Side)			
75/	10-20-40 (LHD)...(Incl. (1) 812 4147 And (4) 812 4191)		1 812 5038

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.700

10.615-1 VALVE ASSEMBLY, Power Steering Gear			
74/75	10-20-40 (LHD).....	(Use 812 5973)	1 448 9365
76	10-20-45 (LHD).....	(Use 812 5973)	1 448 9365
77/78	10-20-45 (LHD).....		1 812 8162
79	10-25-45.....	(Use 813 0409)	1 813 0145
80	10-25-45.....		1 813 0409
76	46 (LHD).....	(Use 812 5973)	1 812 7057
77/78	46 (LHD).....		1 812 7967
79/	46.....		1 813 0144
74/75	80 (LHD).....		1 812 1746
76/	80-90 (LHD).....		1 812 1746
10.625-1 RING AND SEAL KIT, Power Steering Gear Valve (Incl. Piston Rings, Teflon Rings And Backup Rings)			
74/	LHD.....	148	1 320 4833
10.626-1 "O" RING, Power Steering Gear Valve Spool To Valve Body			
75/			1 812 6250
10.630-1 BEARING KIT, Power Steering Gear Upper Thrust (Incl. Rates, Retainers And Spacer)			
74	LHD.....	149	1 320 4832
75/77	LHD...(Incl. Lower Thrust Bearing)	10.565	1 812 4148
78			1 812 7644
79	10-20-40.....		1 813 0152
79	80-90.....		1 812 7644
10.635-1 ADJUSTER ASSEMBLY, Power Steering Gear Upper Thrust Bearing (Incl. Bearings, Races, Seals, Retainer And Spacer)			
74	LHD.....	139	1 320 4802
75/76	10-20-40 (LHD).....		1 812 5035
77/78			1 812 5035
79/	10-20-40.....		1 813 0155
75	80 (LHD).....	(Use 812 5035) 139	1 812 6105
76	80-90 (LHD).....	(Use 812 5035) 139	1 812 6105
79/	80-90.....		1 812 5035
10.637-1 NUT, Power Steering Gear Upper Thrust Bearing Adjuster Lock			
74/	LHD.....	(Use 812 8427)	1 320 4817
10.640-1 BEARING, Power Steering Gear Upper Thrust Bearing Adjuster Needle			
74/78	LHD.....		1 320 4803
79/	10-20-40.....		1 813 0142
79/	80-90.....		1 320 4803
10.645-1 SEAL KIT, Power Steering Gear Upper Thrust Bearing Adjuster			
74/78	LHD.....	142	1 320 4824
79/	10-20-40.....		1 813 0157 x
79/	80-90.....	142	1 320 4824
10.646 "O" RING, Power Steering Gear Upper Thrust Bearing Adjuster Seal			
74/	LHD.....		1 812 6247
10.700-1 SHAFT, Steering Gear Upper			
74/76	10-20-40 (LHD-LAW) ... (Less U-Joint)		1 448 7727
74/77	LHD (WAW).....		1 448 9058
74/75	10-20-40 (RHD) ... (Incl. Coupling).....		1 994 609
77	10-20-40 (WMT-WFGS-LAW).....		1 812 8149
78/	10-20-40 (WMT-WFGS-LAW).....		1 812 8892
77	10-20-40-90 (WHT-WCGS-LAW).....		1 448 7727
78/	10-20-40-93 (WHT-WCGS-LAW).....		1 812 8894
78/	10-20-40-90 (WHT-WCGS-WAW)(WAT-WAW)		1 812 8888
74/75	80 ... (Incl. Horn Wire And Contact Ring)		1 999 719
76	80-90 (WMT).....		1 812 5286
77	80-90 (WMT-LAW).....		1 812 8109
78/	80-90 (WMT-LAW).....		1 812 8884
76	90 (WHT).....		1 448 7727

10.700 FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.700-2 SHAFT, Steering Gear Lower			
74	10-20-40 (LHD-LPS)	(Use 535 5027)	1 535 1217
76/	10-20-40 (LPS)		1 535 5027
74	10-20-40 (LHD-WPS-* 10-2)		1 535 1757
74	10-20-40 (LHD-WPS-* 10-3)		1 535 2657
75	10-20-40 (LHD-WPS)...(Less U-Joint)		1 535 2657
75/	10-20-40 (LHD-WPS)...(Incl. U-Joint)		1 535 5766
74/75	10-20-40 (RHD)		1 994 610
75	14-15-20-40 (LHD-LPS-* 10-5)	(Use 535 5027)	1 535 1217
75	14-15-20-40 (LHD-LPS-* 10-6)		1 535 5027
75	16-17 (LHD-LPS)	(Use 535 5022)	1 535 1217
74/75	80 (LPS)		1 999 634
74/75	80 (LHD-WPS)		1 999 635
76/	80-90 (LPS)		1 535 3135
76/	80-90 (WPS)		1 535 4934
10.700-2a SEAL, Steering Shaft Lower Coupling (Boot)			
76/	10-20-40 (LPS)		1 813 2676
76/	80-90		1 813 2676
10.700-3 SHAFT, Steering Gear Intermediate			
74/	10-20-40-93 (WHT-WCGS-WAW)(WAT-WAW)	10.835	1 448 7840
77	80-90 (WMT-WAW)		1 812 8151
78/	80-90 (WMT-WAW)		1 812 8887
10.700-4 FITTING, Steering Gear Lower Shaft U-Joint Lubrication (In Slip Yoke)			
74	(Straight) 10-20-40 (LHD-WPS-* 10-2) ... (1/4"-28 x 1/2")	17.290	1 G271291
10.700-5 FITTING, Steering Gear Lower Shaft U-Joint Lubrication (In Clamp Yoke)			
74	(45 Deg.) 10-20-40 (LHD-WPS-* 10-2) ... (1/4"-28 x 13/16")	17.290	1 G9411030
10.702-1 COVER, Steering Gear Shaft Lock			
74/76	10-20-40 (LHD-LAW)	(Use 322 8743)	1 319 5591
74/76	10-20-40 (LHD-WHT-WAW)		1 319 6587
76	80-90		1 319 5591
77/			1 322 8743
10.702-2 SCREW, Steering Gear Shaft Lock Cover			
74/75	10-20-40 (LHD-WHT-WAW)		3 400 3928
76/	10-20-40		2 400 3949
10.702-3 RETAINER, Steering Gear Shaft Lock Cover Screw			
74/75	10-20-40 (LHD-WHT-WAW)		3 319 5589
10.703-1 LOCK, Steering Gear Shaft			
74/76	10-20-40 (LHD-LAW)	(Use 812 7830)	1 448 7740
74/76	10-20-40 (LHD-WHT-WAW)	(Use 812 7858)	1 448 7856
76	80-90		1 448 7740
77/	LAW		1 812 7831
77/	WAW		1 812 7874
10.703-2 RING, Steering Gear Shaft Lock Retaining			
74/	10-20-40 (LHD)	10.344	1 320 8377
76/	80-90	10.344	1 320 8377
10.710-1 FLANGE, Steering Gear To Shaft			
74	10-20-40 (LHD-WPS)	(Use 812 8405)	1 812 1413
75/76	10-20-40 (LHD-WPS)	(Use 812 8405)	1 812 1745
77	10-20-40 (WPS)	(Use 812 7966)	1 812 7868
78/	10-20-40 (WPS)		1 812 7966
74/75	10-20-40 (RHD)	(Use 318 6669)	1 945 694

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.725

10.710-2 ATTACHING PARTS, Flange To Upper Flange On Shaft				
BOLT, Hexagon	74	10-20-40...(5/16"-24)	1	448 6976
BOLT, Hexagon	74	10-20-40...(3/8"-24)	1	448 6977
BOLT, Hexagon	75/	10-20-40...(3/8"-24)	1	320 8200
BOLT, Hexagon	75/	10-20-40...(5/16"-24)	1	320 5848
WASHER, Lock	76/	10-20-40	17.820	1 G120382
WASHER, Lock	75/	10-20-40...(5/16")	17.820	1 G120214
WASHER, Lock	75	10-20-40...(3/8")	10.260	1 400 3803
NUT, Hexagon	74/	10-20-40...(3/8"-24)	17.412	1 400 1800
NUT, Hexagon	74/	10-20-40...(5/16"-24)	17.406	1 G451399
NUT, Hexagon	76/	10-20-40	17.406	1 G120369
10.710-3 ATTACHING PARTS, Flange Clamp To Stub Shaft On Gear				
BOLT, Twelve Point	74/	10-20-40 (LHD-WPS)	1	400 3934
SCREW, Cap	74/75	10-20-40 (RHD)	17.634	1 G9406787
WASHER, Lock	74/75	10-20-40 (RHD)	17.820	1 G120382
10.717-1 U-JOINT, Steering Gear Upper Shaft To Lower Shaft Or Lower Shaft To Intermediate Shaft				
74	10-20-40 (LHD)	(Use 535 5028)	1	535 1241
75	10-20-40 (LHD-WPS)	(Use 535 5028)	1	535 1241
76/	10-20-40 (LPS)		1	535 5028
75	14-15-20-40 (LHD-LPS-* 10-5)	(Use 535 5028)	1	535 1241
75	14-15-20-40 (LHD-LPS-* 10-6)		1	535 5028
75	16-17 (LHD-LPS)	(Use 535 5028)	1	535 1241
74/75	80		1	990 192
10.717-2 ATTACHING PARTS, U-Joint To Upper Shaft				
BOLT, Hexagon	74/	10-20-40 (LHD)	17.038	1 G181670
BOLT, Hexagon	74/75	80	17.038	1 G181670
BOLT, Hexagon	76/	80-90 (WMT)...(7/16"-20 x 2")	1	994 602
WASHER, Lock	74/	10-20-40 (LHD)	11.170	1 400 4809
WASHER, Lock	74/75	80	11.170	1 400 4809
NUT, Hexagon	76/	LPS	1	400 5653
10.717-3 ATTACHING PARTS, U-Joint To Lower Shaft Or Intermediate Shaft				
BOLT, Hexagon	74/	10-20-40 (LHD)	17.038	1 G181670
BOLT, Hexagon	74/75	80	17.038	1 G181670
WASHER, Lock	74/	10-20-40 (LHD)	1	400 4809
WASHER, Lock	74/75	80	11.170	1 400 4809
10.717-4 ATTACHING PARTS, U-Joint To Clamp And Steering Column				
BOLT, Hexagon	75/	10-20-40	1	994 602
NUT	75	10-20-40	17.416	1 G9413215
NUT, Lock	76/	10-20-40	1	400 5653
10.718-1 YOKE, Steering Gear Upper Shaft To Lower Shaft Or Lower Shaft To Intermediate Shaft				
74	10-20-40 (LHD-WPS-* 10-2 And * 10-4)		1	812 3239
10.718-2 ATTACHING PARTS, Yoke To Upper Shaft Or Lower Shaft				
BOLT, Hexagon	74	10-20-40 (LHD-WPS-* 10-2)	1	535 0582
10.719-1 SPIDER ASSEMBLY, Steering Gear Lower Shaft Or Intermediate Shaft				
74	10-20-40 (LHD-WPS-* 10-2)		1	812 3301
10.720-1 COUPLING, Steering Gear Upper Shaft To Lower Shaft				
74/75	10-20-40 (RHD)	(Use 812 2186)	1	998 488
10.722-1 BEARING, Steering Gear Upper Shaft To Lower Shaft Coupling				
74/75	10-20-40 (RHD)		10.745	2 940 586
10.725-1 SEAL KIT, Steering Gear Upper Shaft To Lower Shaft Coupling (Incl. Washer And Spring)				
74/75	10-20-40 (RHD)		1	940 583

10.727 FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.727-1	SPRING, Steering Gear Upper Shaft To Lower Or Intermediate Shaft Coupling		
74/75	10-20-40 (RHD)	10.747	1 940 587
10.730-1	WASHER, Steering Gear Upper Shaft To Lower Or Intermediate Shaft Coupling Bearing Retainer		
74/75	10-20-40 (RHD)	10.746	1 940 590
10.733-1	RING, Steering Gear Upper Shaft To Lower Or Intermediate Shaft Coupling Seal Retainer		
74/75	10-20-40 (RHD)	10.750	1 940 584
10.740	COUPLING, Steering Gear Lower Shaft To Steering Gear		
74/	10-20-40 (LHD-LPS)		1 812 1299
74/	80-90 (LPS)		1 812 1299
74/	80-90 (LHD-WPS)		1 998 710
10.742-1	CLAMP, Steering Gear To Lower Shaft Coupling		
74/	10-20-40 (LHD-LPS)		1 994 520
74/	80-90 (LPS)		1 994 520
74/	80-90 (LHD-WPS)		1 994 605
10.742-2	ATTACHING PARTS, Clamp To Coupling (Intermediate Shaft To Column)		
BOLT, Hexagon	74/ LHD (LPS)	10.705	1 319 4110
BOLT, Hexagon	74/ 80-90 (LHD-WPS)		1 994 602
NUT, Hexagon	74/75 LHD (LPS)	17.416	1 G9413215
NUT, Hexagon	74/ 80-90 (LHD-WPS)	17.416	1 G9411783
NUT, Lock	76/ 80-90 (LPS)		1 400 5653
10.742-2a	ATTACHING PARTS, Power Steering Intermediate Shaft To Steering Gear		
BOLT, Hexagon	77/ 80-90 (WPS)....(3/8"-24 x 1-3/4")		1 994 603
NUT, Hexagon	77/ 80-90 (WPS)	17.416	1 G9411783
10.745	BEARING, Steering Gear Lower Shaft To Steering Gear Coupling		
74/	10-20-40 (LHD-LPS)	10.722	2 320 4875
74/	80-90	10.722	2 320 4875
10.747	SPRING, Steering Gear Lower Shaft To Steering Gear Coupling		
74/	10-20-40 (LHD-LPS)	10.727	1 320 4878
74/	80-90	10.727	1 320 4878
10.750	RING, Steering Gear Lower Shaft To Steering Gear Coupling Seal Retainer		
74/	10-20-40 (LHD-LPS)	10.733	1 448 6679
74/	80-90	10.733	1 448 6679
10.765	BEARING, Steering Gear Shaft Lower (Ball)		
74/	10-20-40 (LHD)		1 448 6713
76/	80-90		1 448 6713
10.768-1	CLAMP, Steering Gear Shaft Lower Bearing		
74/75	10-20-40 (RHD)	10.316	1 946 459
10.768-2	ATTACHING PARTS, Clamp To Shaft		
SCREW, Cap	74/75 10-20-40 (RHD)	17.634	1 G9406788
WASHER, Special	74/75 10-20-40 (RHD)	10.717	1 946 452
NUT, Hexagon	74/75 10-20-40 (RHD)	17.412	2 G271193
10.770	SPRING, Steering Gear Shaft Lower Bearing (LAW)		
74/	10-20-40 (LHD-WHT-WCGS-LAW)		1 448 9045
76/	90 (WHT-LAW)		1 448 9045
10.771	WASHER, Steering Gear Shaft Lower Bearing Spring Thrust		
74/	10-20-40 (LHD-WHT-WCGS-LAW)		1 448 7779
76/	90 (WHT-LAW)		1 448 7779

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.839

10.801-1	LEVER, Steering Wheel Release 74/ LHD (WAW).....	1	318 6523
10.802	SHIELD, Steering Wheel Release Lever 74/ LHD (WAW).....	1	448 7869
10.805-1	COVER, Steering Wheel Actuator And Directional Signal Switch 74/ WAT (WAW-WCGS)..... 77/ WAW (WMT-WFGS).....	1 1	448 7850 448 7875
10.805-2	ATTACHING PARTS, Cover To Actuator SCREW, Cross Recess.. 74/ LHD (WAW).....	3	448 7866
10.825-1	RACE, Steering Gear Shaft Upper Bearing Inner 74/ LHD (WAW).....	1	448 7862
10.826-1	SEAT, Steering Gear Shaft Upper Bearing Inner Race 74/ LHD (WAW).....	1	812 2484
10.827-1	BEARING, Steering Gear Shaft Upper (Roller) 74/ LHD (WAW).....	1	320 8362
10.827-2	BEARING, Steering Gear Shaft Lower (Roller) 74/ LHD (WAW).....	1	320 8362
10.830-1	ACTUATOR, Steering Wheel (Housing) 74/76 10-20-40 (LHD-WHT-WAW-* 10-7) 74/76 10-20-40 (LHD-WHT-WAW-* 10-8) ... (Incl. Actuator Rod) 77/ 10-20-40 (WHT-WCGS-WAW) 77/ 80-90 (WMT-WAW-Except Export) 78/79 80-90 (Export-WMT-WAW) 77/ 90 (WHT-WAW-Except Export) 78/79 90 (Export-WHT-WAW).....	1 1 1 1 1 1 1	812 2714 812 6158 812 8158 812 8159 813 0675 812 8158 813 0719
10.830-2	BUMPER, Steering Wheel Actuator 77/ WHT (WCGS-WAW) 74/76 10-20-40 (LHD-WHT-WAW)	1 1	448 7820 448 7820
10.830-3	SHAFT, Steering Wheel Actuator Drive 74/ LHD (WAW).....	1	448 8213
10.830-4	RING, Steering Wheel Actuator Drive Shaft Retaining 74/ LHD (WAW).....	1	448 7824
10.830-5	BUMPER, Steering Wheel Actuator Down 74/ LHD (WAW).....	10.834 1	812 2715
10.832-1	PIN, Steering Wheel Actuator Pivot 74/ LHD (WAW).....	1	448 8418
10.837-1	SPRING, Steering Gear Upper Shaft To Lower Shaft Preload 74/ LHD (WAW).....	1	448 7843
10.839-1	SPHERE KIT, Steering Gear Shaft Centering 74/76 10-20-40 (LHD-WHT-WAW).....	1	448 8465
10.839-1a	SPHERE, Steering Gear Shaft Centering 77/ WAW.....	1	812 7864

10.843

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.843-1	SHOE, Steering Wheel Actuator Lock	74/ (Left) LHD (WAW)	1	812 2716
		74/ (Right) LHD (WAW)	1	448 7828
10.845-1	PIN, Steering Wheel Actuator Lock Shoe Retaining	74/ LHD (WAW)	1	448 7822
10.846	SPRING, Steering Wheel Actuator Shoe Release Lever	74/ LHD (WAW)	1	320 8047
10.847-1	SPRING, Steering Wheel Actuator Lock Shoe	74/ LHD (WAW)	2	448 7832
10.848	LEVER, Steering Wheel Actuator Shoe Release	74/ LHD (WAW)	1	448 7821
10.849-1	PIN, Steering Wheel Actuator Shoe Release Lever	74/ LHD (WAW)	1	320 8043
10.850-1	SUPPORT, Steering Wheel And Directional Signal Actuator	74/79 WHT (WCGS-WAW)	1	812 3428
		80 WAT (WAW)	1	448 7845
		77/79 80-90 (WMT-WAW)	1	812 8152
		80 80-90 (WMT-WAW)	1	813 2480
10.850-2	ATTACHING PARTS, Support To Gear Shift Tube Lock Plate	SCREW, Machine..... 74/ (WHT-WCGS-WAW)(WAT-WAW)	4	448 7867
		SCREW, Machine..... 77/ WMT (WAW)	4	448 7867
10.852-1	PLATE, Steering Column Shroud Retaining	77/ 80-90 (WMT-WAW)	1	812 8153
10.855-1	SPRING, Steering Wheel Tilt	74/ LHD (WAW)	1	812 0252
10.856	RETAINER, Steering Wheel Tilt Spring	74/ LHD (WAW)	1	320 8143
10.857	GUIDE, Steering Wheel Tilt Spring	74/ LHD (WAW)	1	448 7854