



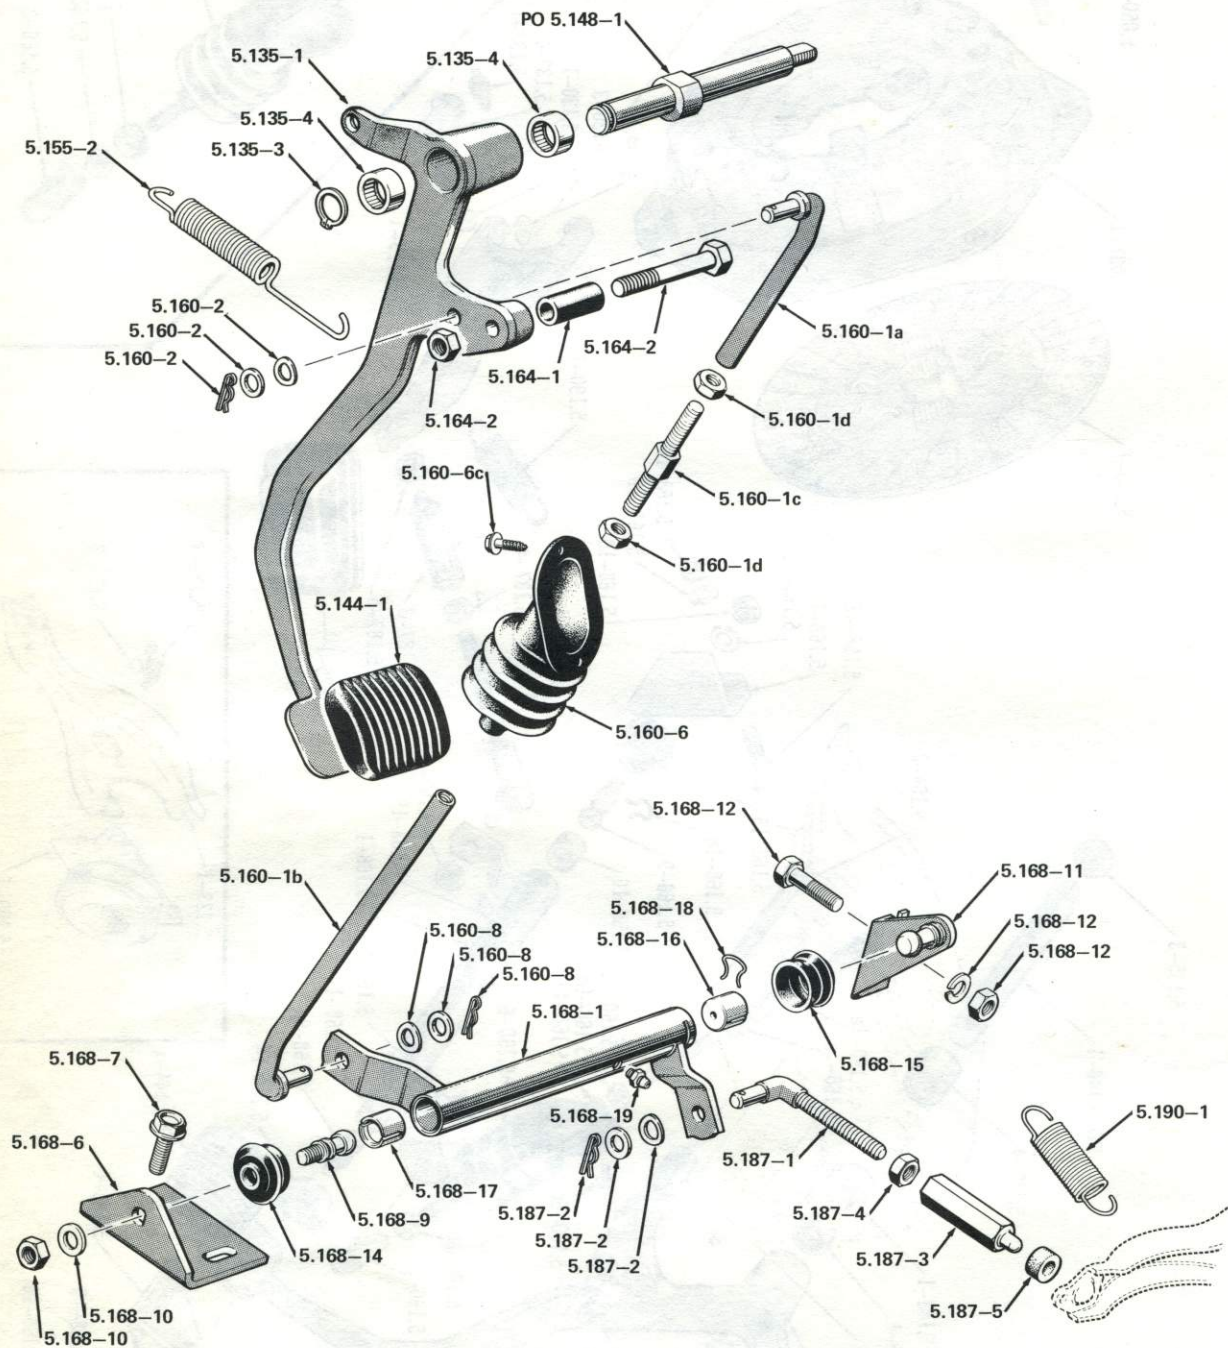





J-6288

CLUTCH PEDAL AND LINKAGE . . . 10-20-40 (1979 - Type 2, 1980)

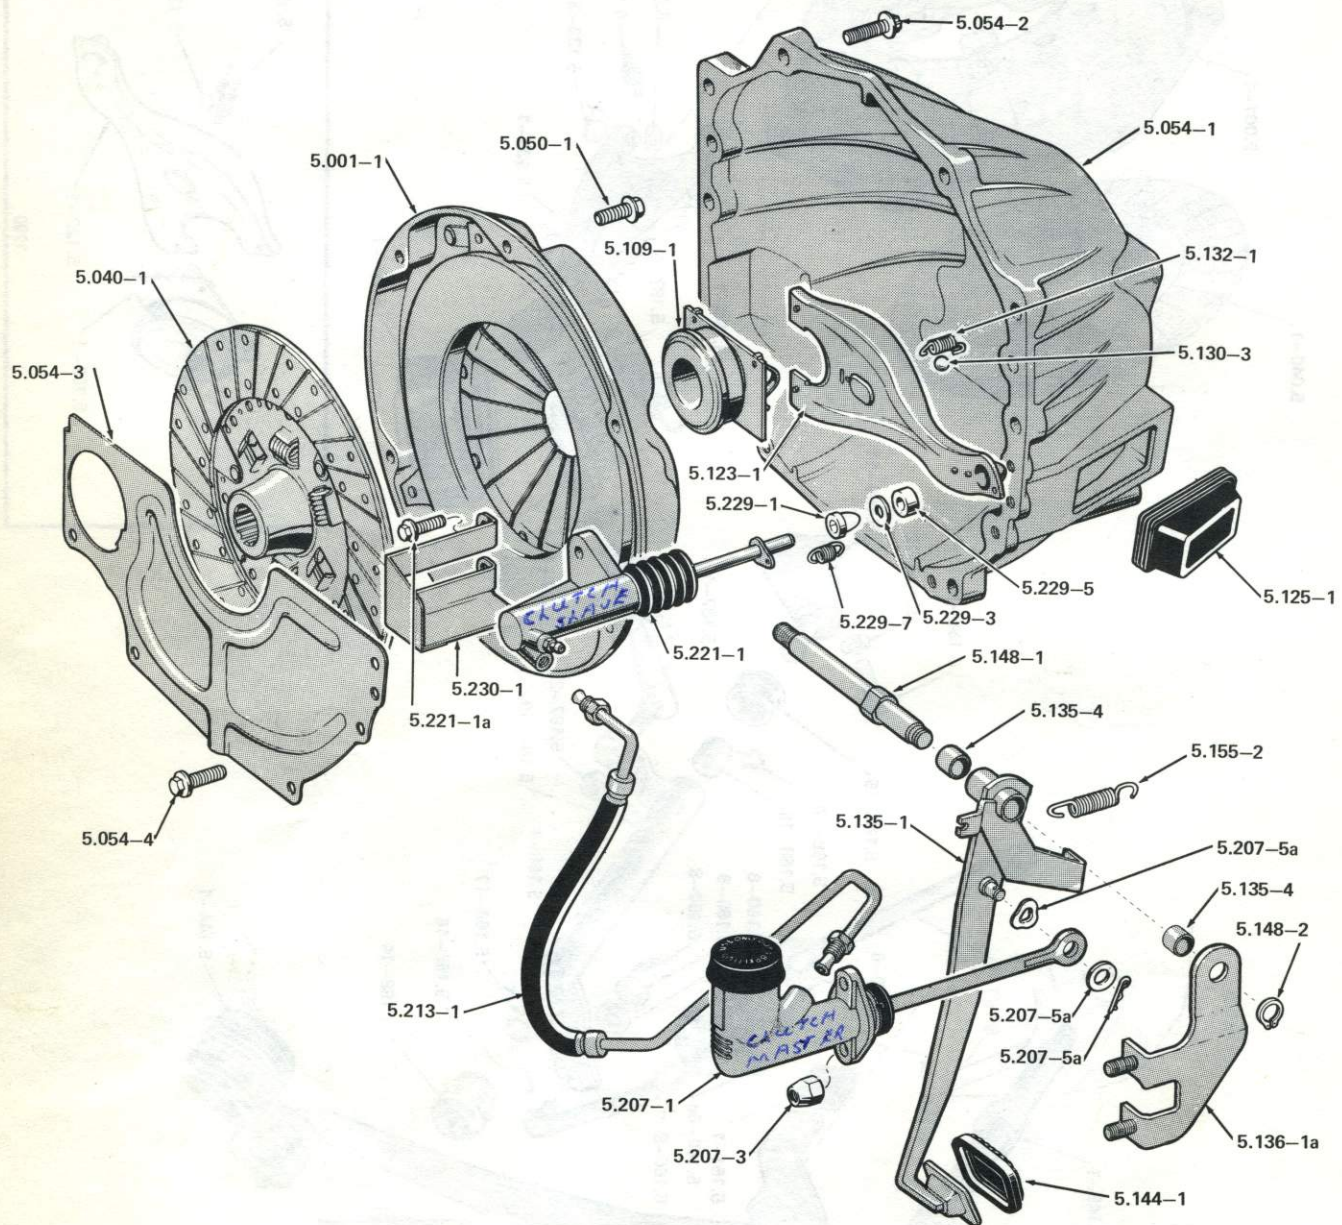



J-6289

CLUTCH, PEDAL, AND HYDRAULIC LINES . . . 1980 80-90 (FOUR)

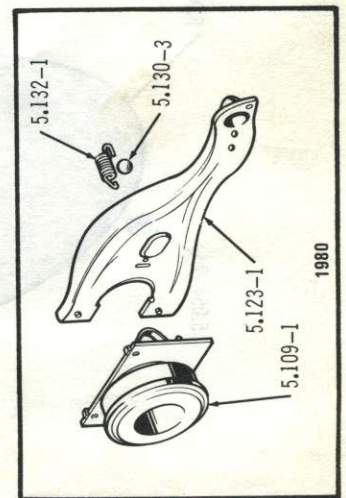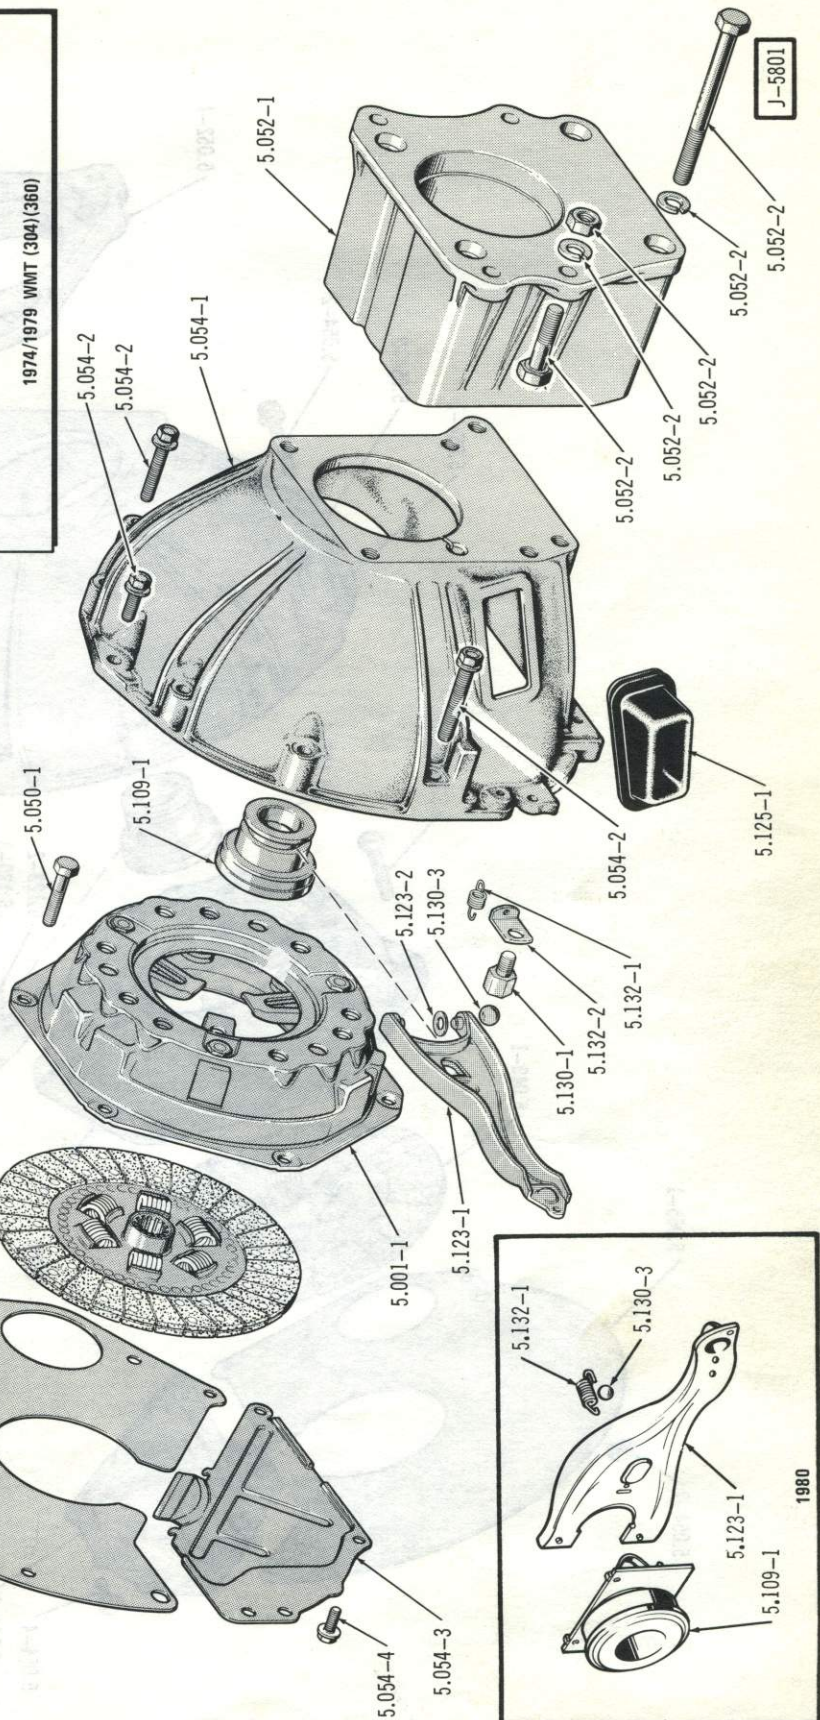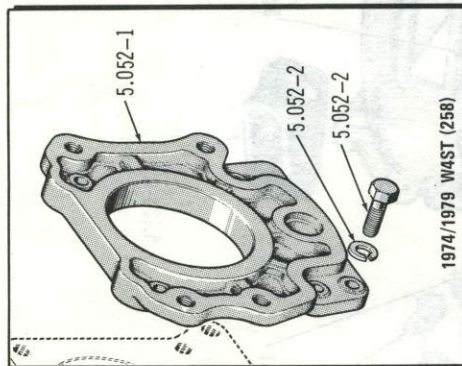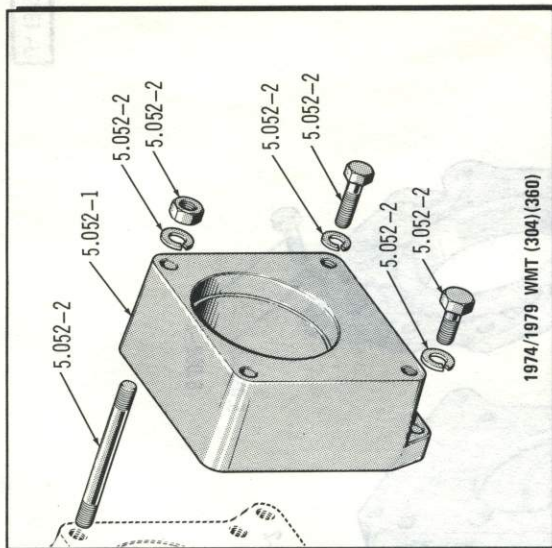

CLUTCH, HOUSING AND ADAPTER . . . 10-20-40

J-4997

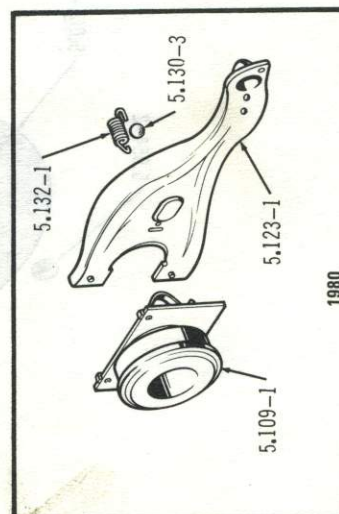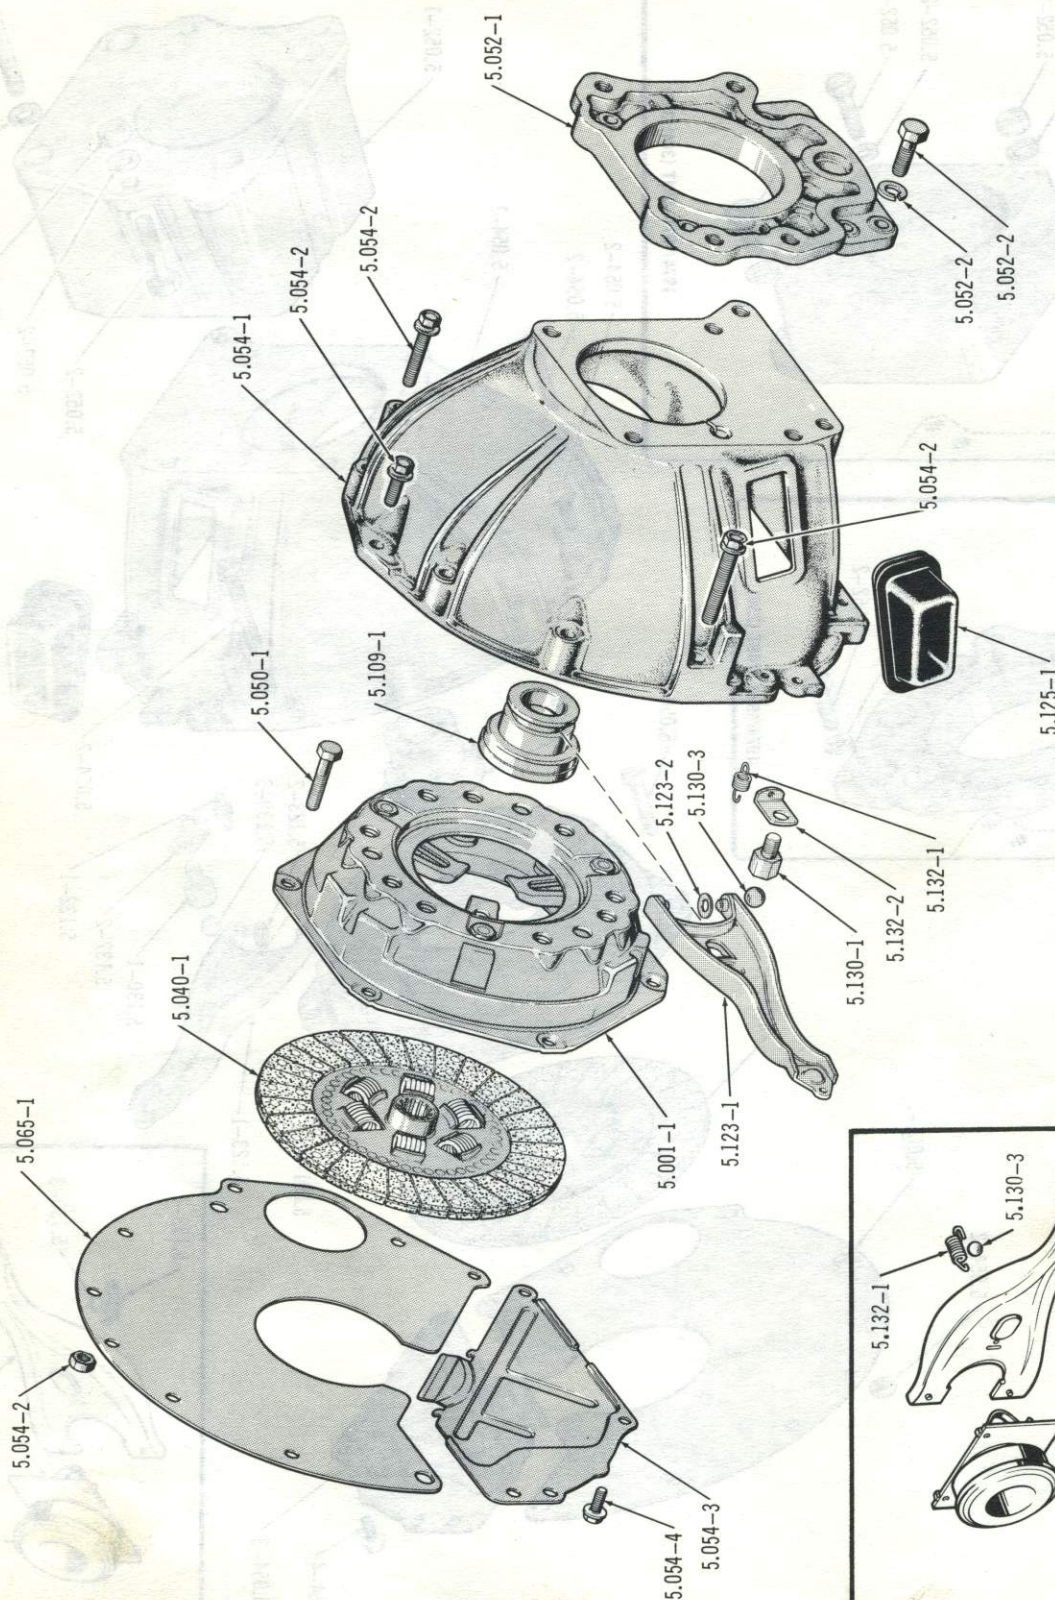

1980

CLUTCH, HOUSING AND ADAPTER . . . 80-90 (SIX AND V8)

SPECIAL INFORMATION

The Engine Build Code Number, the Vehicle Identification Number and the information provided on the Trim Plate are often necessary when determining the proper replacement parts for your vehicle. For their location refer to the General Information Section found at the front of this catalog.

NOTES

- 5-1 Used with Cable Clutch Linkage.
- 5-2 Used with Hydraulic Clutch Linkage.
- 5-3 The first type Clutch Pedal can be identified by the Transmission Gear Shift Rod which is 16-7/8" overall length.
- 5-4 The second type Clutch Pedal can be identified by the Transmission Gear Shift Rod which is 17-5/8" overall length.
- 5-5 The Pedal Rod Boot and Boot Retainer are separate pieces. The Boot is attached to the Rod with a Clamp.
- 5-6 The Pedal Rod Boot Retainer is molded into the Boot. The attaching Clamp is eliminated.
- 5-7 Used with Self-Locking Pin in Clutch Rod after Serial No. J9F83AH124961.
- 5-8 Used with Nut Type Attachment prior to Serial No. J9F83AH124961.
- 5-9 Used with Transmission Tag No. 535 9390.
- 5-10 Used with Transmission Tag No. 536 0957.
- 5-11 Used prior to V.I.N. J0M18NC040457.
- 5-12 Used after V.I.N. J0M18NC040457.
- 5-13 Used prior to V.I.N. J0M83EB040992.
- 5-14 Used after V.I.N. J0M83EB040992.
- 5-15 Used prior to V.I.N. J0M93AC041925.
- 5-16 Used after V.I.N. J0M93AC041925.

CLUTCH

5.054

GROUP NO. — DESCRIPTION — YEAR and MODEL	PAKS CODE	PRIMARY GROUP NO.	PER CAR	PART NO.	CODE
5.001-1 COVER ASSEMBLY, Clutch					
80 FOUR			1	813 2576	
74/ SIX...(10-1/2")			1	318 1383	
74/ SIX (Heavy Duty)...(10-1/2")			1	318 4908	
78/ SIX (10)(20)(40)...(11")			1	535 7436	
74/ 304.....			1	318 4908	
74/ 360-401.....			1	318 4955	
5.040-1 PLATE, Driven					
80 FOUR			1	813 2577	
74/75 SIX			1	318 4909	
76/77 SIX (10)(20)(40)			1	318 4909	
78/ SIX (10)(20)(40)...(11")			1	535 7437	
80 (B & B) SIX...(10-1/2").....			1	536 0174	
74/75 304.....			1	318 4909	
80 304.....			1	536 0173	
74/ 360-401 (10)(20)(40)			1	318 4867	
76/79 80-90...(10-1/2").....			1	535 4689	
5.044-1 CONVERSION KIT, Right Hand Drive Hydraulic Clutch Linkage					
74/75 80 (RHD).....			1	812 7345	
5.050-1 BOLT, Clutch Cover To Flywheel					
74/			6	400 4165	
80 FOUR			6	G11500917	
5.052-1 ADAPTER, Clutch Housing To Transmission					
W3ST					
74 10-25-40 (V8)			1	998 547	
75/79 10-25-40 (V8)			1	535 3897	
W4ST					
74/79 10-20-40 (Six)			1	992 667	
74 10-20-40 (V8)			1	998 647	
75/79 10-20-40 (V8)			1	535 3898	
80 10-20-45 (V8)			1	535 9656	
80 46 (Six)			1	535 9693	
80 46 (V8)			1	535 9714	
74 80-90 (Six)			1	992 667	
5.052-2 ATTACHING PARTS, Adapter To Clutch Housing					
BOLT, Hexagon 74/ 10-20-40 (Six-W4ST)	17.038		4	G180147	
BOLT, Hexagon 74/79 10-25-40 (360-W3ST)	17.038		2	G9419079	
BOLT, Hexagon 74/75 10-20-40 (V8-W4ST)	17.038		4	G187137	
BOLT, Hexagon 76/ 10-20-40 (V8-W4ST).....			4	G443596	
BOLT, Hexagon 80 46 (Six)			1	400 6718	
BOLT, Hexagon 80 46 (V8)			1	535 6352	
BOLT, Hexagon 74/ 80 (W4ST)	17.038		4	G180147	
STUD..... 74/79 10-20-40 (V8-W3ST)	17.718		2	G103231	
WASHER, Lock..... 74/ W4ST			4	G120383	
WASHER, Lock..... 74/ 10-20-40 (Six-W4ST)	17.820		4	G120214	
WASHER, Lock..... 74/79 10-25-40 (360-W3ST)			4	G120383	
5.054-1 HOUSING, Clutch (Flywheel)					
74/75			1	321 5152	
76/79 10-20-40.....			1	321 5152	
80 10-25-45 (Six)			1	323 8423	
80 10-25-45 (V8)			1	323 5827	
80 46 (Six)			1	323 8424	
80 46 (V8)			1	323 5826	
76/79 80-90 (W4ST)			1	322 8248	
76/77 80-90 (W3ST)	(Use 322 8248)		1	322 3280	
78/79 80-90 (W3ST)			1	322 8248	
80 80-90 (Four-Transmission No. 535 9390).....			1	325 1256	
80 80-90 (Four-Transmission No. 536 0956 Or 536 0957).....			1	325 1270	
80 83 (Except Four).....			1	323 6291	
80 93 (Except Four-* 5-9)			1	323 6291	
80 93 (Six-* 5-10)			1	323 6287	

5.054-1a STUD. Clutch Housing					
76/79	80-90 (W4ST)	(Use 535 6352)	1	535	5564
5.054-2 ATTACHING PARTS, Housing To Engine					
BOLT, External Torx...	80	FOUR	6	420	0400
BOLT, Hexagon	74/79	SIX... (7/16"-14 x 2-3/4")	17.038	2	G180159
BOLT, Hexagon	80	SIX... (3/8"-16 x 1-5/8")		1	400 1883
BOLT, Hexagon	80	SIX... (3/8"-16 x 1-3/16")		4	400 1885
BOLT, Hexagon	80	SIX... (7/16"-14 x 2-3/4")		2	400 4370
BOLT, Hexagon	74/	V8... (3/8"-16 x 2-3/16")	5.054	4	400 1885
BOLT, Hexagon	74/	V8... (7/16"-14 x 2-3/4")		2	400 4370
BOLT, Hexagon	80	(Upper) 46 (V8)		2	G9419027
BOLT, Hexagon	80	(Lower) 46 (V8)		2	G9419126
BOLT, Hexagon	76/79	80-90... (3/8"-16 x 1-5/8")	16.010	2	400 1883
BOLT, Hexagon	76/79	80-90... (3/8"-16 x 2-3/16")	5.054	3	400 1885
BOLT, Hexagon	76/79	80-90... (7/16"-14 x 2-3/4")		2	400 4370
WASHER, Lock	74/79	SIX	17.820	2	G120383
WASHER, Plain	74/79	SIX	17.814	2	G120395
WASHER	80	(Upper) 46 (V8)		2	G120383
WASHER	80	(Lower) 46 (V8)		2	G120898
NUT, Hexagon	74/	SIX	17.406	2	G120377
5.054-3 COVER, Clutch Housing					
74/	Except FOUR		1	321	3744
80	FOUR		1	325	1259
5.054-4 ATTACHING PARTS, Cover To Housing					
BOLT, Hexagon	74/79	10-20-40... (1/2" Long)	17.038	2	G180073
BOLT, Hexagon	75/79	10-20-40... (5/8" Long)	17.626	AR	400 0987
BOLT, Hexagon	74/79	80... (5/16"-18 x 5/8")	17.038	3	G180075
BOLT, Hexagon	76/			4	400 0987
BOLT	80	80-90 (Four)		4	G11502693
WASHER, Lock	74/79		17.820	2	G120214
WASHER, Lock	74/79	10-20-40 (V8-W3ST)	17.820	4	G120383
NUT, Hexagon	74/79	10-20-40 (V8-W3ST)	17.406	2	G271506
5.054-5 DOWEL, Clutch Housing					
74			1.020	2	321 2857
75/79				2	400 5148
5.065-1 SPACER, Clutch Housing To Engine					
74/76			16.042	1	321 3743
77/		(Use 321 3743)		1	535 3743
5.065-2 ATTACHING PARTS, Spacer To Clutch Housing					
BOLT, Hexagon	74/	10 (258)... (7/16"-14 x 2-1/4")	5.054	4	400 1885
WASHER, Plain	74/	10 (258)	17.406	2	G120377
5.065-3 ATTACHING PARTS, Spacer To Cylinder Block					
BOLT, Hexagon	74/	10 (258)... (1-1/8" Long)	16.010	1	400 1883
BOLT, Hexagon	74/	20-40 (258)... (2-1/4" Long)	5.054	2	400 1885
5.109-1 SLEEVE, Clutch Throwout Lever (Incl. Bearing)					
74/76	10-20-40 (Six)			1	535 0852
77	10-20-40 (Six)			1	535 6918
74/77	10-20-40 (V8)			1	319 0517
78/79	10-20-40			1	319 0517
80	15-16-20-40-80 (Six)			1	536 1610
80	18 (Six-* 5-11)			1	323 6561
80	18 (Six-* 5-12)			1	536 1610
80	10-20-40 (V8)			1	536 1610
74/75	80			1	535 0852
76	80-90	(Use 322 9267)		1	322 1236
77/79	80-90	U.S.E. 3.23.65.61		1	322 9267
80	83 (Four-* 5-13)			1	536 1352
80	83 (Four-* 5-14)			1	536 1614
80	90 (Four-W4ST)			1	536 1614
80	93 (Six-* 5-15)			1	323 6561
80	93 (Six-* 5-16)			1	536 1610

5.123-1 LEVER, Clutch Throwout

74/75	LHD		1	321 7480
74/75	RHD		1	999 848
76/79	10-20-40		1	321 7480
80	15-16-20-40-80 (Six)		1	536 1620
80	18 (Six-* 5-11)		1	322 4192
80	18 (Six-* 5-12)		1	536 1620
80	10-20-40 (V8)		1	536 1620
76/79	80-90		1	322 4192
80	83 (Four-* 5-13)		1	322 4192
80	83 (Four-* 5-14)		1	536 1620
80	90 (Four)		1	536 1620
80	93 (Six-* 5-15)		1	322 4192
80	93 (Six-* 5-16)		1	536 1620

5.123-2 WASHER, Lever To Clutch Throwout Lever Pin

74/75			1	317 8359
76/	10-20-40		1	317 8359

5.125-1 BOOT, Clutch Throwout Lever

74/75			1	317 3646
76/79	10-20-40		1	317 3646
80	10-20-40 (Six-W4ST)		1	323 8430
80	10-20-40 (V8-W4ST)		1	323 6454
76/79	80-90		1	318 0370
80	80-90 (Used With 323 3280 Housing)		1	318 0340
80	80-90 (Except Four-W4ST-Used With 323 6291 Housing)		1	323 6453
80	80-90 (Four-W4ST)		1	323 6454

5.130-1 PIVOT ASSEMBLY, Clutch Throwout

74/75			1	318 4913
76/	10-20-40		1	318 4913

5.130-2 ATTACHING PARTS, Pivot To Housing

WASHER, Lock	74		11.170	1	400 4809
WASHER, Lock	75		17.820	1	G120383
WASHER, Lock	76/	10-20-40		1	400 4809

5.130-3 BALL, Throwout Lever (In Clutch Housing)

74/			17.018	1	G169162
-----	-------	-------	--------	---	---------

5.132-1 SPRING, Clutch Throwout Lever (In Clutch Housing)

74/75			1	319 9503
76/79	10-20-40		1	319 9503
80	10-20-40		1	322 2799
76/	80-90		1	322 2799

5.132-2 ANCHOR, Clutch Throwout Lever Spring

74/75			1	321 0423
76/	10-20-40		1	321 0423

5.135-1 PEDAL, Clutch

74/75	LHD		1	535 2649
74	10-20-40 (RHD)		1	535 0619
76/79	10-20-40 (* 5-3 And * 5-8)		1	535 2649
76/79	10-20-40 (* 5-4 And * 5-8)		1	535 7455
79/	10-20-40 (* 5-7)		1	535 9897
76/79	80-90 (LHD)		1	535 5313
80	80-90 (Except Four-W4ST)		1	536 0195
80	80-90 (Four)		1	535 9833
74/75	80 (RHD-* 5-1)		1	535 0626
76/79	80-90 (RHD)		1	535 5806

5.135-3 ATTACHING PARTS, Clutch Pedal To Retainer

SNAP RING	74/	LHD		5.168	1	912 640
PIN	74	10-20-40 (RHD)		8.160	1	939 023
WASHER, Lock	74/	80		17.820	1	G120384
WASHER, Lock	74	10-20-40 (RHD)		17.820	1	G120384
WASHER, Plain	74/	80		17.814	2	G120396
NUT, Lock	74	10-20-40 (RHD)		17.416	1	G443340
NUT, Lock	74/	80		17.416	1	G443340

5.135-4 BEARING, Clutch Pedal

74/79		2	949 169
80	10-20-40.....	2	949 169
80	80-90 (Four).....	8.140	2 946 177
80	80-90 (Except Four).....	2	949 169

5.136-1 BRACKET, Clutch Pedal Retainer

74	10-20-40 (RHD-258).....	8.164	1 535 0617
----	-------------------------	-------	------------

5.136-1a BRACE ASSEMBLY, Clutch Pedal

80	80-90 (Four).....	1	535 9817
----	-------------------	---	----------

5.136-2 ATTACHING PARTS, Clutch Retaining Bracket To Dash

BOLT, Hexagon	74	10-20-40 (RHD)...(3/8"-16 x 7/8")....	17.038	2	G180121
BOLT, Hexagon	74	10-20-40 (RHD)...(3/8"-16 x 1").....	17.038	2	G180122

5.144-1 COVER, Clutch Pedal Pad

74/		8.148	1 948 758
-----	-------	-------	-----------

5.148-1 SHAFT, Clutch And Brake Pedal

74/	10-20-40 (LHD).....	1	535 1805
74/75	80 (LHD).....	1	535 1898
74/75	80 (RHD)	1	999 582
76/	80-90 (Except Four).....	8.160	1 535 1805
80	80-90 (Four).....	1	535 9834

5.148-2 ATTACHING PARTS, Brake And Clutch Pedal Shaft

NUT, Lock.....	74/79	80.....	18.190	1	400 4311
RING, Retaining.....	80	80-90.....		1	400 6471
WASHER, Plain.....	80	80-90 (Except Four).....		1	400 1147
WASHER, Spring.....	80	80-90 (Four).....		1	535 1844

5.148-3 COLLAR, Brake And Clutch Pedal Shaft

74/79	80 (RHD)	1	999 554
--------------	-----------------------	---	---------

5.148-4 SPACER, Clutch And Brake Pedal

74	10-20-40.....	1	535 1057
----	---------------	---	----------

5.155-1 SPRING, Clutch Pedal Return

75	80 (RHD)	1	998 762
-----------	-----------------------	---	---------

5.155-2 SPRING, Clutch Pedal Over Center

74/79	LHD (* 5-8).....	1	535 1118
74/75	RHD	1	932 923
79/	10-20-40.....	1	535 1118
79/	80-90 (Except Four-* 5-7).....	1	535 7515
80	80-90 (Four).....	1	535 1050

5.155-3 ATTACHING PARTS, Spring To Clutch Pedal

CLEVIS.....		74/75	RHD.....	1	937 795
PIN, Clevis.....		74/75	RHD.....	17.474	1 G138083
PIN, Cotter.....		74/75	RHD.....	17.460	1 G112726
WASHER.....		74/75	80 (RHD).....	17.814	1 G120396

5.160-1 ROD, Bellcrank To Clutch Pedal Shaft

74/75	10 (LHD)...(18-5/8" Long).....	1	535 1143
74/75	20-40 (LHD)...(15-9/16" Long).....	1	535 1144
74	10-20-40 (RHD)	1	941 447
74	80 (LHD)...(18-1/2" Long).....	1	535 1302
74/75	80 (LHD)...(18-3/8" Long).....	(Use 535 1302)	1 535 4705
76/	80-90 (LHD).....	1	535 3251

5.160-1a ROD, Clutch Pedal To Link

75/79	10-20-40 (* 5-8).....	1	535 5060
79/	10-20-40 (* 5-7).....	1	535 9903

5.160-1b ROD, Link To Clutch Bellcrank

75/79	10 (* 5-8)	1	535 5061
79	10 (* 5-7)	1	535 9901
80	10 (258-W4ST)	1	535 9934
80	10 (V8-W4ST)	1	535 9933
79	20-40 (* 5-7)	1	535 9902
75/79	20-40 (* 5-8)	1	535 5062
80	25-40 (258-W4ST)	1	536 1741
80	25-40 (V8-W4ST)	1	535 9934

5.160-1c LINK, Clutch Release Rod

75/	10-20-40	1	535 5063
-----	----------------	---	----------

5.160-1d ATTACHING PARTS, Link To Rod

NUT, Hexagon.....	75/	10-20-40 (Right Hand Thread)	17.410	1	G124824
NUT, Hexagon.....	75/	10-20-40 (Left Hand Thread)		1	400 4966

5.160-2 ATTACHING PARTS, Rod To Pedal

PIN, Lock	79/	10-20-40		2	400 0407
PIN, Lock	76/	80-90 (LHD)		1	400 0407
WASHER, Plain.....	79/	10-20-40		2	400 4437
WASHER, Plain.....	78/	80-90 (LHD)....(13/32"-11/16" x 1/32")		1	400 4437
WASHER, Plain.....	78/	80-90 (LHD)....(13/32"-11/16" x 3/32")	1.067	2	400 3938
WASHER, Spring	79/	10-20-40		1	321 5893
WASHER, Spring	76/	80-90 (LHD)		1	321 5893
NUT, Hexagon.....	74/75	LHD	17.412	1	G271193

5.160-3 BALL JOINT, Adjusting Link

74/75	LHD	1	931 583
-------	-----------	---	---------

5.160-4 ATTACHING PARTS, Locking Ball Joint To Rod

NUT, Jam.....	74/	LHD	17.410	1	G124925
---------------	-----	-----------	--------	---	---------

5.160-5 ATTACHING PARTS, Ball Joint To Bellcrank

NUT, Hexagon.....	74/	10-20-40 (LHD)	17.412	2	G271193
-------------------	-----	----------------------	--------	---	---------

5.160-6 BOOT, Clutch Pedal Rod Seal

74/77	10-20-40 (LHD-* 5-5)	(Use 535 7674)		1	535 1466
77/	10-20-40 (LHD-* 5-6)			1	535 7674
74	10-20-40 (RHD)			1	941 456
74/75	80 (LHD)			1	535 1375
76/	80-90 (LHD)			1	322 0102

5.160-6a RETAINER, Clutch Push Rod Boot

74/	10-20-40 (LHD-* 5-5)			1	535 1134
74/75	80 (LHD)			1	535 1377
76/	80-90 (LHD)			1	535 5322

5.160-6b CLAMP, Clutch Pedal Push Rod Boot

74/77	10-20-40 (LHD-* 5-5)	(Use 934 246)		1	934 245
74/75	80 (LHD)		4.160	1	318 1643

5.160-6c ATTACHING PARTS, Boot And Retainer To Floor Pan

SCREW, Tapping.....	74/77	10-20-40 (LHD-* 5-5)	17.670	3	G451824
SCREW, Tapping.....	77/	10-20-40 (LHD-* 5-6)	12.351	2	400 4644
SCREW, Tapping.....	74/75	80 (LHD)	17.660	3	G163098
SCREW, Tapping.....	76/	80-90 (LHD)	17.660	3	G163210

5.160-8 ATTACHING PARTS, Rod To Bellcrank

PIN, Lock	79/	10-20-40	2	400 0407
PIN, Lock	76/	80-90 (LHD)	1	400 0407
WASHER, Plain	79/	10-20-40	2	400 4437
WASHER, Plain	76/	80-90 (LHD)	1	400 4437
WASHER, Spring	79/	10-20-40	1	321 5893
WASHER, Spring	76/	80-90 (LHD)	1	321 5893
NUT, Hexagon	74	10 (LHD)	2	G271193
NUT, Hexagon	75/79	10-20-40	2	G271193

5.160-9 BUSHING, Clutch Rod Retainer To Floor

76/	80-90 (LHD)	1	317 3461
-----	-------------------	---	----------

5.161-1 CABLE, Clutch Release

74	10 (RHD-W3ST)	(Use 812 2222)	1	535 0593
74	10 (RHD-W4ST)	(Use 812 2218)	1	535 0592
74	20-40 (RHD-W3ST)	(Use 812 2219)	1	535 1129
74	20-40 (RHD-W4ST)	(Use 812 2222)	1	535 0593
74/75	80 (RHD-W3ST)		1	812 2226
74/75	80 (RHD-W4ST)		1	812 2227

5.161-2 ATTACHING PARTS, Clutch Cable To Clutch Pedal (Pedal End)

CLEVIS	74/75	80 (RHD)	1	948 416
PIN, Clevis	74/75	80 (RHD) .. (1/4" O.D.)	1	930 352
PIN, Clevis	75	80 (RHD) .. (5/16" O.D.)	1	G9411483
PIN, Cotter	74/75	RHD	1	G137168

5.161-2a ATTACHING PARTS, Clutch Cable To Bellcrank

CLIP	74	10-20-40 (RHD)	1	819 311
PIN, Cotter	74/75	80 (RHD)	1	G137168
PIN, Lock	75	80 (RHD)	1	400 0407
PIN, Self-Locking	74/75	80 (RHD)	1	974 250
WASHER, Plain	74/75	80 (RHD)	1	G120392

5.161-2b ATTACHING PARTS, Clutch Cable To Throwout Lever

NUT, Ball (Adjusting) ..	74/75	RHD	1	998 666
NUT, Hexagon	74/75	RHD	1	G120368

5.161-3 CLIP, Clutch Cable To Dash Panel And Engine Mounting Bracket

74	10-20-40 (RHD)	17.134	1	G120524
74/79	80 (RHD)	8.192	2	930 061

5.161-4 ATTACHING PARTS, Clip To Front Floor Pan

SCREW, Tapping	74	10-20-40 (RHD)	1	G9416843
CLIP, Closed	74/75	80 (RHD)	1	644 106

5.161-5 BOOT, Clutch Cable

74/75	RHD	1	999 849
-------	-----------	---	---------

5.161-6 ATTACHING PARTS, Boot To Clutch Cable

CLAMP, Hose	74/75	RHD	1	G272842
-------------------	-------	-----------	---	---------

5.164-1 STOP, Clutch Pedal

74/	(Rubber) 10-20-40 (LHD)	1	400 4828
74/79	(Rubber) 10-20-40 (RHD)	8.140	1 930 356
74	(Bolt) 10-20-40 (RHD)	1	949 174
76/	80-90	1	535 5312

5.164-2 ATTACHING PARTS, Pedal Stop To Clutch Pedal Retaining Bracket

BOLT, Hexagon	74/	10-20-40 (LHD)	1	400 4826
NUT, Hexagon	74/	10-20-40 (LHD)	1	G271193

5.165-1 BRACKET, Clutch Control Cable (Front Floor Pan)

74/75	80 (RHD)	1	535 0621
-------	----------------	---	----------

CLUTCH

5.168

5.165-2 ATTACHING PARTS, Bracket To Dash Panel At Steering Column Mount					
BOLT, Hexagon	74/75	80 (RHD)...	(1-1/4" Long)	17.038	1 G123774
BOLT, Hexagon	74/75	80 (RHD)...	(2" Long)	17.038	1 G181620
BOLT, Hexagon	75	80 (RHD)...	(3/4" Long)	17.038	2 G181595
WASHER, Lock	74/75	80 (RHD)		17.820	2 G120214
NUT, Hexagon	74/75	80 (RHD)		17.406	2 G120368
5.165-3 BRACKET, Clutch Cable Anchor (To Transfer Case To Transmission)					
74/75	RHD				1 999 856
5.165-4 SPACER, Clutch Cable Bracket (Transfer Case To Transmission)					
74/75	RHD				1 992 731
5.165-5 SPACER, Clutch Cable Bracket To Transmission					
74/75	RHD				1 992 732
5.165-6 ATTACHING PARTS, Bracket To Transfer Case					
WASHER, Lock	74/75	10-20-40 (RHD)		17.820	1 G120383
5.165-7 ATTACHING PARTS, Bracket To Transmission					
BOLT, Hexagon (Nylock)	74/75	RHD	(3/8"-16 x 1-5/8")		2 535 0658
BOLT, Hexagon (Nylock)	74/75	RHD	(7/16"-14 x 1-1/4")	5.160	1 998 599
WASHER, Lock	74/75	RHD		8.186	2 649 704
5.165-8 BRACE, Clutch Cable Bracket To Transfer Case					
74/75	RHD				1 999 981
5.165-9 ATTACHING PARTS, Brace To Clutch Cable Bracket					
NUT, Hexagon	74/75	RHD		17.412	2 G271193
5.168-1 BELLCRANK, Clutch Release Idler					
74	10-20-40 (LHD)		(Use 535 4027)		1 535 2656
75/79	10-20-40 (Six-* 5-3)				1 535 4027
76/79	10-20-40 (Six-* 5-4 And * 5-8)				1 535 7458
79	10-20-40 (Six-* 5-7)				1 535 9896
75/79	10-20-40 (V8-* 5-3)				1 535 4072
76/79	10-20-40 (V8-* 5-4 And * 5-8)				1 535 7459
79	10-20-40 (V8-* 5-7)				1 535 9893
80	10-20-40				1 535 9730
74	80 (LHD-Used With 5-3/8" Long Release Rod)				1 535 1292
74/75	80 (LHD-Used With 6" Long Release Rod)				1 535 4659
76/78	80-90 (LHD)		(Use 535 8993)		1 535 3252
79/	80-90 (* 5-7)				1 536 0104
79	80-90 (LHD-* 5-8)				1 535 8993
5.168-2 BELLCRANK, Upper Clutch Release					
74	10-20-40 (RHD)				1 535 3375
5.168-3 BRACKET, Bellcrank Retaining					
74	10-20-40 (RHD)				1 535 3368
5.168-4 ATTACHING PARTS, Bellcrank To Bracket					
BUSHING (Brass)	74	10 (RHD)			2 911 236
SPACER	74	10-20-40 (RHD)			1 941 730
BOLT, Hexagon	74	10-20-40 (RHD)		17.038	1 G124100
NUT, Hexagon	74	10-20-40 (RHD)		17.412	1 G271187
5.168-5 ATTACHING PARTS, Bracket To Floor Pan And Retainer					
BOLT, Hexagon	74	10-20-40 (RHD)		17.038	2 G121661
WASHER, Lock	74	10-20-40 (RHD)		17.820	2 G120214
NUT, Hexagon	74	10-20-40 (RHD)		17.406	2 G120368

5.168

CLUTCH

5.168-6 BRACKET, Support Clutch Release Idler Pivot Outer					
74/79	10-20-40 (LHD).....		1	535	1135
80	10-25-40 (Six-W4ST).....		1	536	1736
80	10-25-40 (V8-W4ST).....		1	535	9736
74/75	80 (LHD).....		1	535	1285
76/	80-90 (LHD).....		1	535	5339
5.168-7 ATTACHING PARTS, Outer Support Bracket To Frame Assembly					
BOLT, Hexagon	74/75 LHD.....	17.671	2	G9424824	
BOLT, Hexagon	76/ 10-20-40.....	17.671	2	G9424824	
NUT, Hexagon	76/ 80-90 (LHD).....		2	400	1457
5.168-9 PIVOT, Clutch Release Idler					
74/	10-20-40.....		2	944	666
74/75	80 (LHD).....		2	944	666
5.168-10 ATTACHING PARTS, Clutch Release Idler Pivot To Support Bracket					
WASHER, Lock	74/ LHD.....	17.820	1	G120383	
NUT, Hexagon	74/ LHD.....	17.406	1	G271506	
5.168-11 SUPPORT, Clutch Release Idler Pivot					
74/79	10-20-40 (LHD-Six).....		1	535	1271
74/79	10-20-40 (LHD-V8).....		1	535	1112
80	(Inner) 10-20-40 (Six-W4ST).....		1	535	9726
80	(Inner) 10-20-40 (V8-W4ST).....		1	535	9725
74/75	80 (LHD).....		1	535	1284
76/79	80-90 (LHD).....		1	535	5332
80	80-90.....		1	536	0112
5.168-11a SPACER, Inner Bellcrank Bracket To Clutch Housing					
74/	80 (Six-LHD).....		4	535	1306
5.168-12 ATTACHING PARTS, Support Assembly To Clutch Housing					
BOLT, Hexagon	74/ 10-20-40 (LHD).....	17.038	2	G186677	
BOLT, Hexagon	74/ 80 (LHD-Six).....	17.	2	G454871	NA
BOLT, Hexagon	74/75 80 (LHD-V8).....	17.038	2	G186677	
BOLT, Hexagon	76/ 80-90 (LHD).....	17.038	1	G186677	
WASHER, Lock	74/ LHD.....	17.820	2	G120214	
NUT, Hexagon	74/ LHD.....	17.406	2	G271506	
5.168-14 BOOT, Clutch Pivot Outer					
74/75	LHD.....		1	316	7049
76/	10-20-40.....		1	316	7049
76/	80-90.....		1	317	0937
5.168-15 BOOT, Clutch Pivot Inner					
74/	LHD.....		1	316	7049
5.168-16 BUSHING, Clutch Release Idler Pivot Inner (White Or Black Plastic)					
74/	LHD.....		1	316	7067
5.168-17 BUSHING, Clutch Release Idler Pivot Outer					
74/	LHD.....		1	316	7067
5.168-18 RETAINER, Clutch Release Idler Pivot Bushing Outer					
74/	LHD.....		1	316	9769
5.168-19 FITTING, Lubrication (Bellcrank, Clutch Release Idler)					
74	LHD.....	17.290	1	G271287	
5.187-1 ROD ASSEMBLY, Clutch Fork Release					
79	10-20-40 (Six-* 5-7).....		1	535	9939
74/79	10-20-40 (LHD-Six-* 5-8)....(8-5/32" Long).....		1	535	1274
80	10-25-40 (Six-W4ST).....		1	536	1739

79	10-20-40 (V8-* 5-7)		1	535 9937
74/79	10-20-40 (LHD-V8-* 5-8)		1	535 1211
80	10-20-40 (V8)		1	536 0098
74/75	80 (LHD)...(6" Long)		1	535 4703
74/75	80 (LHD)...(5-3/8" Long)		1	535 1275
76/79	80-90 (LHD-* 5-8)	 (Use 812 6668)	1	535 5345
79/	80-90 (LHD-* 5-7)		1	535 9943
75	80 (RHD)		1	535 4975
76/	80-90 (RHD)		1	535 5821
5.187-2	ATTACHING PARTS, Rod To Bellcrank			
NUT, Hexagon	74/79 10-20-40 (LHD)	17.412	1	G271193
NUT, Hexagon	76/79 80-90 (LHD)	17.412	1	G271193
PIN, Lock	79/		1	400 0407
WASHER, Plain	79/		1	400 4437
WASHER, Spring	79/		1	321 5893
5.187-3	ADJUSTER, Clutch Wear			
74/79			1	535 1209
80			1	535 9735
5.187-4	ATTACHING PARTS, Adjuster To Clutch Release Rod			
NUT, Jam	74/ 10-20-40 (LHD)	17.410	1	G124925
NUT, Jam	74/75 80	17.412	1	G271193
NUT, Jam	76/ 80-90 (LHD)	17.410	1	G124925
5.187-5	SEAL, Clutch Wear Adjuster To Throwout Lever			
74/		5.160	1	313 0998
5.190-1	SPRING, Clutch Throwout Lever Return			
74/	LHD		1	535 1252
74/75	RHD (* 5-1)	8.192	1	644 067
75/79	RHD (* 5-2)		1	535 1252
5.190-2	BRACKET, Clutch Throwout Lever Return Spring (Clip)			
74/75	RHD		1	998 673
5.190-3	ATTACHING PARTS, Bracket To Clutch Housing			
BOLT, Hexagon	74/79 RHD	17.038	1	G180077
WASHER, Lock	74/79 RHD	17.820	1	G120214
5.207-1	CYLINDER ASSEMBLY, Clutch Master			
74/79	80-90 (RHD)		1	535 4977
80	80-90		1	535 9822
5.207-2	PLATE, Clutch Master Cylinder Reinforcement			
74/79	80 (RHD)		1	535 4972
5.207-3	ATTACHING PARTS, Clutch Master Cylinder			
NUT, Hexagon	80 80-90		2	400 1457
BOLT, Hexagon	74/79 80 (RHD)	17.038	2	G180079
NUT, Hexagon	75/79 80 (RHD)		2	400 1457
5.207-5	END, Clutch Master Cylinder Push Rod			
74/79	80-90 (RHD)		2	535 4962
5.207-5a	ATTACHING PARTS, Master Cylinder Push Rod To Clutch Pedal			
PIN, Cotter	80 FOUR		1	G121224
WASHER, Plain	80 FOUR		1	G120396
WASHER, Wave	80 FOUR		1	400 4616
5.207-6	ATTACHING PARTS, End To Clutch Pedal			
WASHER, Lock	75/79 80 (RHD)	17.814	1	G120394
PIN, Cotter	75/79 80 (RHD)	3.200	1	G121222
5.207-7	ATTACHING PARTS, Rod End To Master Cylinder Push Rod			
NUT, Hexagon	75/79 80-90 (RHD)	17.406	1	G120368

5.211	REPAIR KIT, Clutch Master Cylinder				
	74/79	80-90 (RHD)		1	812 8484
	80	80-90		1	813 2781
5.213-1	TUBE, Hydraulic Clutch				
	76/79	80-90 (RHD)		1	535 5822
	80	80-90		1	536 1469
5.213-2	CONNECTOR, Hydraulic Tube To Master Cylinder				
	76/79	80-90 (RHD)		5.217	1 535 4973
5.213-3	WASHER, Hydraulic Tube Connector				
	75/79	80 (RHD)		8.855	1 400 4838
5.213-4	ATTACHING PARTS, Hydraulic Clutch Tube To Dash				
	CLIP, Closed	75/79 80 (RHD)		17.134	1 G120521
	SCREW, Tapping	75/79 80 (RHD)		17.660	1 G9416843
5.216-1	HOSE, Hydraulic Clutch				
	74/75	80 (RHD)		1	535 5706
	76/79	80-90 (RHD)		1	535 4971
5.216-2	FITTING, Bolt Hydraulic Clutch Hose To Slave Cylinder				
	76/79	80-90 (RHD)		1	322 5702
5.216-3	WASHER, Hydraulic Hose To Slave Cylinder				
	75/79	80 (RHD)		2	400 4970
5.221-1	CYLINDER ASSEMBLY, Clutch Slave				
	80	80-90		1	323 6779
	74/79	80-90 (RHD)		1	535 4978
5.221-1a	ATTACHING PARTS, Slave Cylinder To Bellhousing				
	SCREW	80 80-90... (M8 x 1.25 x 30)		2	420 0402
5.221-2	BRACKET, Clutch Slave Cylinder				
	74/79	80-90 (RHD)		1	535 4963
5.221-3	ATTACHING PARTS, Clutch Slave Cylinder Bracket To Engine Block				
	BOLT, Hexagon	75/79 80 (RHD)		17.629	2 812 1298
5.221-4	ATTACHING PARTS, Clutch Slave Cylinder To Bracket				
	BOLT, Hexagon	75/79 80 (RHD)		17.038	2 G180124
	NUT, Hexagon	75/79 80 (RHD)		10.260	2 400 3909
5.227	REPAIR KIT, Clutch Slave Cylinder				
	74/79	80-90 (RHD)		1	812 8483
	80	80-90		1	813 2782
5.229-1	PIVOT, Bellcrank To Throwout Lever Link				
	80	80-90		5.187	1 321 7479
5.229-3	ATTACHING PARTS, Slave Cylinder Rod				
	WASHER	80 80-90		17.814	1 400 1116
5.229-5	SEAL, Bellcrank To Throwout Lever Link				
	80	80-90		5.160	1 313 0998
5.229-7	SPRING, Throwout Lever To Push Rod				
	80	80-90		1	323 6804
5.230-1	SHIELD, Slave Cylinder Heat				
	80	80-90		1	323 6846
5.231-1	CLIP, "S" Type Clutch Tube To Brake Tube				
	80	80-90		4.110	1 400 4928