



J-5952


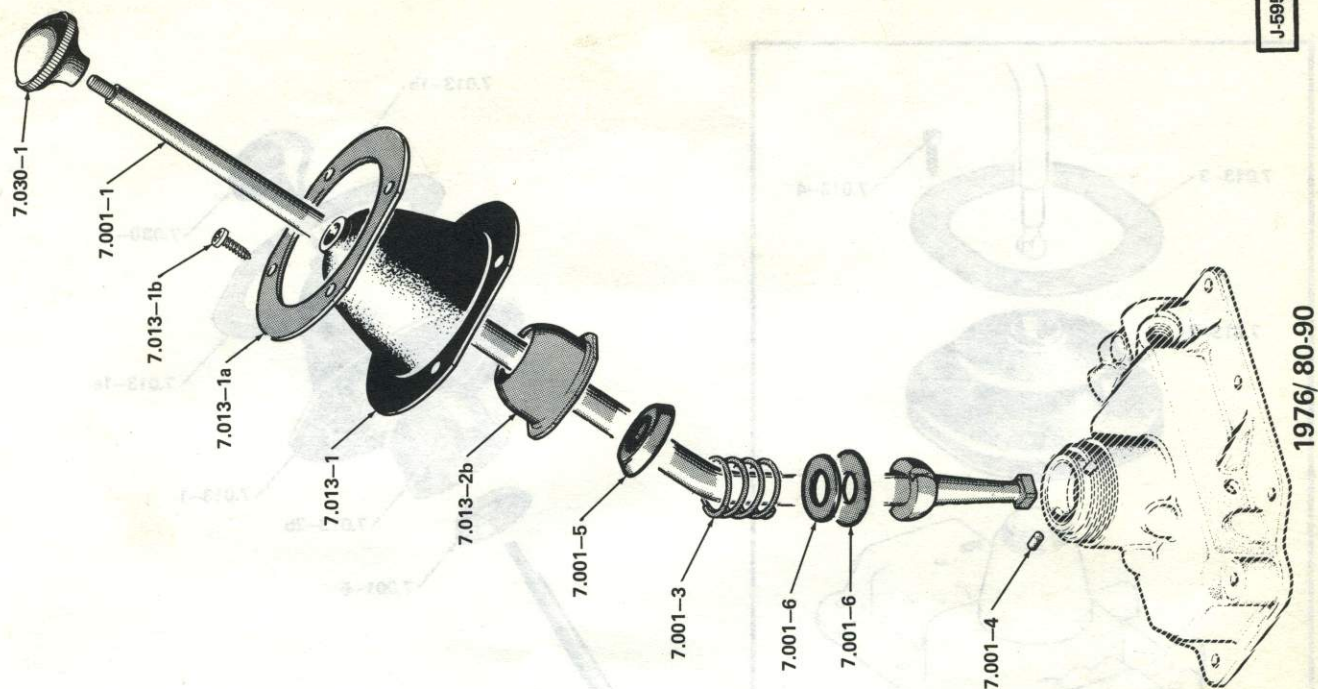


1976/80-90

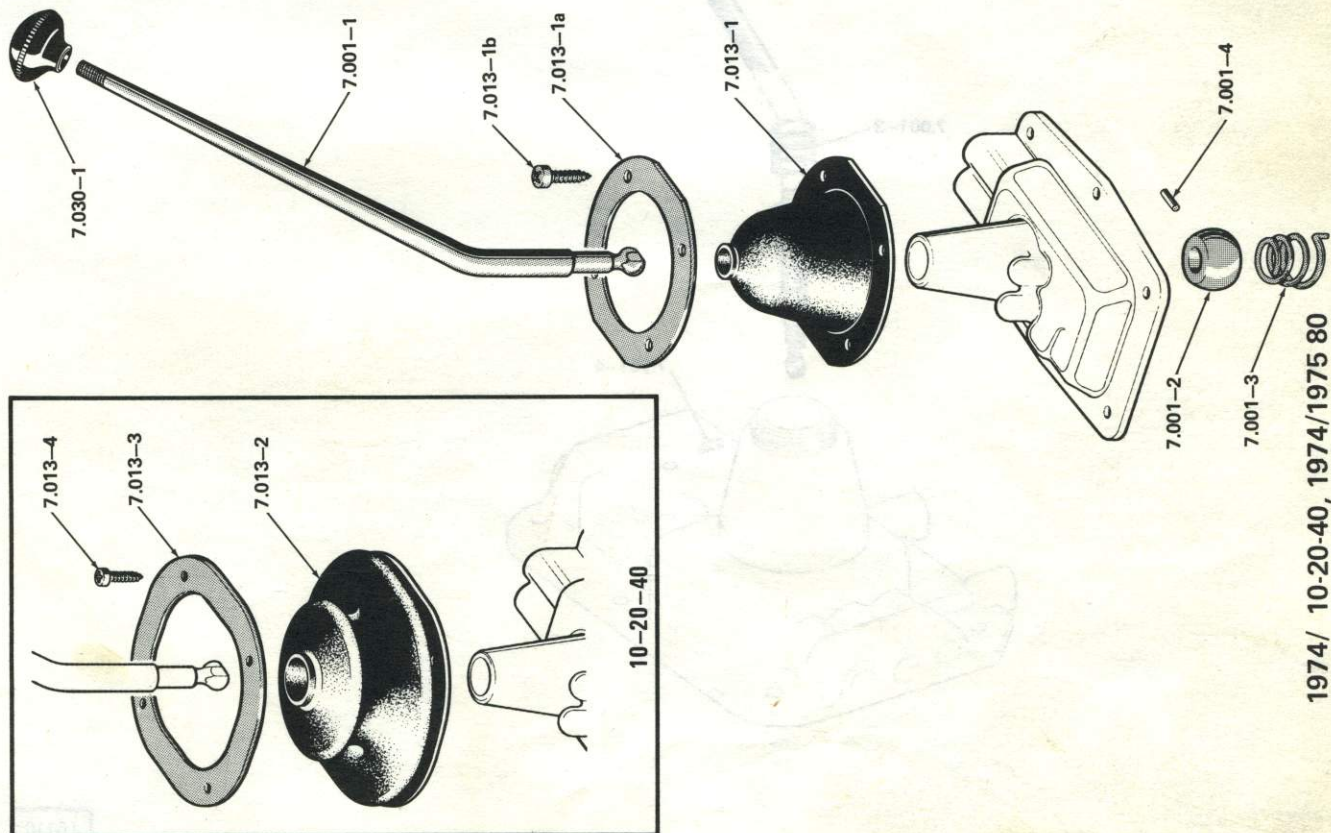

1974/ 10-20-40, 1974/1975 80


TRANSMISSION SHIFTING ... W3ST

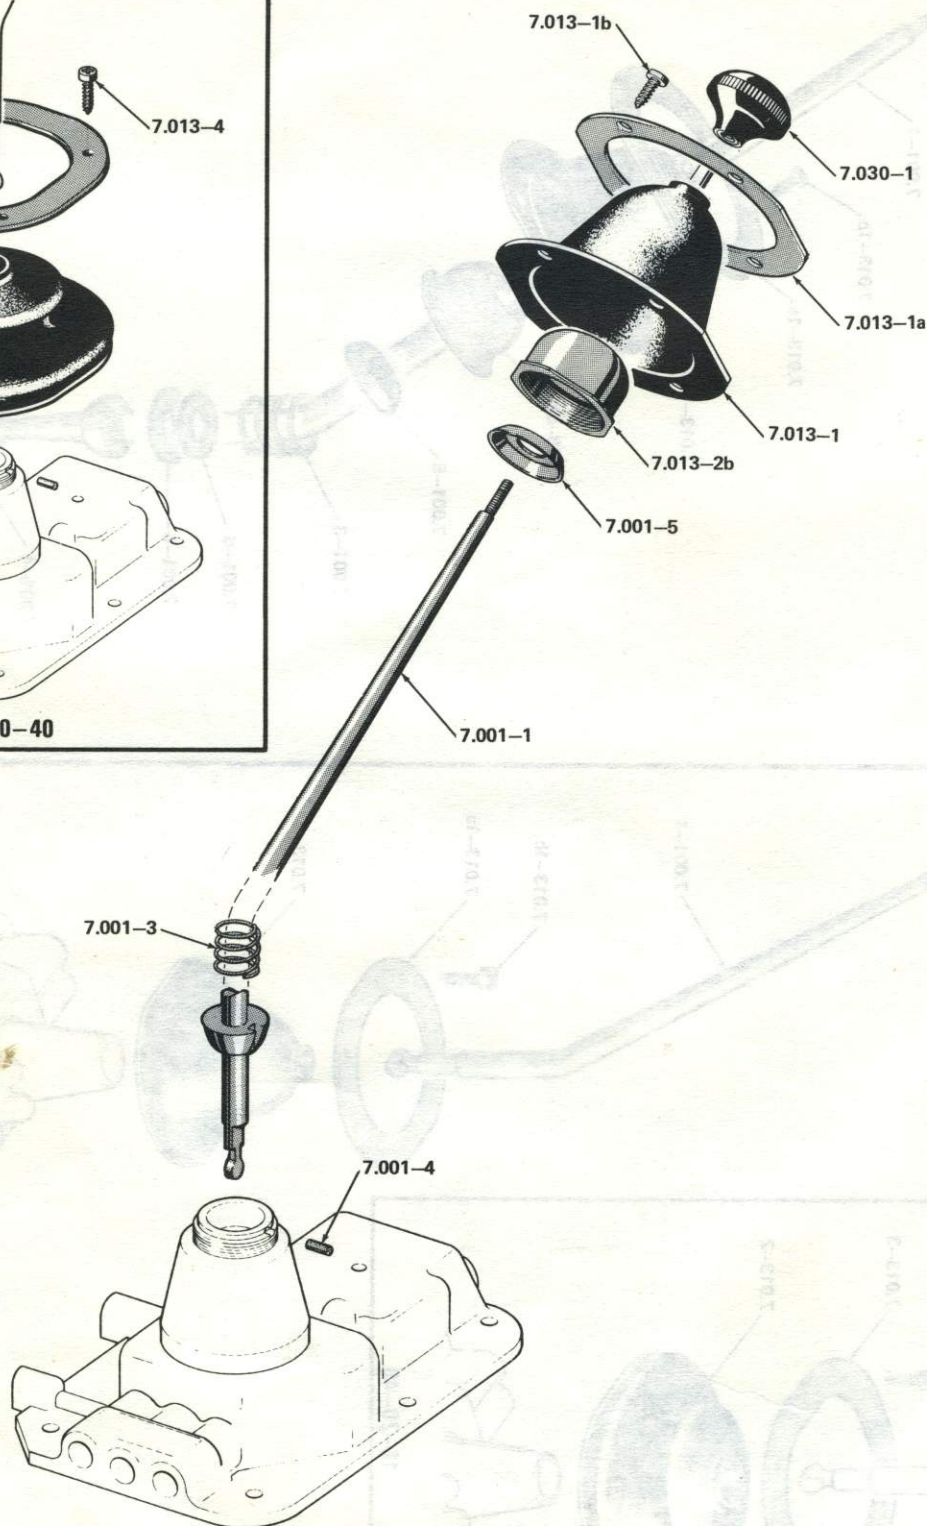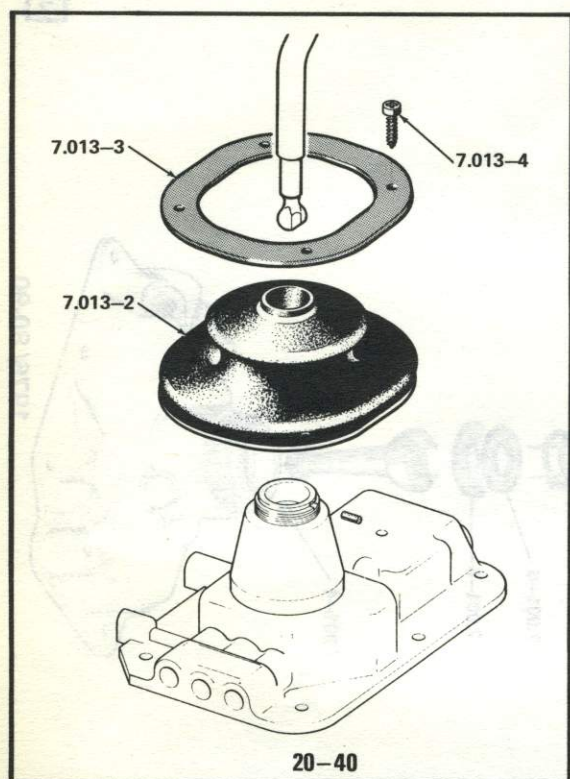

J-6110


TRANSMISSION SHIFTING ... W4ST (T18)

J-6280

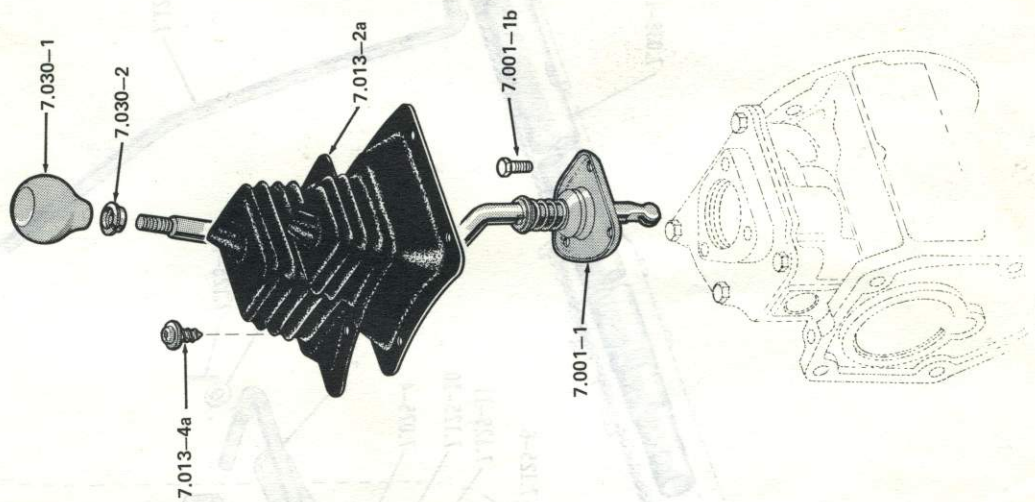


TRANSMISSION SHIFTING . . . W4ST (WARNER)

J-6281

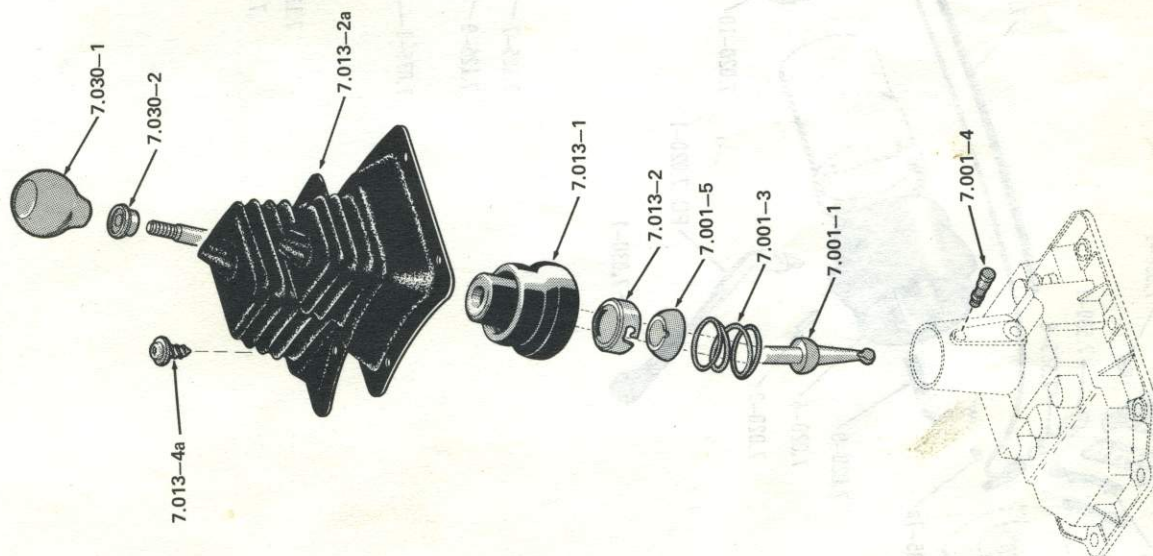


TRANSMISSION SHIFTING . . . W4ST (T-176)(T-178)

—5837

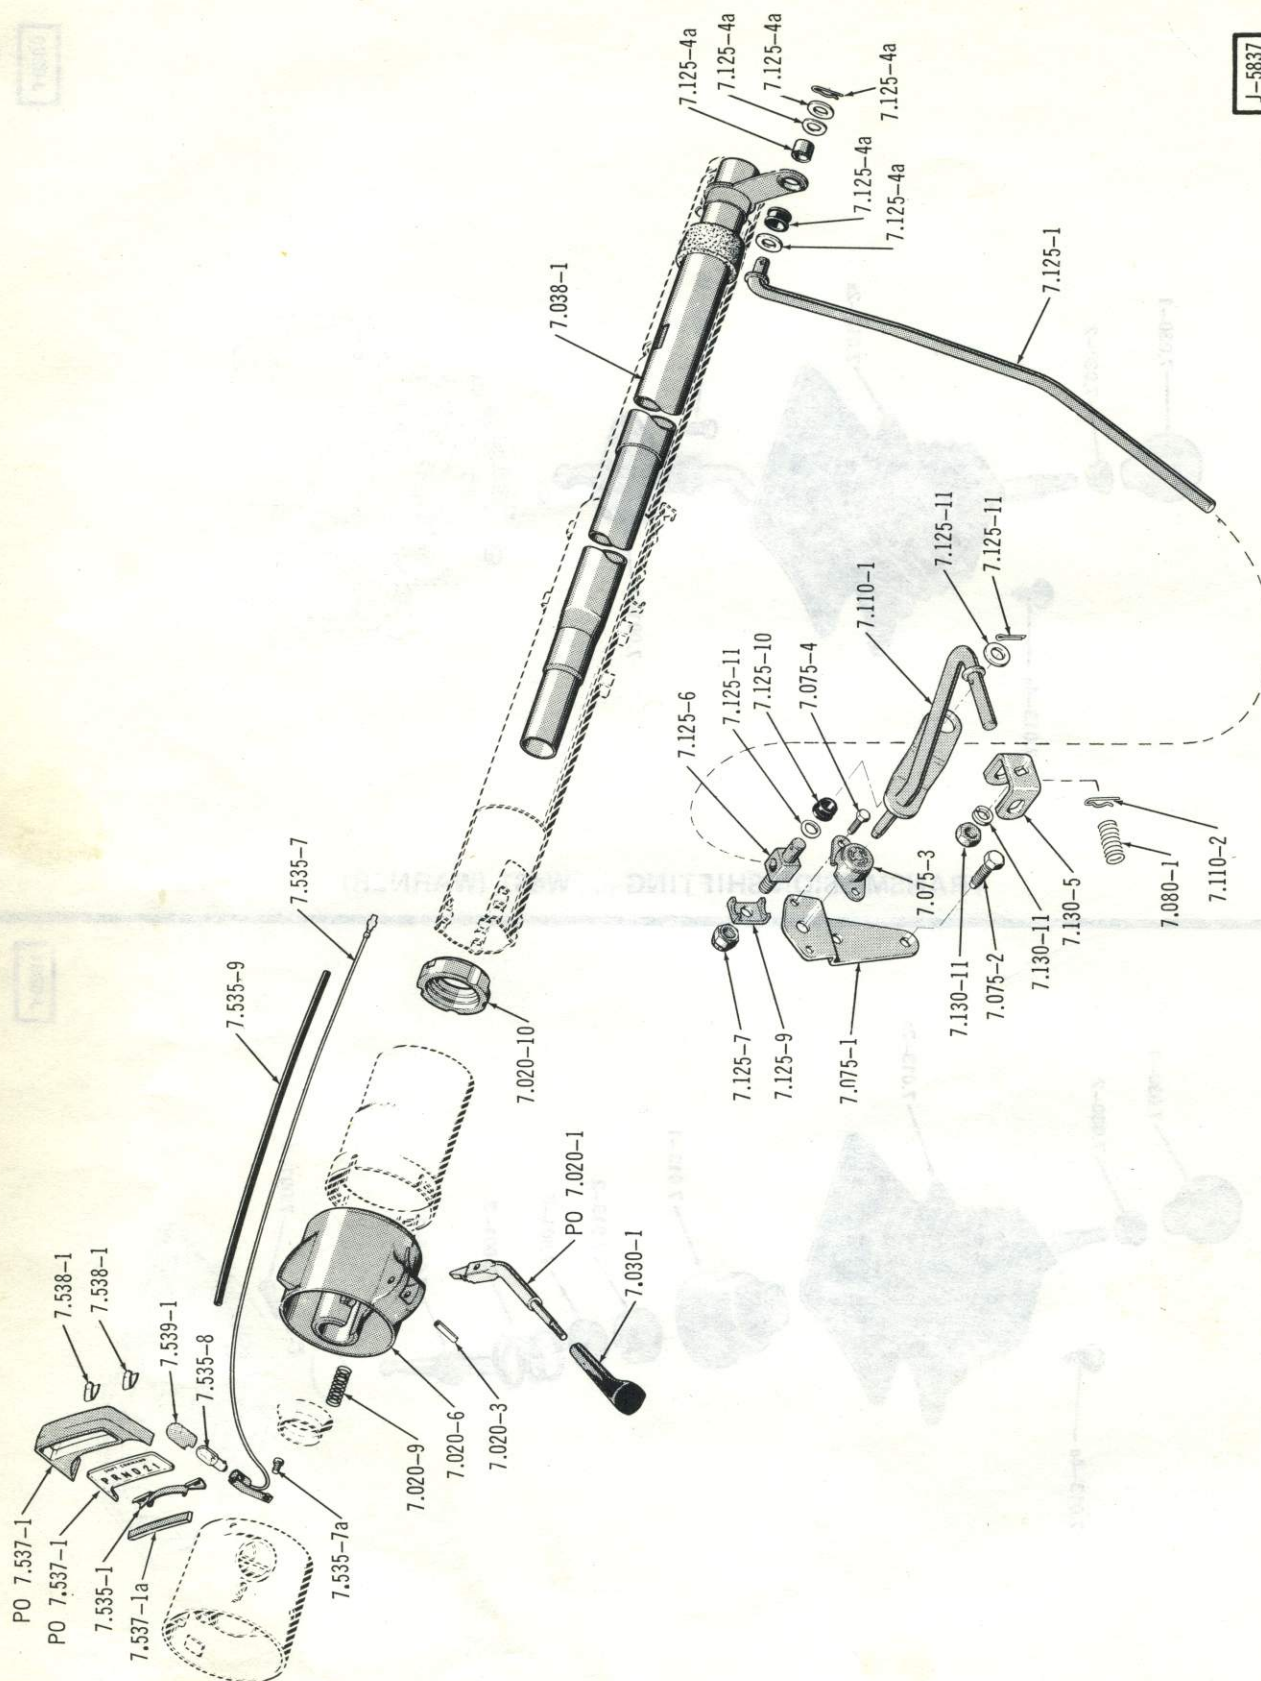

TRANSMISSION SHIFTING . . . 1974/1979 10-20-40 (SIX-WHT-WCGS)

J-6027

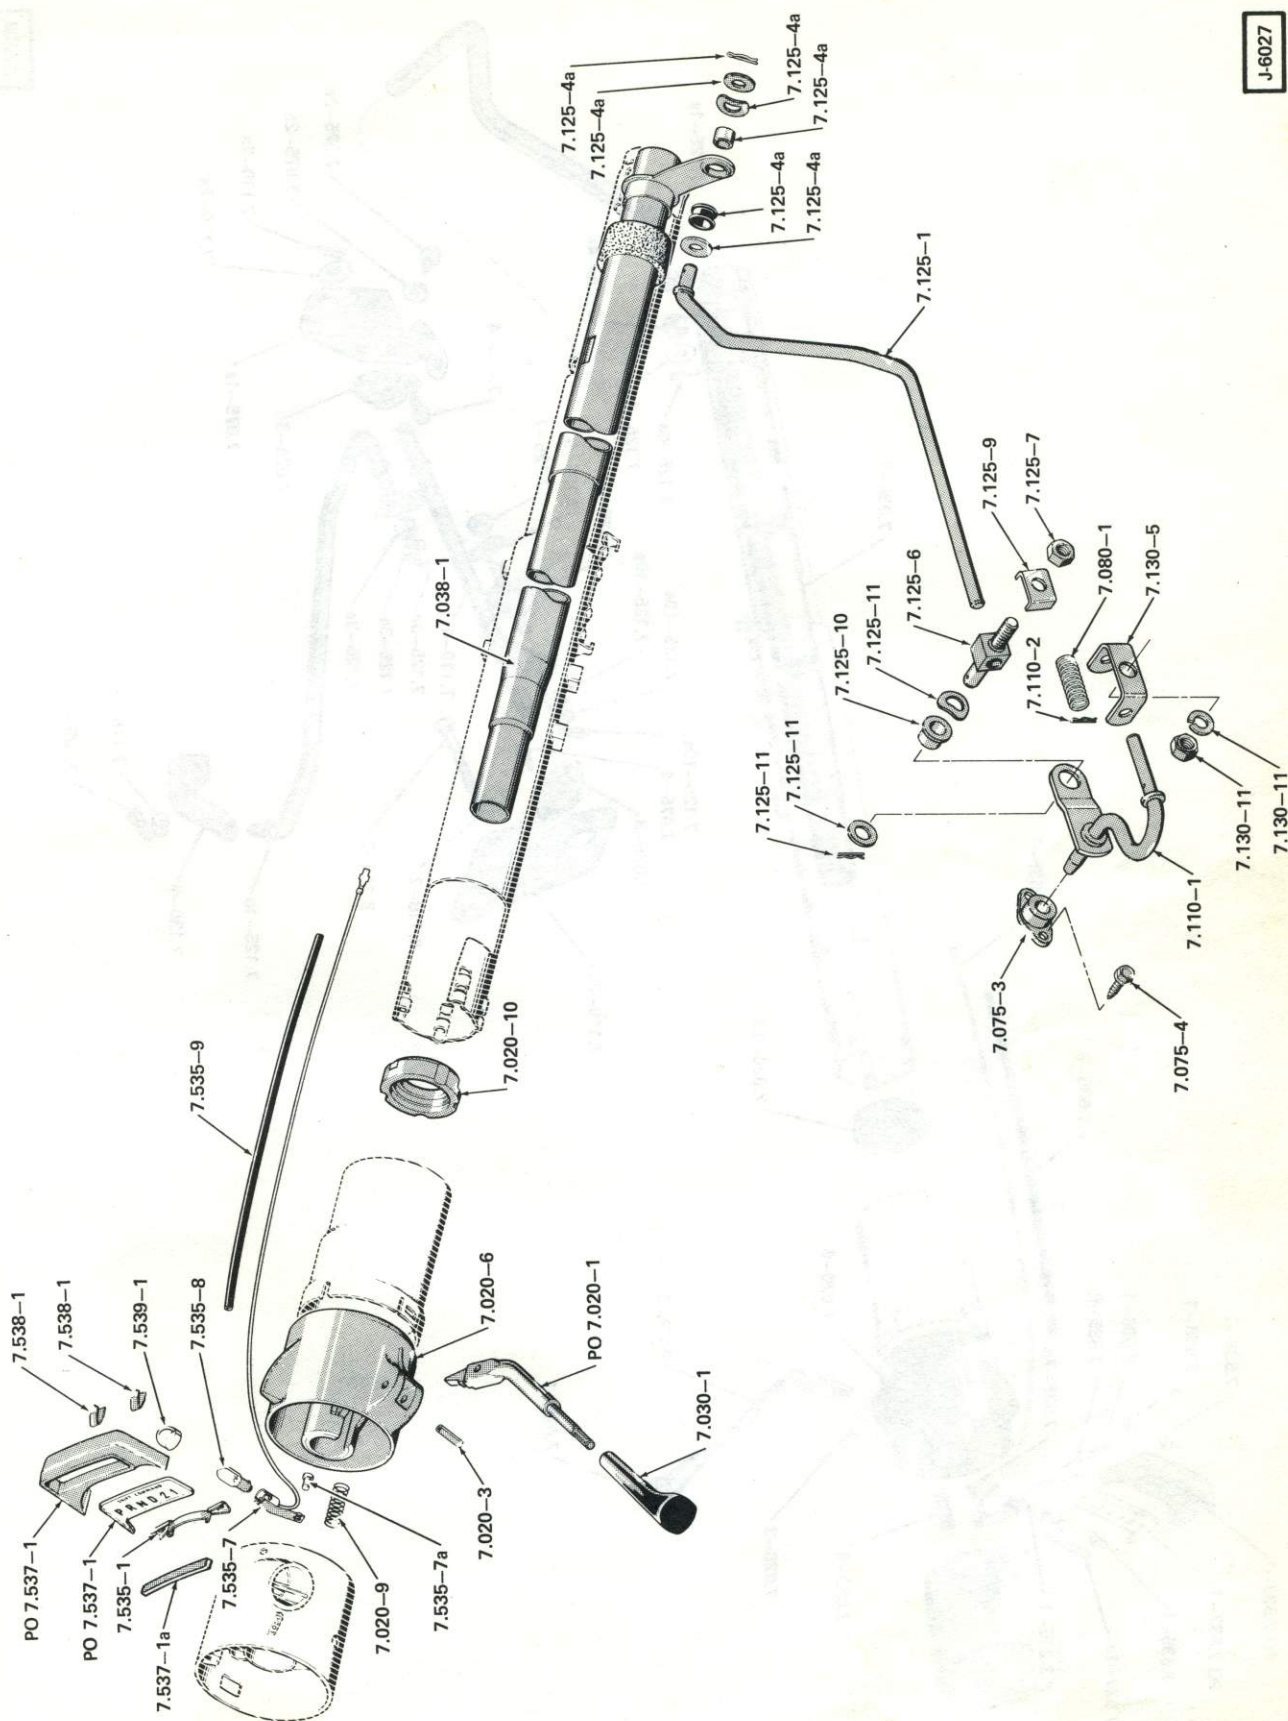

TRANSMISSION SHIFTING . . . 1976/1979 90 (WHT-LAW)

SPECIAL INFORMATION

The Engine Build Code Number, the Vehicle Identification Number and the information provided on the Trim Plate are often necessary when determining the proper replacement parts for your vehicle. For their location refer to the General Information Section found at the front of this catalog.

NOTES

- 7-1 The first type Shift Rod used is 16-7/8" overall length.
- 7-2 The second type Shift Rod used is 17-5/8" overall length.
- 7-3 The first type Shift Rod used is straight at Steering Column Attachment.
- 7-4 The second type Shift Rod used has an approximately 3-3/4" long offset at Steering Column Attachment.
- 7-5 This Knob shows the full Four Speeds: 1 - 2 - 3 - 4.
- 7-6 This Knob shows the full Four Speeds: L - 1 - 2 - 3.
- 7-7 Used with Transmission No. 536 0956 and 536 0957 (SR4).
- 7-8 Used with Transmission No. 535 9390 and 535 9391 (T176 or T178).
- 7-9 This Rod uses Swivel Block 536 0178 and has a 45 degree Angle at the Pin End.
- 7-10 This Rod uses Swivel Block 536 1924 and has a 90 degree Angle at the Pin End.

SHIFTING

7.013

GROUP NO. — DESCRIPTION — YEAR and MODEL	PAKS CODE	PRIMARY GROUP NO.	PER CAR	PART NO.	CODE
7.001-1 LEVER, Floor Gear Shift (Incl. Fulcrum And Pin)					
74/75 (T14A) 10-25-45			1	812 3032	
74/75 (T14A) 80			1	812 2131	
74 (T15A) 20-40 (Six)			1	991 093	
74/75 (T15A) 10-20-40 (V8)			1	812 3032	
74/75 (T15A) 80			1	812 1324	
76/77 10-20-40 (W3ST)			1	812 3032	
78/79 10-20-40 (W3ST)			1	535 8074	
74/77 10-20-40 (W4ST)			1	992 882	
78/79 10-20-40 (W4ST)			1	812 8779	
80 10-20-45			1	535 9837	
80 46			1	813 2660	
76/77 80-90 (W3ST)	(Use 535 6082)		1	812 6832	
78 80-90 (LHD-W3ST)	(Use 535 9315)		1	535 7723	
78 80-90 (RHD-W3ST)			1	535 6082	
74/76 80-90 (W4ST)			1	812 8787	
77 80-90 (W4ST)			1	812 8104	
78/79 80-90 (W4ST)			1	535 8100	
79 80-90			1	535 9315	
80 80-90 (* 7-7)			1	536 1262	
80 80-90 (* 7-8)			1	535 9835	
7.001-1b ATTACHING PARTS, Gear Shift Lever Assembly To Transmission					
SCREW, Machine..... 80 W4ST (* 7-7)			3	400 0987	
7.001-2 FULCRUM, Floor Gear Shift Lever (Ball)					
74/75 W3ST			1	642 761	
76/79 10-20-40 (W3ST)			1	642 761	
7.001-3 SPRING, Floor Gear Shift Lever Fulcrum					
74/75 W3ST			1	642 763	
76/79 10-20-40 (W3ST)			1	642 763	
76/79 80-90 (W3ST)			1	812 7059	
74/79 W4ST			1	801 732	
80 W4ST (* 7-8)			1	812 7059	
7.001-4 PIN, Floor Gear Shift Lever Fulcrum					
74/75 W3ST			1	642 762	
76/79 10-20-40 (W3ST)			1	642 762	
76/79 80-90 (W3ST)			2	812 6833	
74/79 W4ST			1	912 374	
80 W4ST (* 7-8)			2	813 2407	
7.001-5 RETAINER, Transmission Floor Gear Shift Lever Fulcrum Spring					
76 W3ST			1	912 379	
74/79 W4ST			1	912 379	
80 W4ST (* 7-8)			1	813 2420	
7.001-6 WASHERS, Shift Lever Fulcrum					
76/79 (Felt) 80-90 (W3ST)			1	400 5815	
76/79 (Steel) 80-90 (W3ST)			1	400 5816	
7.013-1 COVER, Floor Gear Shift Lever					
74/75 10-80 (LHD-W4ST)			1	948 185	
74/75 80 (W3ST)			1	907 107	
76/79 80-90			1	948 185	
80 W4ST (* 7-8)			1	813 2422	
7.013-1a RETAINER, Floor Gear Shift Lever Cover					
74/75 10-80 (LHD-W4ST)			1	948 146	
74/75 80 (W3ST)			1	649 890	
76/79 80-90			1	948 146	

7.013-1b ATTACHING PARTS, Retainer And Cover To Floor Pan							
SCREW, Tapping.....	74/75	10-80 (LHD-W4ST)	17.660	4	G161901		
SCREW, Tapping.....	74/75	80 (W3ST)	17.660	4	G161895		
SCREW, Tapping.....	76/79	80-90.....	12.128	4	400 3088		
NUT, Spring.....	75	10 (LHD-W4ST).....	20.005	4	979 975		
7.013-2 BOOT, Floor Gear Shift Lever							
76/78	(Berry) 10-20-40			1	545 9909		
74	(Black) 10.....	(Use 545 3643)		1	545 0267		
75/78	(Blue) 10-20-40 (LHD)			1	545 4789		
79	(Blue) 10-20-40.....			1	546 4174		
75/79	(Charcoal) 10-20-40 (LHD)			1	545 3643		
74	(Green) 10.....			1	545 0269		
75/76	(Green) 10-20-40 (LHD)			1	545 5539		
79	(Russet) 10-20-40.....			1	546 4175		
74	(Tan) 10			1	545 2587		
75/77	(Tan) 10-20-40			1	545 5540		
77/79	(Dark Desert Tan) 10-20-40			1	546 1712		
80	80-90 (W4ST)			1	575 2010		
7.013-2a BOOT, Transmission And Transfer Shift Lever							
80	10-20-40 (W4ST)	18.128		1	575 2011		
80	80-90 (W4ST)	18.128		1	575 2141		
7.013-2b CAP, Transmission Control Housing							
76/79	80-90 (W3ST)			1	812 7446		
74/79	W4ST			1	912 380		
80	W4ST (* 7-8)			1	813 2421		
7.013-2c GASKET, Transmission Cap Control Housing							
76/79	80-90 (W3ST)			1	812 6831		
7.013-3 RETAINER, Floor Gear Shift Lever Boot							
74/75	10-80.....			1	545 0203		
76/79	10-20-40.....			1	545 0203		
7.013-4 ATTACHING PARTS, Retainer To Floor Pan							
SCREW, Tapping.....	74	W3ST... (10-12 x 5/8")	4.131	3	973 467		
SCREW, Tapping.....	74/75	10-20-40 (WFGS)	17.660	4	G161903		
FASTENER (Plastic) ...	76/79	10-20-40.....	18.128	4	400 4919		
7.013-4a ATTACHING PARTS, Boot To Floor Pan							
SCREW, Washer Head... 80	10-20-40 (W4ST)			8	400 6633		
SCREW, Washer Head... 80	80-90 (W4ST)	29.052	AR		974 764		
7.020-1 LEVER, Column Gear Shift Upper							
74/79	WHT (LAW) ... (Incl. Knob)			1	535 1231		
74/79	WHT (WAW) ... (Incl. Knob)			1	535 2720		
80	WAT (LAW) ... (Incl. Knob)			1	321 6464		
80	WAT (WAW) ... (Incl. Knob)			1	321 8720		
7.020-2 ATTACHING PARTS, Upper Lever To Shaft							
PIN, Roll	74/75	10-20-40 (RHD)		1	930 868		
7.020-3 PIN, Column Gear Shift Upper Lever Pivot							
74/	(WHT)(WAT)			1	400 3925		
7.020-6 HOUSING, Column Gear Shift Upper Lever							
74/	LHD (WHT-WAW)(WAT-WAW)			1	319 6538		
76/	WHT (LAW)			1	448 9040		
7.020-7 PLATE, Column Gear Shift Upper Lever Housing Lock							
74/	LHD (WHT-WAW)(WAT-WAW)			1	448 7860		

SHIFTING

7.075

7.020-9 SPRING, Column Gear Shift Upper Lever Tension			
74/	LHD (WHT-WAW)(WAT-WAW)	1	812 0251
74/	10-20-40 (LHD-WHT-LAW)	1	448 7791
76/	90 (WHT-LAW)	1	448 7791
7.020-10 BEARING, Gear Shift Upper Lever Housing			
74/	10-20-40 (LHD-WHT-WCGS-LAW)(WAT-LAW)	1	448 7716
76/	90 (WHT-LAW)(WAT-LAW)	1	448 7716
7.020-11 BUSHING, Column Gear Shift Upper Lever			
74/75	10-20-40 (RHD)	1	941 100
7.020-12 WASHER, Gear Shift Upper Lever Housing			
74/	(Thrust) LHD (WHT-WAW)(WAT-WAW)	1	448 7872
74/	(Wave) LHD (WHT-WAW)(WAT-WAW)	1	448 7873
7.030-1 KNOB, Gear Shift Lever			
74/	(WHT-WCGS)(WAT-WCGS)	1	321 6462
74/75	W3ST	1	929 393
76/79	W3ST (Soft Feel)	1	535 6499
76	W3ST (Hard Feel)	1	535 5939
74/75	W4ST	1	934 392
76/77	W4ST	1	535 5940
78	W4ST (Reverse Position Up)	1	535 5940
78/79	W4ST (Reverse Position Down-Except Export-* 7-5)	1	535 8269
78/79	W4ST (Export-Reverse Position Down-* 7-6)	1	535 8554
80	FOUR (W4ST-* 7-7)	1	536 1402
80	10-20-45 (Except Four)	1	536 1405
80	46	1	536 1404
80	83-93 (* 7-8)	1	536 1405
80	93 (* 7-7)	1	536 1402
7.030-2 ATTACHING PARTS, Knob To Lever			
NUT, Jam	74/79 W4ST	17.410	1 G124925
NUT, Jam	80 46 (W4ST)	17.410	1 G124925
NUT, Special	80 W4ST		1 400 6495
7.038-1 SHAFT, Gear Shift Operating (Inner)			
74/79	10-20-40 (LHD-WHT-WCGS-LAW)	1	812 2435
74/79	LHD (WHT-WAW)	1	812 3430
76/79	90 (WHT-LAW)	1	812 2435
80	WAT (LAW)	1	448 9041
80	WAT (WAW)	1	448 9059
7.038-7 RING, Gear Shift Operating Shaft Retainer			
74/	LHD (WHT-WAW)(WAT-WAW)	1	448 7864
7.038-8 PLATE, Gear Shift Operating Shaft Stop			
74/79	LHD (WHT-WAW)	1	812 3429
80	WAT (LAW)	1	448 7799
80	WAT (WAW)	1	319 5616
7.038-9 ATTACHING PARTS, Plate To Steering Column			
SCREW, Tapping	74/ LAW	2	448 7801
SCREW, Tapping	74/ WAW	2	320 8210
7.075-1 BRACKET, Gear Shift Cross Shaft			
74/79	SIX (WHT-Except 90)	1	535 2592
74	V8 (WHT)	7.038	1 535 2148
75/76	V8 (WHT-Except 90)	1	535 4192
77	10-25-40 (WHT-* 7-1)	1	535 4192
77/79	10-25-40 (V8-WHT-* 7-2)	1	535 7736

7.075-1a BRACKET, Control Rod Pivot - Lower			
80	10-25-45 (Six)		1 536 0920
80	10-25-40 (V8)		1 536 0066
80	93 (WAT)		1 536 1052
7.075-2 ATTACHING PARTS, Bracket To Frame			
BOLT, Hexagon	74/79 WHT (Except 90)	17.670	2 G172463
7.075-2a ATTACHING PARTS, Selector Bellcrank Bracket To Transmission Front			
SCREW AND WASHER			
ASSEMBLY	80 WAT	5.054	2 400 6297
7.075-3 BEARING, Gear Shift Cross Shaft Bracket			
74/79	WHT		1 535 2589
80	WAT		2 535 2589
7.075-4 ATTACHING PARTS, Bearing To Cross Shaft Brackets And Frame			
BOLT, Hexagon	74/79 WHT... (1/4"-14 x 1/2")	17.670	2 G178434 NA
SCREW, Washer Head...	80 WAT	17.673	4 G9426241
7.080-1 SPRING, Cross Shaft Rattle			
78/79	10-25-40 (Six-WHT)		1 535 2991
78	10-25-40 (V8-WHT-* 7-1)		1 535 2991
78/79	10-25-40 (V8-WHT-* 7-2)		1 535 8541
74/77	WHT (Except 90)		1 535 2991
79	93		1 535 2991
7.110-1 BELLCRANK, Column Gear Shift			
74/79	SIX (WHT-Except 90)		1 535 2152
74	V8 (WHT)		1 535 2154
75/76	V8 (WHT-Except 90)		1 535 4190
77	10-25-40 (V8-WHT-* 7-1)		1 535 4190
77/79	10-25-40 (V8-WHT-* 7-2)		1 535 7735
76/79	90 (LHD-WHT)		1 535 3167
77/79	93 (RHD-WHT)		1 535 6402
80	10-25-45 (Six-WAT)		1 536 0925
80	10-25-45 (V8-WAT)		1 536 0071
80	93 (WAT)		1 536 1050
7.110-2 ATTACHING PARTS, Bellcrank To Transmission Lever			
PIN, Self-Locking	74/79 WHT	29.140	1 400 0407
7.110-2a ATTACHING PARTS, Bellcrank End To Transmission Bracket			
WASHER, Plain	80 WHT	17.820	1 G120388
PIN, Hitch	80 WHT		1 400 6486
7.110-2b PLATE, Selector Rod Pivot To Frame			
80	93 (WAT)		1 536 1053
7.110-2c BRACKET, Bellcrank To Frame Side Rail			
80	10-20-40 (WAT)		1 536 0117
7.110-2d ATTACHING PARTS, Bracket To Side Rail			
SCREW, Hexagon Head .	80 10-20-40 (WAT)	17.671	2 G9424824
7.110-3 BUSHING, Bellcrank Shaft			
77/79	93 (RHD-WHT)		2 535 6400
7.110-4 ATTACHING PARTS, Bellcrank Assembly To Support Bracket			
WASHER, Plain	77/79 93 (RHD-WHT)		1 400 3808
NUT, Hexagon	77/79 93 (RHD-WHT)	17.412	1 G271190

7.112-1	BRACKET ASSEMBLY. Bellcrank Support				
	77/79	93 (RHD-WHT)		1	535 6406
7.112-2	REINFORCEMENT. Plate Assembly				
	77/79	93 (RHD-WHT)		1	535 6403
7.112-3	ATTACHING PARTS. Reinforcement Plate To Bellcrank Support				
	NUT, Hexagon	77/79 93 (RHD-WHT)	3.303	4	400 1457
7.115-1	LEVER. Bellcrank				
	77/79	93 (RHD-WHT)		1	535 6413
7.115-2	ATTACHING PARTS. Lever To Column Shift Lever				
	BOLT AND WASHER	77/78 93 (RHD-WHT)...(1/4"-20)	20.115	1	400 5483
	BOLT, Shoulder	79 93 (RHD-WAT)...(5/16"-18)	23.006	1	957 717
	WASHER, Plain	77/78 93 (RHD-WHT)	7.125	1	943 961
	WASHER, Spring	79 93 (RHD-WAT)	23.006	1	958 649
	NUT, Hexagon	77/78 93 (RHD-WHT)...(1/4"-20)		1	400 5145
	NUT, Hexagon	79 93 (RHD-WAT)...(5/16"-18)	3.303	1	400 1457
	GROMMET	77/79 93 (RHD-WHT)		1	400 5687
7.115-3	ATTACHING PARTS. Connecting Link To Lever				
	BUSHING	77/79 93 (RHD-WHT)		1	318 7696
	PIN, Self-Locking	77/79 93 (RHD-WHT)	29.140	1	400 0407
	WASHER, Plain	77/79 93 (RHD-WHT)		2	943 961
	WASHER, Spring	77/79 93 (RHD-WHT)		1	815 535
7.125-1	ROD, Hydramatic Transmission Gear Shift				
	74/76	SIX (Except 90)		1	535 2146
	74	V8		1	535 2147
	75	10 (V8)		1	535 4193
	77	10-25-45 (Six-WHT-* 7-3)		1	535 2146
	77/79	10-25-45 (Six-WHT-* 7-4)		1	535 7474
	76/77	10-20-40 (V8-* 7-1)		1	535 5239
	77/79	10-25-45 (V8-WHT-* 7-2)		1	535 7475
	75	20-40 (V8)		1	535 5239
	76/79	90 (WHT)		1	535 3170
7.125-1a	ROD, Automatic Gear Selector Column To Bellcrank				
	80	10 (WAT)		1	536 0067
	80	20-40 (WAT)		1	536 0068
	80	93 (WAT-Used With Swivel Block 536 0178-* 7-9)		1	536 1049
	80	93 (WAT-Used With Swivel Block 536 1924-* 7-10)		1	536 1925
7.125-1b	ROD, Automatic Transmission To Bellcrank				
	80	10-25-45 (Six)		1	536 0902
	80	10-25-40 (V8)		1	536 0069
	80	93 (WAT)		1	536 1054
7.125-1c	ATTACHING PARTS. Rod To Transmission Lever				
	BUSHING	80 93 (WAT)	16.501	1	321 7256
	PIN, Hitch	80 93 (WAT)	16.503	1	400 5122
	WASHER, Plain	80 93 (WAT)	17.814	1	400 1085
7.125-2	CONNECTING LINK. Bellcrank To Column				
	77/79	93 (RHD-WHT)		1	535 6408
7.125-3	ATTACHING PARTS. Connecting Link To Bellcrank Assembly				
	BUSHING	77/79 93 (RHD-WHT)		1	318 7696
	GROMMET	77/79 93 (RHD-WHT)		1	318 7697
	PIN, Self-Locking	77/79 93 (RHD-WHT)	29.140	1	400 0407
	WASHER, Plain	77/79 93 (RHD-WHT)		2	943 961
	WASHER, Spring	77/79 93 (RHD-WHT)		1	815 535

7.125-3a ATTACHING PARTS, Transmission Rod To Bellcrank

GROMMET	80	WAT.....	7.110	1	321 2549
PIN, Hitch	80	WAT.....	23.406	1	400 4295
WASHER	80	WAT	17.814	1	400 1091

7.125-4a ATTACHING PARTS, Transmission Gear Shift Rod To Column

BUSHING	74/79	WHT.....		1	318 7696
GROMMET	74/79	WHT.....		1	318 7697
GROMMET	80	WAT.....		1	319 4672
WASHER, Plain.....	74/79	WHT.....		2	943 961
WASHER, Plain.....	80	WAT.....	17.814	1	400 1102
WASHER, Spring.....	74/79	WHT.....		1	815 535
PIN, Self-Locking.....	74/79	WHT.....	29.140	1	400 0407
PIN, Hitch	80	WAT.....		1	400 6486

7.125-6 TRUNNION, Gear Shift Rod

74/79	WHT.....		1	947 629
80	WAT (Except 93)		1	536 0178
80	93 (WAT-Used With Rod 536 1049)....(.310 Hole End).....		1	536 0178
80	93 (WAT-Used With Rod 536 1925)....(.375 Hole End).....		1	536 1924

7.125-7 ATTACHING PARTS, Trunnion To Shift Rod

NUT, Hexagon	74	WHT.....	17.416	1	G442826
NUT, Lock.....	75/	(WHT)(WAT)	17.416	1	G9416531

7.125-9 CLIP, Gear Shift Rod Trunnion Retaining

74/79	WHT.....		1	948 180
80	WAT.....		1	948 180

7.125-10 INSULATOR, Gear Shift Lever Trunnion To Bellcrank

74/79	WHT.....	(Use 315 7677)	18.125	1	931 503
-------	----------	----------------	--------	---	---------

7.125-10a ATTACHING PARTS, Shift Rod To Bellcrank

GROMMET	80	WAT.....		1	321 2549
PIN, Hitch	80	WAT.....	23.406	1	400 4295
WASHER	80	WAT.....	17.814	1	400 1091

7.125-11 ATTACHING PARTS, Trunnion To Bellcrank

WASHER, Plain.....	74/79	WHT.....	17.814	1	G120394
WASHER, Spring.....	74/79	WHT.....		1	815 535
PIN, Cotter	74/79	WHT.....	17.460	1	G137159
PIN, Self-Locking.....	77/79	WHT.....	29.140	1	400 0407
NUT.....	77/79	WHT.....	7.130	1	G11500424

7.130-5 LEVER, Transmission Gear Shift (On Transmission)

74/79	WHT.....		1	535 2156
80	WAT.....		1	536 0152

7.130-11 ATTACHING PARTS, Range Lever To Transmission Shaft

WASHER, Lock	74/79		17.820	1	G120382
NUT, Jam.....	74/76		17.410	1	G124829
NUT.....	77/79	90.....	7.130	1	G11500424

7.535-1 BRACKET, Gear Selector Dial Lamp (Incl. Hood)

74/	(WHT-WCGS-LAW)(WAT-WCGS)	7.039	1	319 6505
-----	--------------------------------	-------	---	----------

7.535-2 HOOD, Gear Selector (Incl. Filter)

74/75	WHT (WAW)	1	318 7833
76/	10-20-40-90 (WAT-LAW)	1	319 6504
76	10-20-40 (WAT-WAW)	1	535 5991
77/	10-20-40-90 (WAT-WAW)	1	535 5991

7.535-7 SOCKET, Gear Selector Dial Lamp

74/	LHD (WHT-WAW)(WAT-WAW)	1	448 7846
74/	10-20-40 (LHD-WHT-WCGS-LAW)(WAT-LAW)	1	448 7785
76/	90 (WHT-LAW)(WAT-LAW)	1	448 7785

7.535-7a ATTACHING PARTS, Socket To Housing

SCREW, Tapping	74/79	10-20-40 (WHT-WCGS)	1	448 8307
SCREW, Tapping	76/79	90 (WHT)	1	448 8307

7.535-8 BULB, Gear Selector Dial Lamp

74/	(WHT-WCGS-WAW)(WAT-WAW)	3.215	1	320 4552
76/	10-20-40-90 (WHT-LAW)(WAT-LAW)		1	345 1933

7.535-9 PROTECTOR, Gear Selector Dial Lamp Wire

74/	10-20-40 (LHD-WHT-WCGS-LAW)(WAT-LAW)	3.321	1	448 7742
76/	90 (WHT-LAW)(WAT-WAW)	3.321	1	448 7742

7.535-10 RETAINER, Gear Selector Dial Lamp Lens

74/	10-20-40 (LHD-WHT-WAW)(WAT-WAW)		1	448 7852
-----	---------------------------------------	-------	---	----------

7.536-1 POINTER, Gear Selector Dial

74/	(WHT-LAW)(WAT-LAW)		1	321 5679
74/	(WHT-WAW)(WAT-WAW)		1	319 6688

7.537-1 DIAL, Gear Selector Pointer (WHT-WCGS)**10-20-40 (LAW)**

74	...(Less Bezel)		1	535 1187
76	(Berry-Used Less Seal)...(Incl. Bezel)	(Use 535 6992)	1	535 6450
76/78	(Berry-Used With Seal)...(Incl. Bezel)		1	535 6992
74/75	(Black)...(Incl. Bezel)		1	535 1295
76	(Black-Used Less Seal)...(Incl. Bezel)	(Use 535 5990)	1	535 5992
76/79	(Black-Used With Seal)...(Incl. Bezel)		1	535 6990
80	(Black)		1	536 1282
75	(Blue)...(Incl. Bezel)		1	535 4090
76	(Blue-Used Less Seal)...(Incl. Bezel)	(Use 535 6991)	1	535 5994
76/78	(Blue-Used With Seal) ... (Incl. Bezel)		1	535 6991
79	(Blue)		1	535 8753
80	(Blue)		1	536 1283
74	(Buff)...(Incl. Bezel)		1	535 1297
74	(Cinnamon)...(Incl. Bezel)		1	535 4030
74	(Green)...(Incl. Bezel)		1	535 1296
75	(Green)...(Incl. Bezel)		1	535 4089
76	(Green-Used Less Seal)...(Incl. Bezel)	(Use 535 6994)	1	535 5993
76	(Green-Used With Seal) ... (Incl. Bezel)		1	535 6994
79	(Russet)		1	535 8752
80	(Russet)		1	536 1284
74/75	(Tan)...(Incl. Bezel)		1	535 4091
76	(Tan-Used Less Seal)...(Incl. Bezel)		1	535 5995
76/77	(Tan-Used With Seal)...(Incl. Bezel)		1	535 6993
78/79	(Desert Tan-Used With Seal)...(Incl. Bezel)		1	535 7636
80	(Tan)		1	536 1285

10-20-40 (WAW)

74	...(Less Bezel)	1	535 2643
76	(Berry-Used Less Seal)...(Incl. Bezel)	1	535 6451
76/78	(Berry-Used With Seal)...(Incl. Bezel)	1	535 6997
74/76	(Black-Used Less Seal)...(Incl. Bezel) (Use 535 6995)	1	535 2722
76/79	(Black-Used With Seal) ...(Incl. Bezel)	1	535 6995
80	(Black)	1	536 1286
75/76	(Blue-Used Less Seal)...(Incl. Bezel) (Use 535 6996)	1	535 4093
76/78	(Blue-Used With Seal)...(Incl. Bezel)	1	535 6996
79	(Blue)	1	535 8751
80	(Blue)	1	536 1287
74	(Buff)...(Incl. Bezel)	1	535 2723
74	(Cinnamon)...(Incl. Bezel)	1	535 4031
74	(Green)...(Incl. Bezel)	1	535 2724
75/77	(Green-Used Less Seal) ...(Incl. Bezel)	1	535 4092
76	(Green-Used With Seal)...(Incl. Bezel)	1	535 6999
79	(Russet)	1	535 8750
80	(Russet)	1	536 1288
74/76	(Tan-Used Less Seal) ...(Incl. Bezel)	1	535 4094
76/77	(Tan-Used With Seal)...(Incl. Bezel)	1	535 6998
78/79	(Desert Tan-Used With Seal)...(Incl. Bezel)	1	535 7637
80	(Tan)	1	536 1289
90			
76	(Black) LAW...(Incl. Bezel) (Use 535 5990)	1	535 5992
77/79	(Black) LAW (Used With Seal)...(Incl. Bezel)	1	535 6990
80	(Black) LAW	1	536 1282
77/79	(Black) WAW (Used With Seal)...(Incl. Bezel)	1	535 6995
80	(Black) WAW	1	536 1286

7.537-1a SEAL, Gear Selector Bezel On Column Housing

76/	WHT (WCGS)	1	323 0056
-----	------------------	---	----------

7.537-2 ATTACHING PARTS, Dial To Directional Signal Switch Housing

CLIP, Spring	74/	(WHT-WAW)(WAT-WAW)	2	319 6686
--------------------	-----	--------------------------	---	----------

7.538-1 SPRING, Gear Selector Dial Housing

74/	(WHT-WCGS)(WAT-WCGS)	2	319 6503
-----	----------------------------	---	----------

7.539-1 HOOD, Gear Selector Dial Lamp

74/	WHT (LAW)	7.535	1	319 6504
74/	WHT (WAW)	7.535	1	319 6687